


Homestyle Dryer

Refer to Page 3 for Model Numbers



D281P_506054

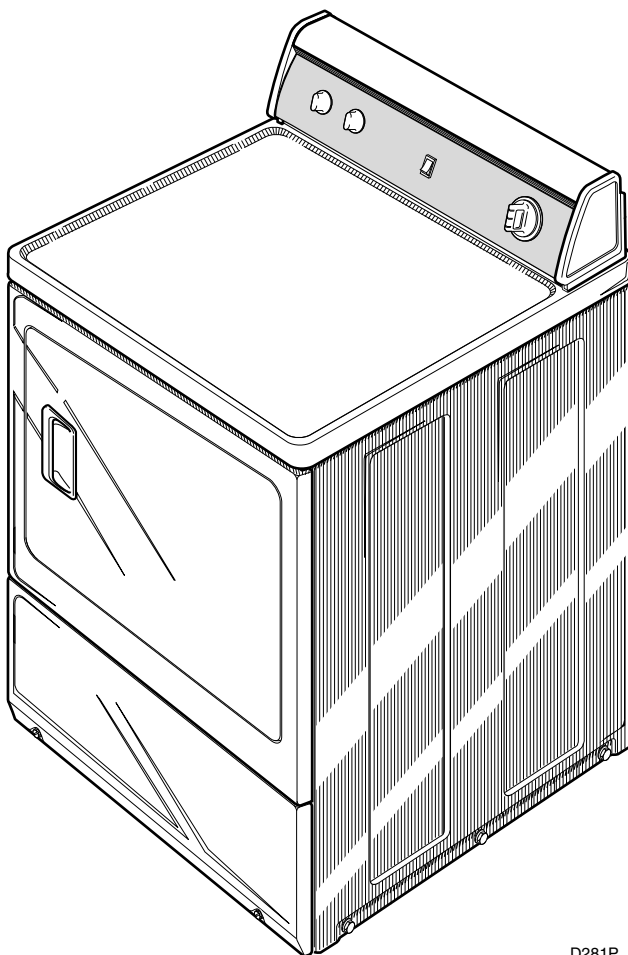

&



www.partsking.com

Part No. 506054R13
January 2012

Table of Contents

Title	Page
Parts Ordering Information.....	2
Nameplate Location	2
Model Identification	3
Graphic Panel - Rear Control Models	4
Control Panel and Knobs - Rear Control Models.....	6
Controls - Rear Control Models	8
Control Cabinet - Front Control Models	10
Control Panel and Controls - Front Control.....	12
Control Cabinet and Controls.....	14
Cabinet Top and Control Hood Rear Panel - Rear Control Models	16
Loading Door (Drawing 1 of 2).....	18
Loading Door (Drawing 2 of 2).....	20
Access Panel, Front Panel and Seal	22
Motor, Exhaust Fan and Belt (Drawing 1 of 2).....	24
Motor, Exhaust Fan and Belt (Drawing 2 of 2).....	26
Thermostat.....	28
Front Bulkhead, Seal and Air Duct - Without Light	30
Front Bulkhead, Seal and Air Duct - With Light	32
Cylinder, Baffles and Drying Rack	34
Rear Bulkhead, Felt Seal and Cylinder Roller - 1 Phase Models.....	36
Terminal Block - 1 Phase Models	38
Rear Bulkhead, Felt Seal, Cylinder Roller and Terminal Block - 3 Phase Models.....	40
Heater Duct and Element Assembly - 1 Phase Models	42
Heater Kit Assembly - 1 Phase Models	44
Heater Duct and Element Assembly - 3 Phase Models	46
Heater Duct Assembly	48
Gas Valve and Igniter	50
Gas Conversion Kits	52
Gas Valve, Igniter, Ignition Control and Gas Conversion Kits.....	54
Cabinet, Exhaust Duct and Base	56
Power Cord	58
Strain Relief	60
Terminal Block and Terminals	62
Terminals	64
Motor Connection Block, Terminal Extractor Tools.....	66
Wire Harnesses and Wires - Front Control Models.....	68
Wire Harnesses and Wires - Rear Control Models	70
Parts Index.....	73

© Copyright 2012, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Parts Ordering Information

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.


For technical assistance, call either of the numbers listed below:

(920) 748-3121 Ripon, Wisconsin

+32 56 41 20 54 Wevelgem, Belgium

Nameplate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on nameplate(s) as shown.

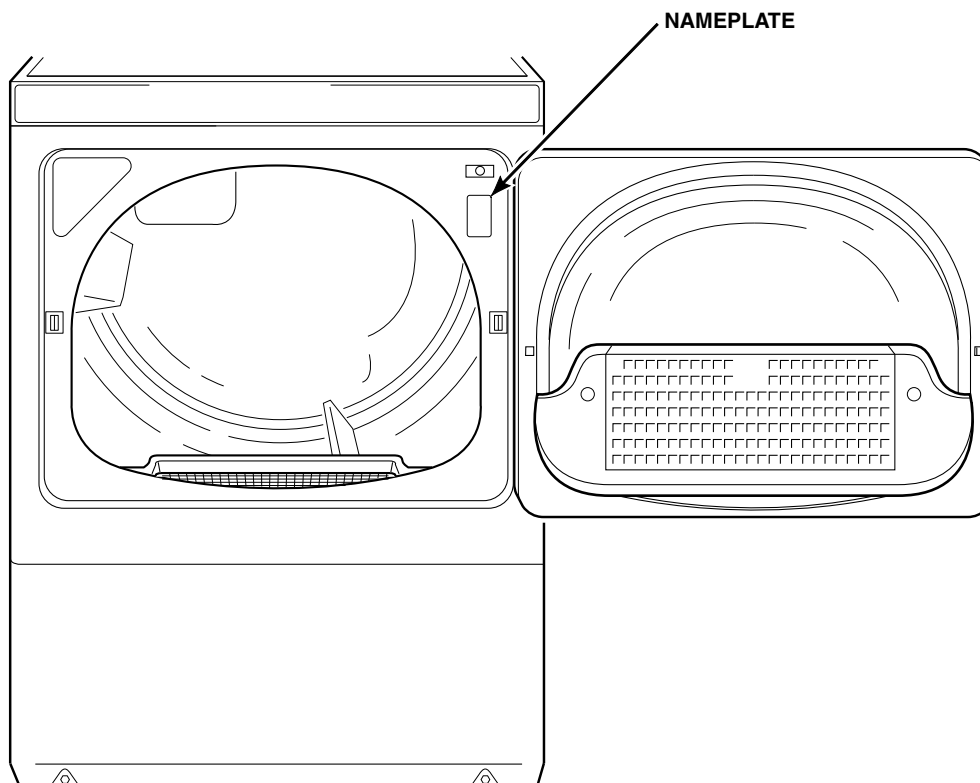

D412P_506054

Model Identification


Information in this manual is applicable to these dryer models:

ADE3TFWS431AW01	LDE3TRWS331TW05	LEZ27A*F1702	LGS38A*M3013
ADE3TRWS431AW01	LDG3TRWS111TW05	LEZ27A*G3018	LGS38A*M3020
ADE3TRWS431NW22	LEB07A*F1709	LEZ27A*G4018	LGS40A*M3020
ADE32FSS431AN01	LED17A*F1700	LEZ37A*F1702	LGT57A*F1100
ADE32FSS431NN22	LEG37A*F4350	LEZ37A*F3000	LGT68A*F1100
ADE32FSS541RN01	LEH37A*F3300	LEZ37A*G3018	LGY47A*F1109
ADE41FSS171TN03	LEK37A*F4350	LEZ37A*G4018	LGZ27A*F1102
ADG3TFWS301AW01	LEN27A*G3008	LEZ37A*G5618	LGZ27A*M3013
ADG3TRWS301AW01	LEN27A*G3018	LEZ57A*F1702	LGZ37A*F1102
ADG32FSS301AN01	LEN27A*G4008	LEZ67A*F1702	LGZ37A*F3000
ADG41FSS111TN03	LEN27A*G4018	LGG37A*F3058	LGZ37A*G3013
AEZ17A*F1702	LEN27A*G99M3	LGH37A*F1182	LGZ37A*M3013
AEZ28A*F1702	LEN37A*G3018	LGH37A*F5423	LGZ57A*F1102
AEZ68A*F1702	LEN37A*G4018	LGK37A*F3058	LGZ67A*F1102
AGZ17A*F1102	LES17A*F3000	LGK37A*F3060	MDE3TRWS331TW06
AGZ28A*F1102	LES17A*F3007	LGN27A*M3008	MDG3TRWS111TW06
AGZ68A*F1102	LES17A*F3022	LGN27A*M3013	ZDE30RGS171CW01
BDE30FGS171CW01	LES17A*F4500	LGN37A*M3013	ZDE3LRGS171CW01
BDG30FGS111CW01	LES17A*M4588	LGS17A*F3020	ZDE41FSS171CN01
CDE3LRGS171CW01	LES27A*G3018	LGS17A*F3081	ZDE4BFGS171CW01
CDE4BFGS171CW01	LES27A*G4000	LGS17A*K1180	ZDE4BRGS171CW01
CDG3LRGS111CW01	LES27A*G4500	LGS17A*M3020	ZDG30RGS111CW01
CDG4BFGS111CW01	LES27A*G4518	LGS17A*M3082	ZDG3LRGS111CW01
CEZ68A*F1702	LES27A*G4018	LGS27A*M3013	ZDG41FSS111CN01
CGZ68A*F1102	LES28A*G4018	LGS27A*M3080	ZDG4BFGS111CW01
FDE3TRGS401NW22	LES33A*F4562	LGS37A*F3000	ZDG4BRGS111CW01
FEN16A*G4018	LES37A*F3000	LGS37A*F3022	
FEN17A*G3018	LES37A*F3028	LGS37A*F3028	
FEN17A*G4018	LES37A*F3300	LGS37A*F3058	
FES16A*G4018	LES37A*F3327	LGS37A*F3060	
FES17A*F3300	LES37A*F4350	LGS37A*F3080	
FES17A*F4350	LES37A*F5412	LGS37A*F5412	
FEU17A*F1702	LES37A*G3018	LGS37A*F5423	
FEZ17A*F1702	LES37A*G4018	LGS37A*G3013	
FGN16A*M3013	LET57A*F1700	LGS37A*G3080	
FGN17A*M3013	LET67A*F1700	LGS37A*M3013	
FGS17A*F3060	LET68A*F1700	LGS37A*M3080	
FGZ17A*F1102	LEY47A*F1709		

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Graphic Panel - Rear Control Models

All Models Except ADE3TFWS431AW01, ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG3TFWS301AW01, ADG32FSS301AN01, ADG41FSS111TN03, BDE30FGS171CW01, BDG30FGS111CW01, CDE4BFGS171CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060, FGZ17A*F1102, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDG41FSS111CN01 and ZDG4BFGS111CW01

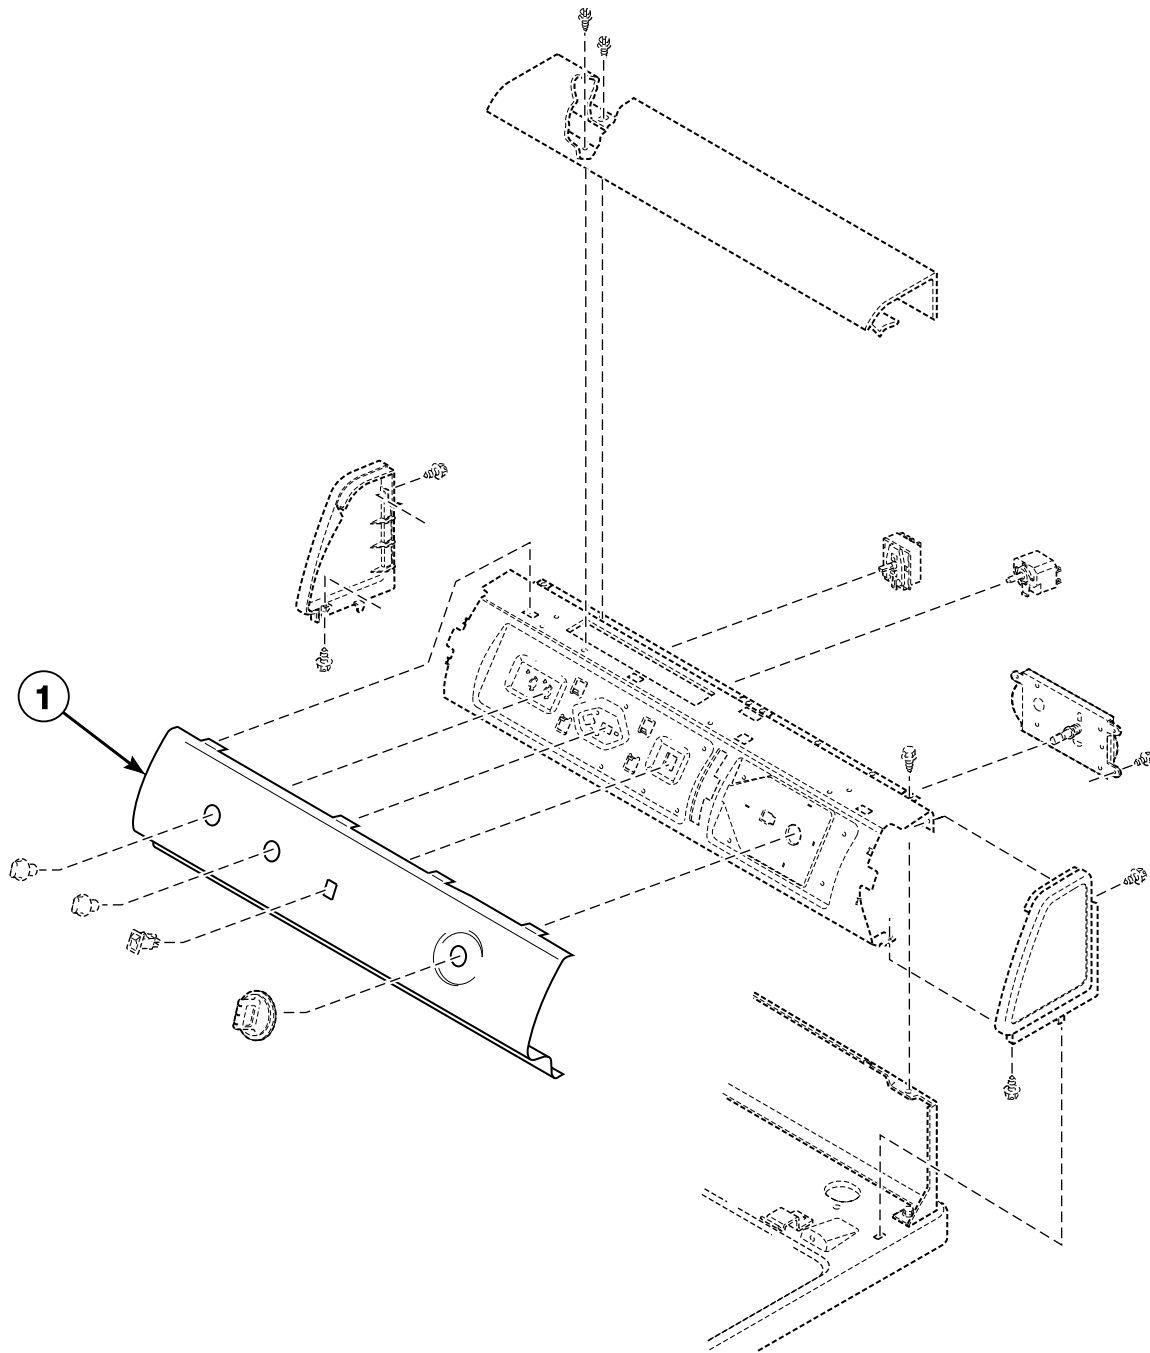

DRY1868P_506054


Graphic Panel - Rear Control Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	503394	Graphic Panel	Model LES33A*F4562
	504020W	Graphic Panel	Models LES37A*F3000, LES37A*F3300, LES37A*F3327, LES37A*F4350, LES37A*F5412, LGS37A*F3000, LGS37A*F3022, LGS37A*F3058, LGS37A*F3060, LGS37A*F3080, LGS37A*F5412 and LGS37A*F5423
	504072WP	Graphic Panel	White; Models LEZ37A*F3000 and LGZ37A*F3000
	504072QP	Graphic Panel	Bisque; Models LEZ37A*F3000 and LGZ37A*F3000
	504107W	Graphic Panel	Models LEZ27A*G3018, LEZ27A*G4018, LEZ37A*G3018, LEZ37A*G4018, LEZ37A*G5618, LGZ27A*M3013, LGZ37A*G3013 and LGZ37A*M3013
	504197W	Graphic Panel	White; Models LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES17A*M4588, LGS17A*F3020, LGS17A*F3081, LGS17A*M3020 and LGS17A*M3082
	504197Q	Graphic Panel	Bisque; Models LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES17A*M4588, LGS17A*F3020, LGS17A*F3081, LGS17A*M3020 and LGS17A*M3082
	505157WP	Graphic Panel	Model LGK37A*F3058
	505850	Graphic Panel	Models LEH37A*F3300, LGH37A*F1182 and LGH37A*F5423
	505911	Graphic Panel	Models LEZ67A*F1702 and LGZ67A*F1102
	505912	Graphic Panel	Models LEZ57A*F1702 and LGZ57A*F1102
	505913	Graphic Panel	Models LEZ27A*F1702, LEZ37A*F1702, LGZ27A*F1102 and LGZ37A*F1102
	N/A	Graphic Panel	Model LGS17A*K1180 through Serial No. 0503001144; Models LEB07A*F1709, LEG37A*F4350, LET67A*F1700, LEY47A*F1709, LGG37A*F3058 and LGY47A*F1109
	512622W	Graphic Panel	Model LGS17A*K1180 starting Serial No. 0503001145
	511437	Graphic Panel	Models LEN27A*G3008, LEN27A*G4008, LEN27A*G99M3 and LGN27A*M3008
	511639	Graphic Panel	Model LED17A*F1700 through Serial No. 0701
	512168W	Graphic Panel	Model LED17A*F1700 starting Serial No. 0702
	511882	Graphic Panel	Models LET57A*F1700, LET68A*F1700, LGT57A*F1100 and LGT68A*F1100
	511902W	Graphic Panel	Models LEK37A*F4350 and LGK37A*F3060
	512166W	Graphic Panel	Models AEZ17A*F1702 and AGZ17A*F1102
	512167W	Graphic Panel	Models AEZ68A*F1702 and AGZ68A*F1102
	512370	Graphic Panel	Models FDE3TRGS401NW22, LEN27A*G3018, LEN27A*G4018, LEN37A*G3018, LEN37A*G4018, LGN27A*M3013 and LGN37A*M3013
	512752W	Graphic Panel	Models AEZ28A*F1702 and AGZ28A*F1102
	511914W	Graphic Panel	Models CDE3LRGS171CW01 and CDG3LRGS111CW01
	513523W	Graphic Panel	Models LDE3TRWS331TW05, LDG3TRWS111TW05, MDE3TRWS331TW06 and MDG3TRWS111TW06
	513016W	Graphic Panel	Models ZDE30RGS171CW01 and ZDG30RGS111CW01
	513017W	Graphic Panel	Models ZDE3LRGS171CW01 and ZDG3LRGS111CW01
	513018W	Graphic Panel	Models ZDE4BRGS171CW01 and ZDG4BRGS111CW01
	513244W	Graphic Panel	Models ADE3TRWS431AW01, ADE3TRWS431NW22 and ADG3TRWS301AW01
	504070W	Graphic Panel	All other models

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White
N/A = Part no longer available

Control Panel and Knobs - Rear Control Models

All Models Except ADE3TFWS431AW01, ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG3TFWS301AW01, ADG32FSS301AN01, ADG41FSS111TN03, BDE30FGS171CW01, BDG30FGS111CW01, CDE4BFGS171CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060, FGZ17A*F1102, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDG41FSS111CN01 and ZDG4BFGS111CW01

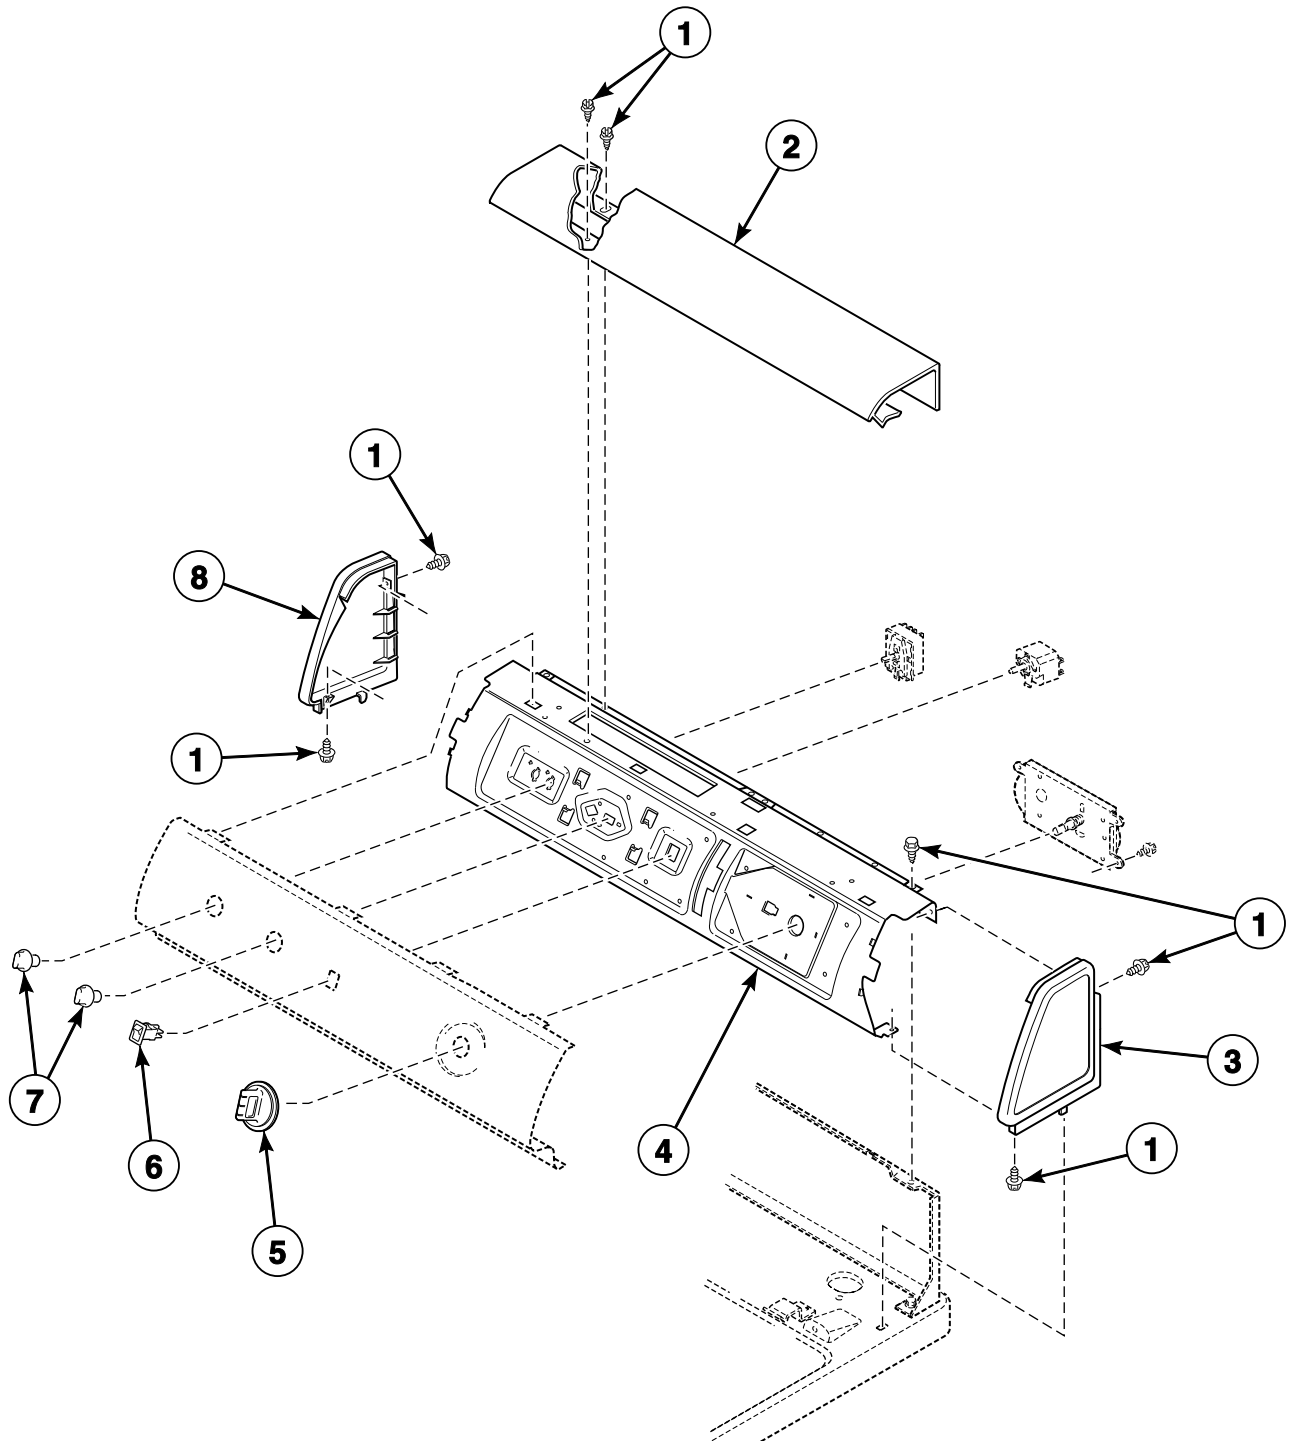

DRY1858P_506054

Control Panel and Knobs - Rear Control Models


REF	PART NO.	DESCRIPTION	COMMENTS
	511148	Wire Assembly	Extra tumble; Use with item 6; Models AEZ68A*F1702, AGZ68A*F1102, ZDE4BRGS171CW01 and ZDG4BRGS111CW01
1	501086	Screw	
2	505808W	Top Cover	White
	505808G	Top Cover	Gray
	N/A	Top Cover	Almond
	505808Q	Top Cover	Bisque
3	504006P	End Panel	Right; Black; Models LEN27A*G3008, LEN27A*G4008, LEN27A*G99M3 and LGN27A*M3008
	504008WP	End Panel	White; Right; All other models
	504008L	End Panel	Almond; Right; All other models
	504008QP	End Panel	Bisque; Right; All other models
4	503901	Control Support Panel	
5	512118	Timer Knob Assembly	Black; Models LEN27A*G3008, LEN27A*G4008, LEN27A*G99M3 and LGN27A*M3008
	803168P	Knob Assembly	Models ADE3TRWS431AW01, ADE3TRWS431NW22, ADG3TRWS301AW01, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE4BRGS171CW01, ZDG30RGS111CW01, ZDG3LRGS111CW01 and ZDG4BRGS111CW01
	512117W	Timer Knob Assembly	White; All other models
	512117Q	Timer Knob Assembly	Bisque; All other models
6	38424W	Rocker Switch	White; Models AEZ68A*F1702, AGZ68A*F1102, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEZ57A*F1702, LEZ67A*F1702, LGT57A*F1100, LGT68A*F1100, LGZ57A*F1102, LGZ67A*F1102, ZDE4BRGS171CW01 and ZDG4BRGS111CW01
	38424L	Rocker Switch	Almond; Models AEZ68A*F1702, AGZ68A*F1102, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEZ57A*F1702, LEZ67A*F1702, LGT57A*F1100, LGT68A*F1100, LGZ57A*F1102 and LGZ67A*F1102
	38424Q	Rocker Switch	Bisque; Models AEZ68A*F1702, AGZ68A*F1102, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEZ57A*F1702, LEZ67A*F1702, LGT57A*F1100, LGT68A*F1100, LGZ57A*F1102 and LGZ67A*F1102
7	511439	Knob Assembly	Black; Models LEN27A*G3008, LEN27A*G4008, LEN27A*G99M3 and LGN27A*M3008
	803119	Control Knob Assembly	Models ADE3TRWS431AW01, ADE3TRWS431NW22, ADG3TRWS301AW01, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE4BRGS171CW01, ZDG30RGS111CW01, ZDG3LRGS111CW01 and ZDG4BRGS111CW01
	36701W	Knob Assembly	White; All other models
	36701L	Knob Assembly	Almond; All other models
	36701Q	Knob Assembly	Bisque; All other models
8	504007P	End Panel	Left; Black; Models LEN27A*G3008, LEN27A*G4008, LEN27A*G99M3 and LGN27A*M3008
	504009WP	End Panel	White; Left; All other models
	N/A	End Panel	Almond; Left; All other models
	504009QP	End Panel	Bisque; Left; All other models

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

Controls - Rear Control Models

All Models Except ADE3TFWS431AW01, ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG3TFWS301AW01, ADG32FSS301AN01, ADG41FSS111TN03, BDE30FGS171CW01, BDG30FGS111CW01, CDE4BFGS171CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060, FGZ17A*F1102, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDG41FSS111CN01 and ZDG4BFGS111CW01

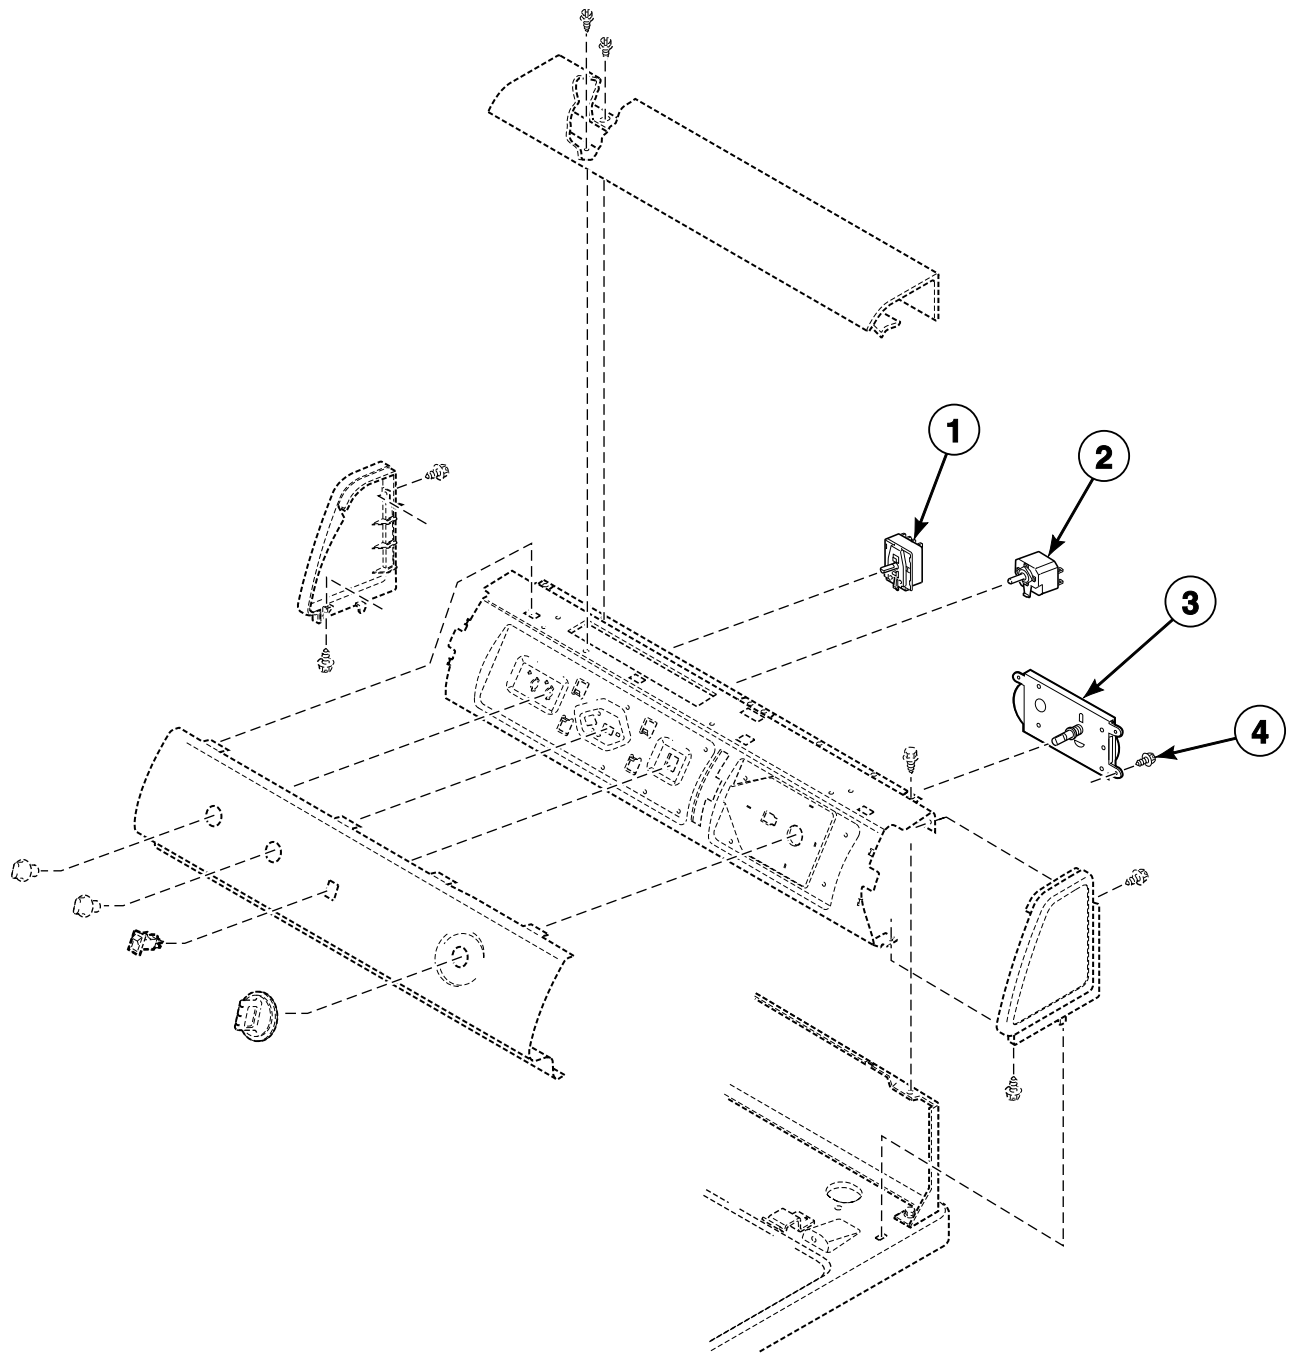

DRY1858PA_506054

Controls - Rear Control Models


REF	PART NO.	DESCRIPTION	COMMENTS
1	513504	Fabric Selector Switch	Model LES33A*F4562
	513506	Fabric Selector Switch	Models AEZ68A*F1702, AGZ68A*F1102, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ57A*F1702, LEZ67A*F1702, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ57A*F1102, LGZ67A*F1102, ZDE4BRGS171CW01 and ZDG4BRGS111CW01
	513505	Fabric Selector Switch	All other models
2	510211	Buzzer	Models AEZ68A*F1702, AGZ68A*F1102, LDG3TRWS111TW05, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, LGH37A*F1182, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDE4BRGS171CW01 and ZDG4BRGS111CW01
	504103	Adjustable Buzzer	All models except AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, CDE3LRGS171CW01, CDG3LRGS111CW01, LDG3TRWS111TW05, LEB07A*F1709, LED17A*F1700, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES17A*M4588, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, LGH37A*F1182, LGS17A*F3020, LGS17A*F3081, LGS17A*K1180, LGS17A*M3020, LGS17A*M3082, LGS37A*G3013, LGS37A*G3080, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ37A*G3013, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE4BRGS171CW01, ZDG30RGS111CW01, ZDG3LRGS111CW01 and ZDG4BRGS111CW01
	505447	Adjustable Buzzer	Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
	502966P	Timer	Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
	505795P	Timer	Models LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES17A*M4588, LES37A*F3000, LES37A*F4350, LEZ37A*F3000, LGS17A*F3020, LGS17A*F3081, LGS17A*M3020, LGS17A*M3082, LGS37A*F3000, LGS37A*F3022, LGS37A*F3058, LGS37A*F3060, LGS37A*F3080 and LGZ37A*F3000
3	505796P	Timer	Models LDE3TRWS331TW05, LEH37A*F3300, LES37A*F3300, LES37A*F3327, LES37A*F5412, LGS37A*F5412, LGS37A*F5423 and MDE3TRWS331TW06
	505797P	Timer and Harness Kit	Models AEZ17A*F1702, AEZ28A*F1702, CDE3LRGS171CW01, LED17A*F1700, LEZ27A*F1702, LEZ37A*F1702, ZDE30RGS171CW01 and ZDE3LRGS171CW01
	505794P	Timer	Models AGZ17A*F1102, AGZ28A*F1102, CDG3LRGS111CW01, LDG3TRWS111TW05, LGH37A*F1182, LGS17A*K1180, LGZ27A*F1102, LGZ37A*F1102, MDG3TRWS111TW06, ZDG30RGS111CW01 and ZDG3LRGS111CW01
	511149P	Timer	Models AGZ68A*F1102, LGT57A*F1100, LGT68A*F1100, LGZ57A*F1102, LGZ67A*F1102 and ZDG4BRGS111CW01
	511150P	Timer	Models AEZ68A*F1702, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEZ57A*F1702, LEZ67A*F1702 and ZDE4BRGS171CW01
	N/A	Timer and Harness Kit	Model LEB07A*F1709
	N/A	Timer	Models LEY47A*F1709 and LGY47A*F1109
	502964P	Timer	All other models
4	501086	Screw	

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

Control Cabinet - Front Control Models

Models BDE30FGS171CW01, BDG30FGS111CW01, FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060 and FGZ17A*F1102

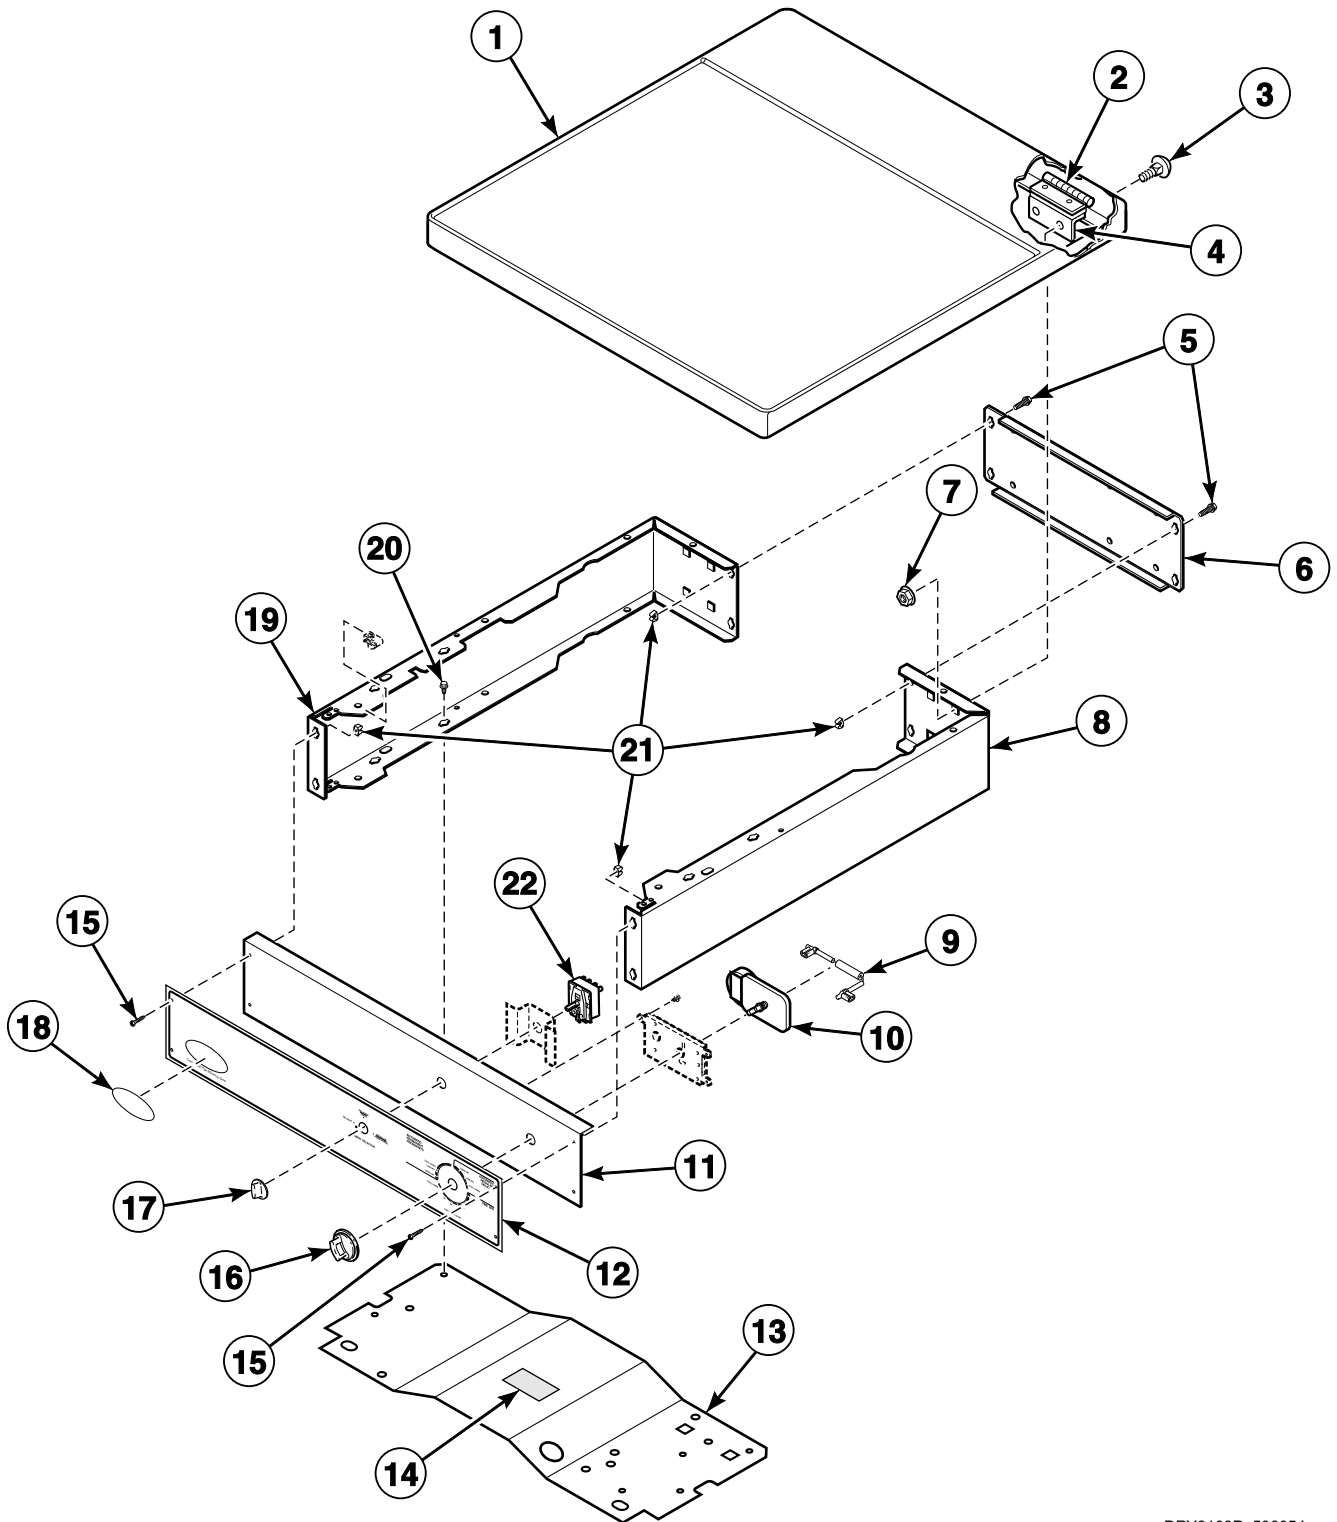

DRY2103P_506054


Control Cabinet - Front Control Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	511631P	Stainless Steel Top	Models FEN16A*G4018, FES16A*G4018 and FGN16A*M3013
	802247LP	Top and Gusset Assembly	Almond; All other models
	802247QP	Top and Gusset Assembly	Bisque; All other models
	802247WP	Top and Gusset Assembly	White; All other models
2	511036	Hinge	
3	29651	Bolt	4 required
4	504228	Top Mounting Bracket	
5	503688	Screw	
6	801058	Rear Control Cabinet	
7	44087201	Nut	
8	800915W	Right Control Cabinet Side	White
	800915L	Right Control Cabinet Side	Almond
	800915Q	Right Control Cabinet Side	Bisque
9	511277	Resistor Assembly	Models BDE30FGS171CW01, FEN16A*G4018, FEU17A*F1702 and FEZ17A*F1702
10	502964P	Timer	Models FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FGN16A*M3013 and FGN17A*M3013
	505794P	Timer	Models BDG30FGS111CW01 and FGZ17A*F1102
	505795P	Timer	Models FES17A*F4350 and FGS17A*F3060
	505796P	Timer	Model FES17A*F3300
	505797P	Timer and Harness Kit	Models BDE30FGS171CW01, FEU17A*F1702 and FEZ17A*F1702
11	511421W	Control Panel Assembly	
12	511656	Graphic Overlay	Models FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FGN16A*M3013 and FGN17A*M3013
	511406	Graphic Overlay	All other models
13	801777	Control Cabinet Bottom	
14	505281	Disconnect Power Warning Label	Model FGS17A*F3060
	502511	Electrical Shock Label	Models FGN16A*M3013 and FGN17A*M3013
15	800930	Screw	4 required
16	512117W	Timer Knob Assembly	White
	512117Q	Timer Knob Assembly	Bisque
17	36701W	Knob Assembly	White
	36701L	Knob Assembly	Almond
	36701Q	Knob Assembly	Bisque
18	202128	Domed Label	Models BDE30FGS171CW01 and BDG30FGS111CW01
	800921	Domed Label	Models FES16A*G4018, FES17A*F3300, FES17A*F4350 and FGS17A*F3060
	800922	Domed Label	Models FEZ17A*F1702 and FGZ17A*F1102
	800923	Domed Label	Model FEU17A*F1702
19	800900WP	Left Control Cabinet Side	White
	800900LP	Left Control Cabinet Side	Almond
	800900QP	Left Control Cabinet Side	Bisque
20	70240301	Screw	8 required
21	70030501	Expansion Clip	12 required
22	513505	Fabric Selector Switch	

* Add Letter To Designate Color. L - Almond Q - Bisque W - White

Control Panel and Controls - Front Control

Models ADE3TFWS431AW01, ADG3TFWS301AW01, CDE4BFGS171CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, ZDE4BFGS171CW01 and ZDG4BFGS111CW01

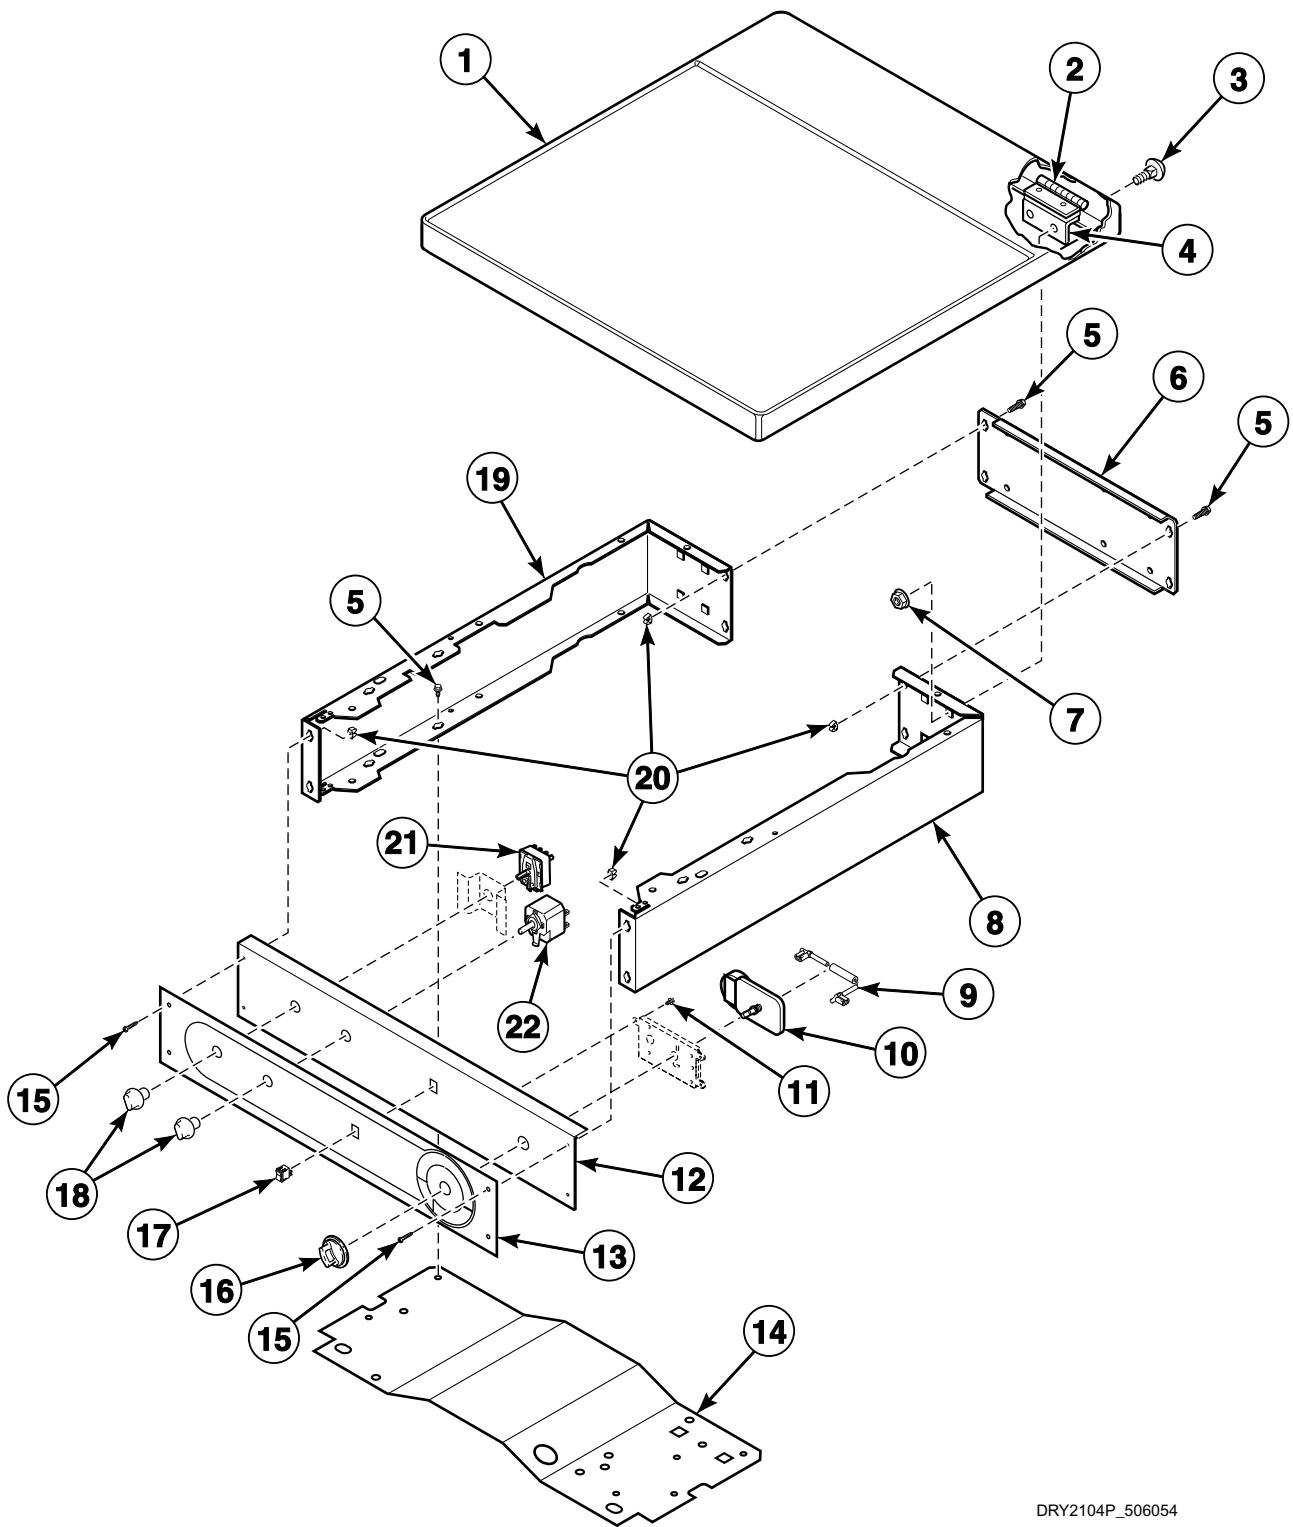

DRY2104P_506054


Control Panel and Controls - Front Control

REF	PART NO.	DESCRIPTION	COMMENTS
1	802247WP	Top and Gusset Assembly	White
	802247QP	Top and Gusset Assembly	Bisque
2	511036	Hinge	
3	29651	Bolt	4 required
4	504228	Top Mounting Bracket	
5	70240301	Screw	8 required
6	801058	Rear Control Cabinet	
7	29796	Nut	4 required
8	800915W	Right Control Cabinet Side	White
	800915Q	Right Control Cabinet Side	Bisque
9	511277	Resistor Assembly	Use with 511150 4 Cycle Timer; Models CDE4BFGS171CW01, CEZ68A*F1702 and ZDE4BFGS171CW01
10	502964P	Timer	Models ADE3TFWS431AW01 and ADG3TFWS301AW01
	511149P	Timer	Models CDG4BFGS111CW01, CGZ68A*F1102 and ZDG4BFGS111CW01
	511150P	Timer	Models CDE4BFGS171CW01, CEZ68A*F1702 and ZDE4BFGS171CW01
11	501086	Screw	
12	512067W	Control Panel Assembly	
13	513245	Graphic Overlay	Models ADE3TFWS431AW01 and ADG3TFWS301AW01
	512751	Graphic Overlay	Models CEZ68A*F1702 and CGZ68A*F1102
	511913	Graphic Overlay	Models CDE4BFGS171CW01 and CDG4BFGS111CW01
	513019	Graphic Overlay	Models ZDE4BFGS171CW01 and ZDG4BFGS111CW01
14	801777	Control Cabinet Bottom	
15	800930	Screw	4 required
16	803118P	Timer Knob Assembly	Models ADE3TFWS431AW01, ADG3TFWS301AW01, ZDE4BFGS171CW01 and ZDG4BFGS111CW01
	512117W	Timer Knob Assembly	White; All other models
	512117Q	Timer Knob Assembly	Bisque; All other models
17	38424W	Rocker Switch	White; All models except ADE3TFWS431AW01 and ADG3TFWS301AW01
	38424Q	Rocker Switch	Bisque; All models except ADE3TFWS431AW01 and ADG3TFWS301AW01
18	803119	Control Knob Assembly	Models ADE3TFWS431AW01, ADG3TFWS301AW01, ZDE4BFGS171CW01 and ZDG4BFGS111CW01
	36701W	Knob Assembly	White; All other models
	36701Q	Knob Assembly	Bisque; All other models
19	800900WP	Left Control Cabinet Side	White
	800900QP	Left Control Cabinet Side	Bisque
20	70030501	Expansion Clip	12 required
21	513505	Fabric Selector Switch	
22	510211	Buzzer	

* Add Letter To Designate Color. Q - Bisque W - White

Control Cabinet and Controls

Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03,
ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01

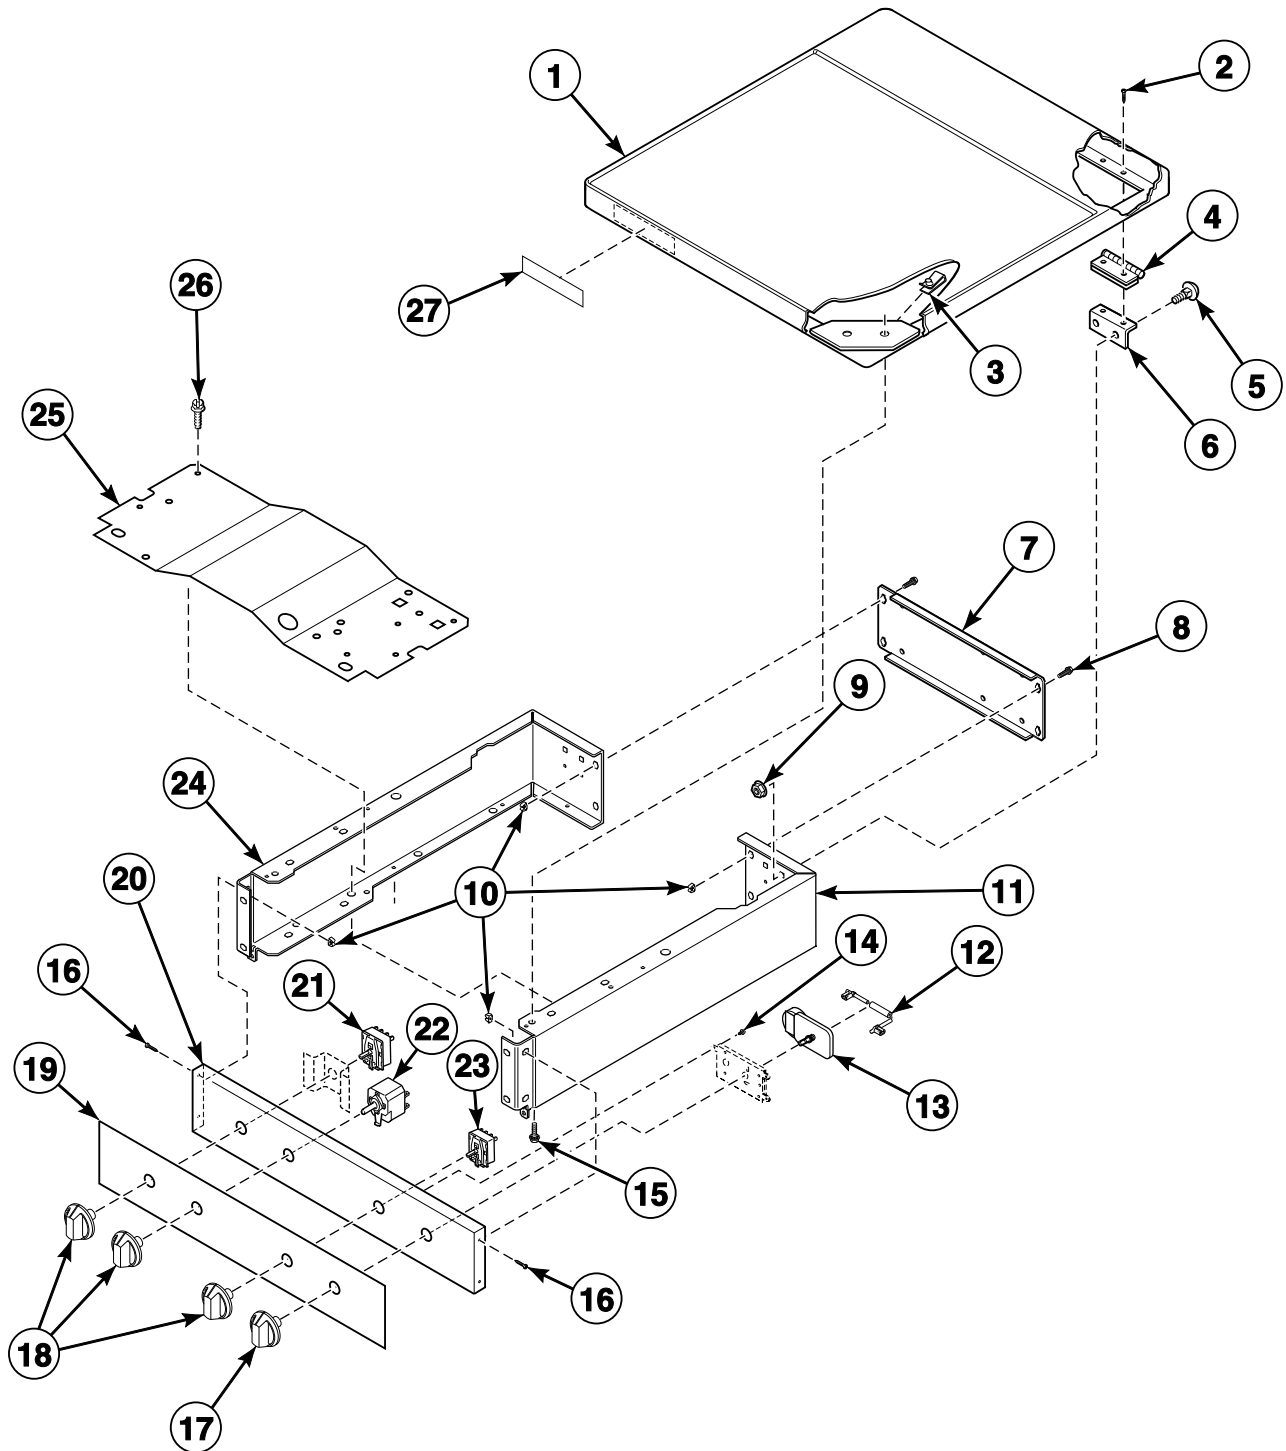


DRY2240P_506054

Control Cabinet and Controls

REF	PART NO.	DESCRIPTION	COMMENTS
	513170P	Wire Assembly	Extra tumble
1	803144P	Top Kit	Includes items 2, 6, 9 and 4 each of 22649 Screw and 51236 Nut
2	685847	Pop Rivet	
3	36020	Nut	
4	511036	Hinge	
5	29651	Bolt	
6	504228	Top Mounting Bracket	
7	801058	Rear Control Cabinet	
8	70240301	Screw	
9	44087201	Nut	
10	70030501	Expansion Clip	
11	803141	Control Cabinet	Right; Stainless steel
	513701G	Control Cabinet	Right; Gray
12	511277	Resistor Assembly	Use with 511150 4 Cycle Timer; Models ADE41FSS171TN03 and ZDE41FSS171CN01
13	505795P	Timer	Models ADE32FSS431AN01, ADE32FSS431NN22 and ADG32FSS301AN01
	505796P	Timer	Model ADE32FSS541RN01
	511149P	Timer	Models ADG41FSS111TN03 and ZDG41FSS111CN01
	511150P	Timer	Models ADE41FSS171TN03 and ZDE41FSS171CN01
14	501086	Screw	
15	23008	Screw	
16	F430956	Screw	
17	803098P	Timer Knob Assembly	
18	803099P	Control Knob Assembly	
19	513443	Panel	Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01 and ADG32FSS301AN01
	513112	Panel	Models ADE41FSS171TN03 and ADG41FSS111TN03
	513093	Panel	Models ZDE41FSS171CN01 and ZDG41FSS111CN01
20	513161	Control Panel Assembly	
21	513506	Fabric Selector Switch	
22	504103	Adjustable Buzzer	Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01 and ADG32FSS301AN01
	510211	Buzzer	All other models
23	803568	Selector Switch	Models ADE41FSS171TN03, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
24	803142	Control Cabinet	Left; Stainless steel
	513702G	Control Cabinet	Left; Gray
25	801777	Control Cabinet Bottom	
26	M405188	Screw	Use with stainless steel cabinet
	503688	Screw	
27	803013	Badge	Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01 and ADG41FSS111TN03
	803101	Badge	Models ZDE41FSS171CN01 and ZDG41FSS111CN01

Cabinet Top and Control Hood Rear Panel - Rear Control Models

All Models Except ADE3TFWS431AW01, ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG3TFWS301AW01, ADG32FSS301AN01, ADG41FSS111TN03, BDE30FGS171CW01, BDG30FGS111CW01, CDE4BFGS171CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060, FGZ17A*F1102, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDG41FSS111CN01 and ZDG4BFGS111CW01

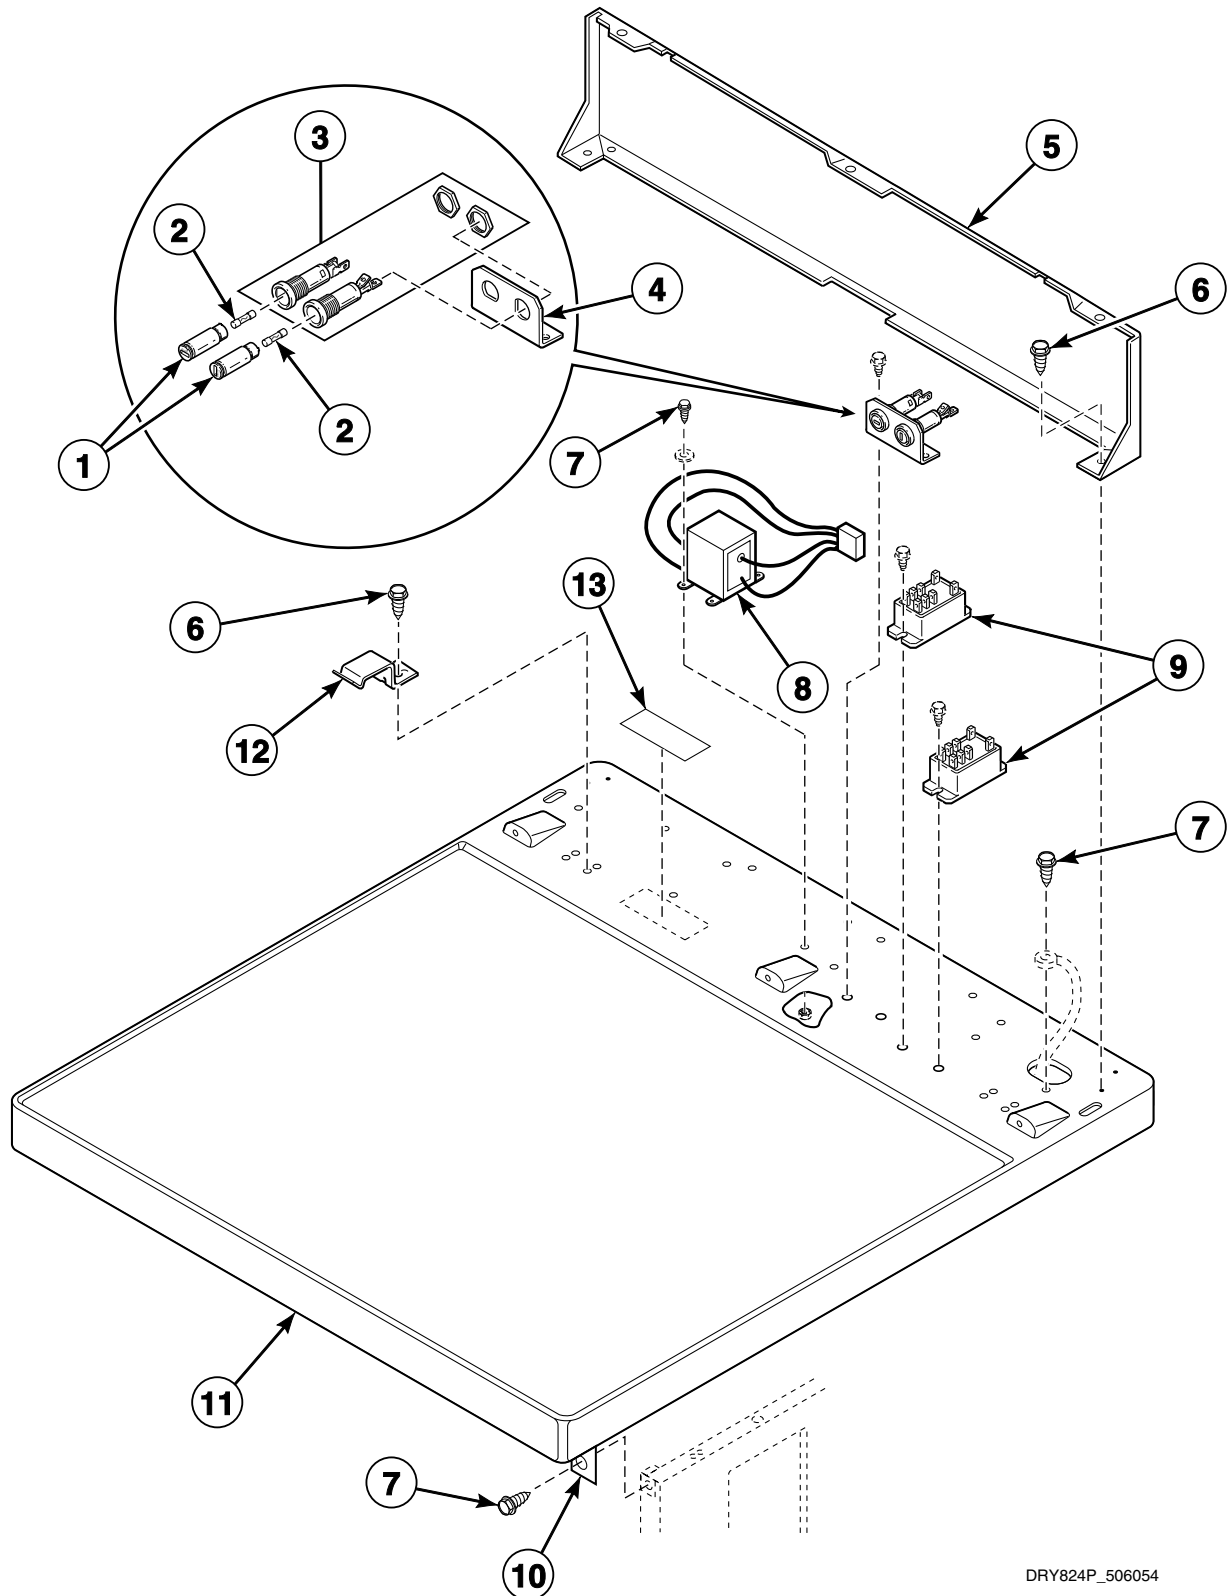

DRY824P_506054


Cabinet Top and Control Hood Rear Panel - Rear Control Models

REF	PART NO.	DESCRIPTION	COMMENTS
	511303	Wire Harness Assembly	Transformer adapter; Includes 502592 Fuse (3.15 Amp, 250 Volt); Models ADG3TRWS301AW01, LGH37A*F5423, LGK37A*F3060, LGN27A*M3008, LGN27A*M3013, LGN37A*M3013, LGS17A*M3020, LGS17A*M3082, LGS27A*M3013, LGS27A*M3080, LGS37A*F3022, LGS37A*F3060, LGS37A*F3080, LGS37A*F5412, LGS37A*F5423, LGS37A*M3013, LGS37A*M3080, LGS38A*M3013, LGS38A*M3020, LGS40A*M3020, LGZ27A*M3013 and LGZ37A*M3013
1	502811	Fuse Carrier	Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
2	502593	Fuse	400 mA; 1 required; Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
	502592	Fuse	3.15 Amp; 1 required; Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
3	502591P	Fuse Holder Kit	Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
4	502589	Fuse Holder Bracket	Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
5	510099	Hood Back Panel	
6	501086	Screw	
7	503688	Screw	
8	511658P	Transformer Kit	Models ADG3TRWS301AW01, LGH37A*F5423, LGK37A*F3060, LGN27A*M3008, LGN27A*M3013, LGN37A*M3013, LGS17A*F3020, LGS17A*F3081, LGS17A*M3020, LGS17A*M3082, LGS27A*M3013, LGS27A*M3080, LGS37A*F3000, LGS37A*F3022, LGS37A*F3028, LGS37A*F3060, LGS37A*F3080, LGS37A*F5412, LGS37A*F5423, LGS37A*G3013, LGS37A*G3080, LGS37A*M3013, LGS37A*M3080, LGS38A*M3013, LGS38A*M3020, LGS40A*M3020, LGZ27A*M3013, LGZ37A*F3000, LGZ37A*G3013 and LGZ37A*M3013
9	502501	Relay	
10	510146	Bracket	
11	510029WP	Top Panel Kit	White; Includes 2 of item 7
	510029G	Top Panel	Gray
	510029LP	Top Panel Kit	Almond; Includes 2 of item 7
12	35358	Hold-Down Clip	
13	505281	Disconnect Power Warning Label	

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Loading Door (Drawing 1 of 2)

Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03,
ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01

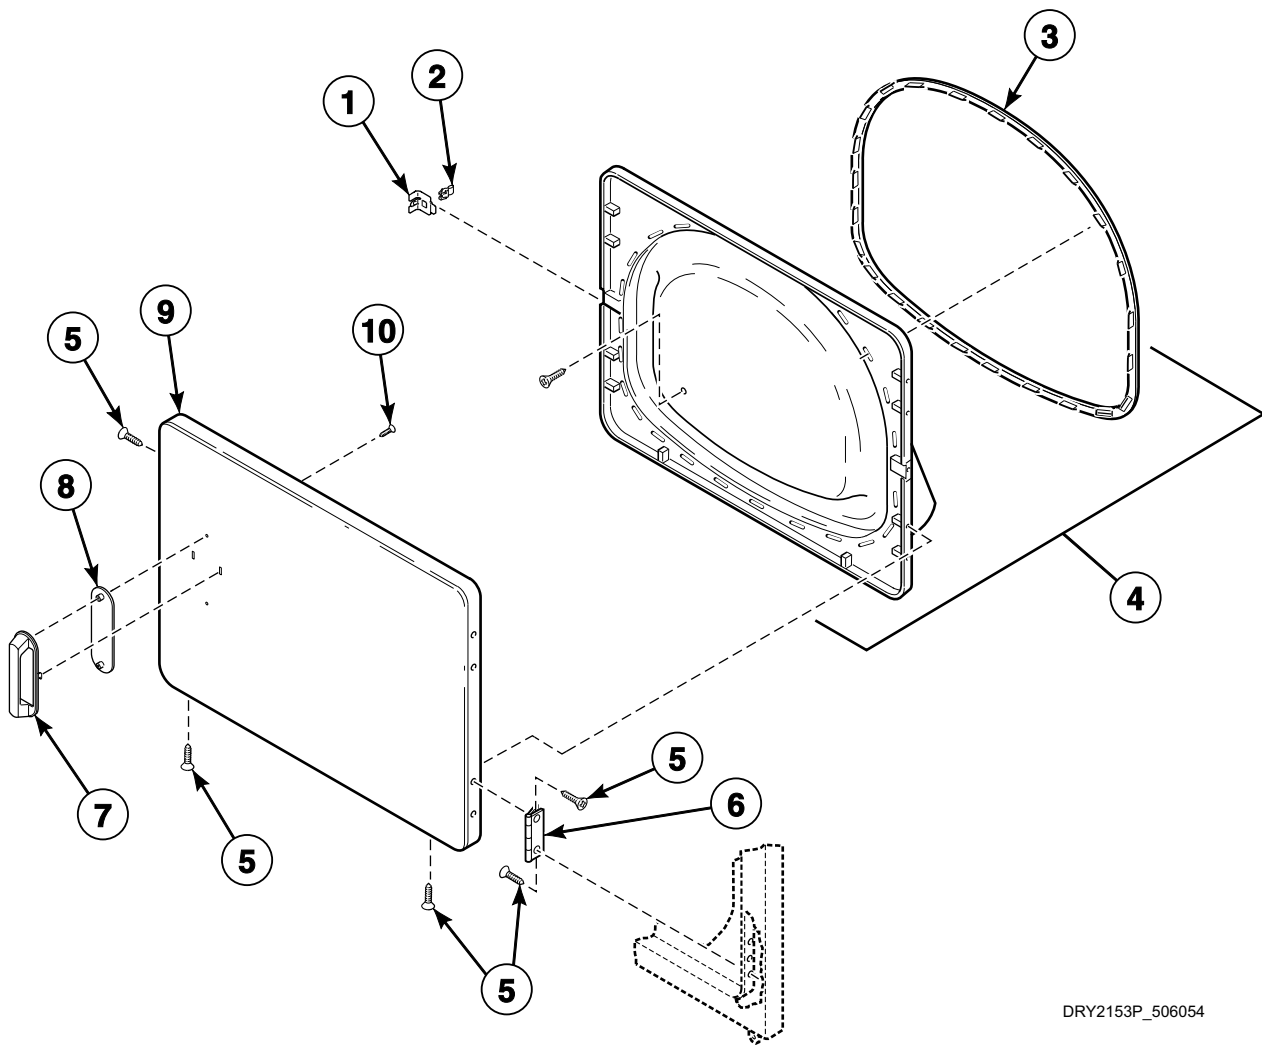


DRY2153P_506054

Loading Door (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	510127	Door Strike Mount	
2	510181	Door Strike	
3	510147P	Liner Door Seal	
4	513109P	Liner, Seal and Grill Assembly	Gray
5	505295	Screw	
6	511036	Hinge	
7	803095	Door Handle	
8	803094P	Handle Cover	
9	513156	Dryer Door	
10	800548	Screw	

Loading Door (Drawing 2 of 2)

All Models Except ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01

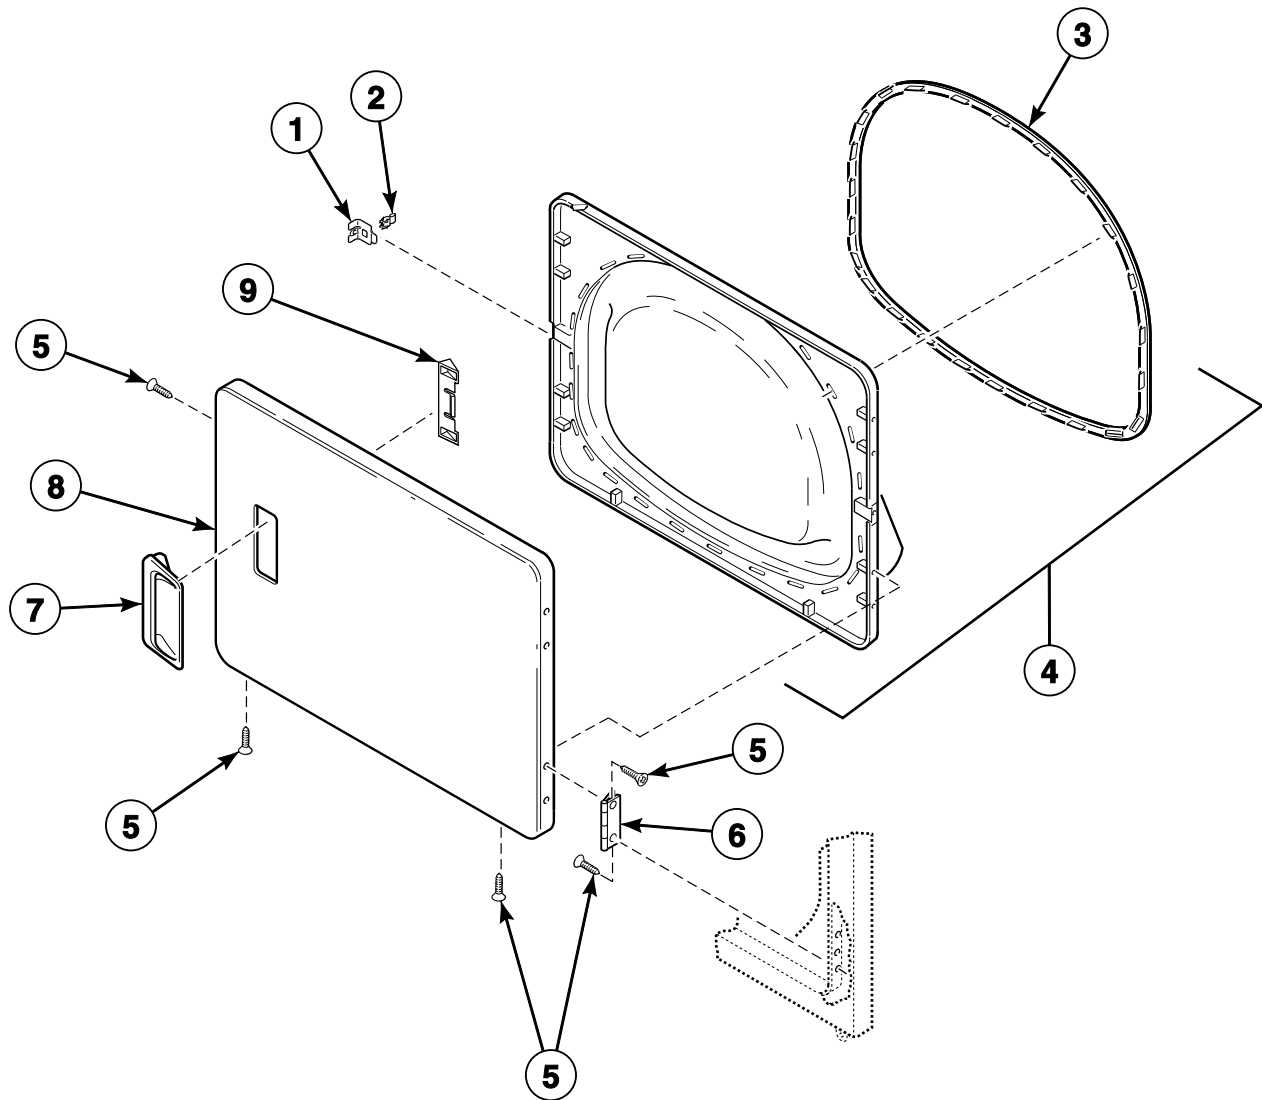


DRY1874P_506054

Loading Door (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	510127	Door Strike Mount	
2	510181	Door Strike	
3	510147P	Liner Door Seal	
4	510163WP	Liner, Seal and Grill Assembly	
5	505295	Screw	
6	511036	Hinge	
7	511213P	Door Pull and Wedge Kit	Black; Includes item 9; Models LEN27A*G3008, LEN27A*G4008, LEN27A*G99M3, LES28A*G4018 and LGN27A*M3008
	510103WP	Door Pull and Wedge Kit	White; Includes item 9; All other models
	510103LP	Door Pull and Wedge Kit	Almond; Includes item 9; All other models
	510103QP	Door Pull and Wedge Kit	Bisque; Includes item 9; All other models
8	510013WP	Dryer Door	White
	510013GP	Dryer Door	Gray
	510013LP	Dryer Door	Almond
	510013QP	Dryer Door	Bisque
9	510129	Door Handle Wedge	

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Access Panel, Front Panel and Seal

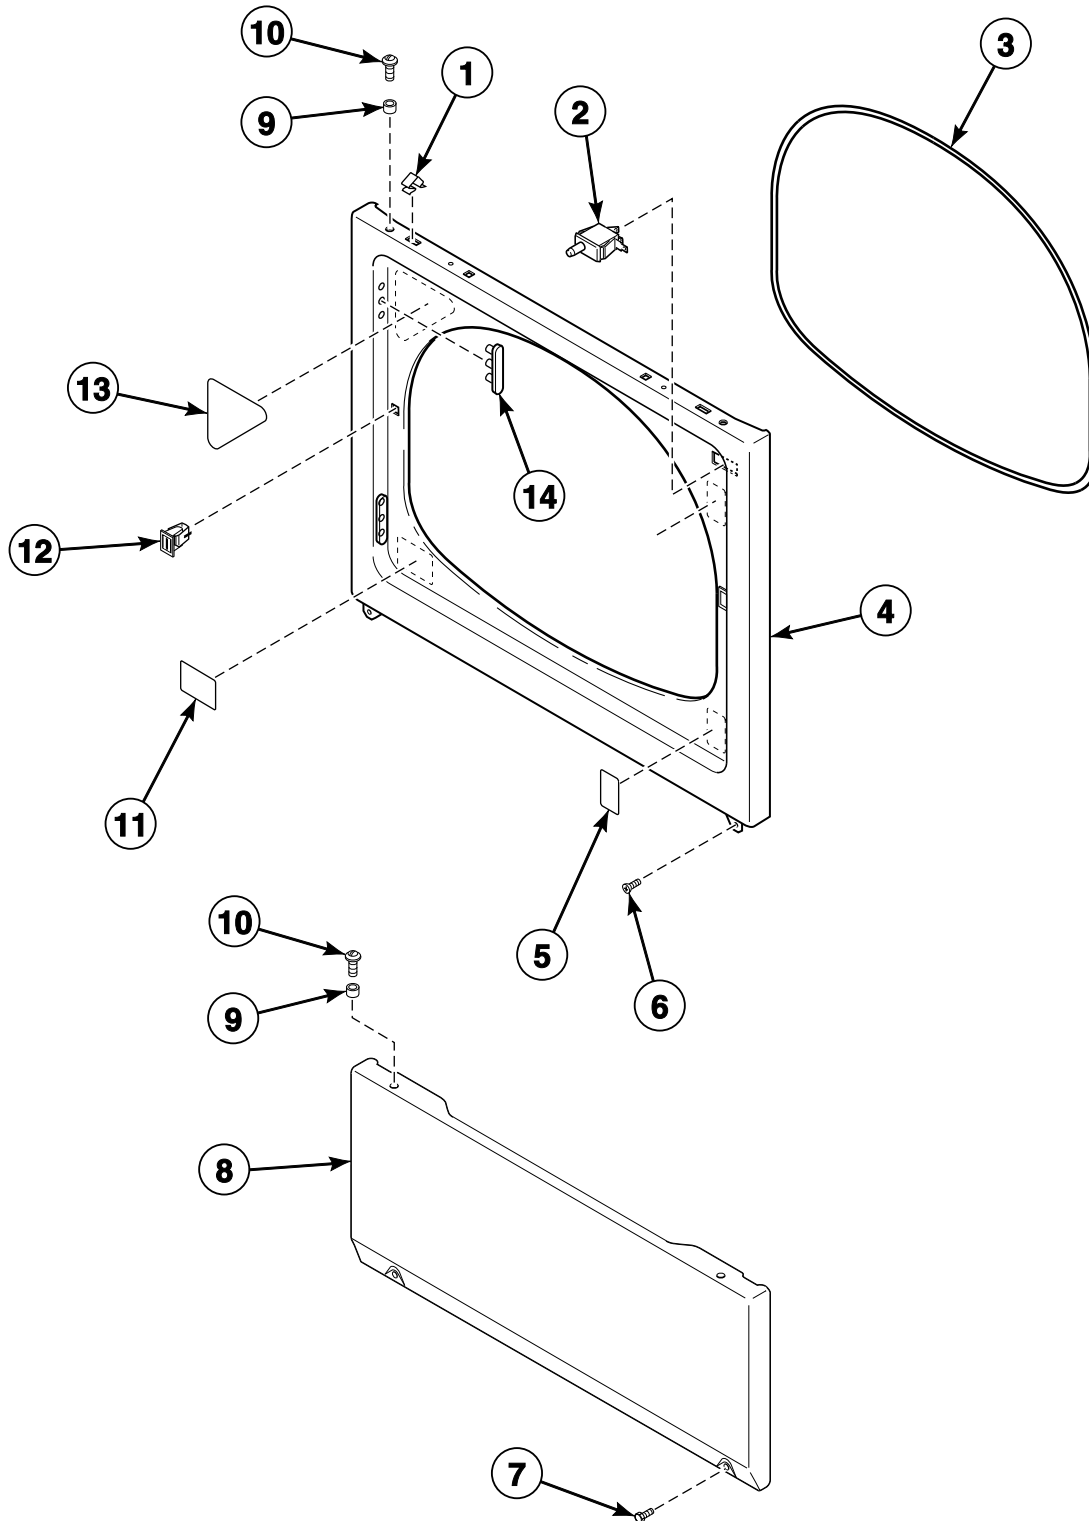


D400PE3A_506054

Access Panel, Front Panel and Seal

REF	PART NO.	DESCRIPTION	COMMENTS
1	28835	Speed Clip	All models except ADG32FSS301AN01, BDG30FGS111CW01, FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060 and FGZ17A*F1102
2	512973	Switch	
3	511056	Front Panel Seal	
4	512966	Front Panel	Stainless steel; Models ADE41FSS171TN03, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	510066WP	Front Panel	White; All other models
	510066LP	Front Panel	Almond; All other models
	510066QP	Front Panel	Bisque; All other models
	510066GP	Front Panel	Gray; All other models
	512542	Front Panel	Stainless steel; All other models
5	512263	Warning Label	Models ADE3TFWS431AW01, ADE3TRWS431AW01, ADE32FSS431AN01, ADG3TFWS301AW01, ADG3TRWS301AW01, ADG32FSS301AN01, FES17A*F4350, FGS17A*F3060, LEG37A*F4350, LEK37A*F4350, LES37A*F4350, LGG37A*F3058, LGK37A*F3058, LGK37A*F3060, LGS37A*F3058 and LGS37A*F3060
6	503688	Screw	
7	33562	Screw	Slotted hex head
8	512543	Access Panel	Stainless steel; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	510069WP	Access Panel	White; All other models
	510069LP	Access Panel	Almond; All other models
	510069QP	Access Panel	Bisque; All other models
	510069GP	Access Panel	Gray; All other models
9	56079	Panel Locator	
10	39733	Screw	
11	502804	Clean Lint Label	Models ADE3TFWS431AW01, ADE3TRWS431AW01, ADE32FSS431AN01, ADG3TFWS301AW01, ADG3TRWS301AW01, ADG32FSS301AN01, FES17A*F4350, FGS17A*F3060, LEG37A*F4350, LEK37A*F4350, LES37A*F4350, LGG37A*F3058, LGK37A*F3058, LGK37A*F3060, LGS37A*F3058 and LGS37A*F3060
	502781	Lint Filter Label	Model LES17A*M4588
12	510177	Door Catch Assembly	
13	500253	Caution Label	French; Models AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDE30FGS171CW01, BDG30FGS111CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FEU17A*F1702, FEZ17A*F1702, FGZ17A*F1102, LEB07A*F1709, LED17A*F1700, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	505809	Warning Label	Spanish; Model LGS17A*K1180
	500281	Warning/Caution Label	English; All other models
14	510186	Hinge Hole Plug	

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Motor, Exhaust Fan and Belt (Drawing 1 of 2)

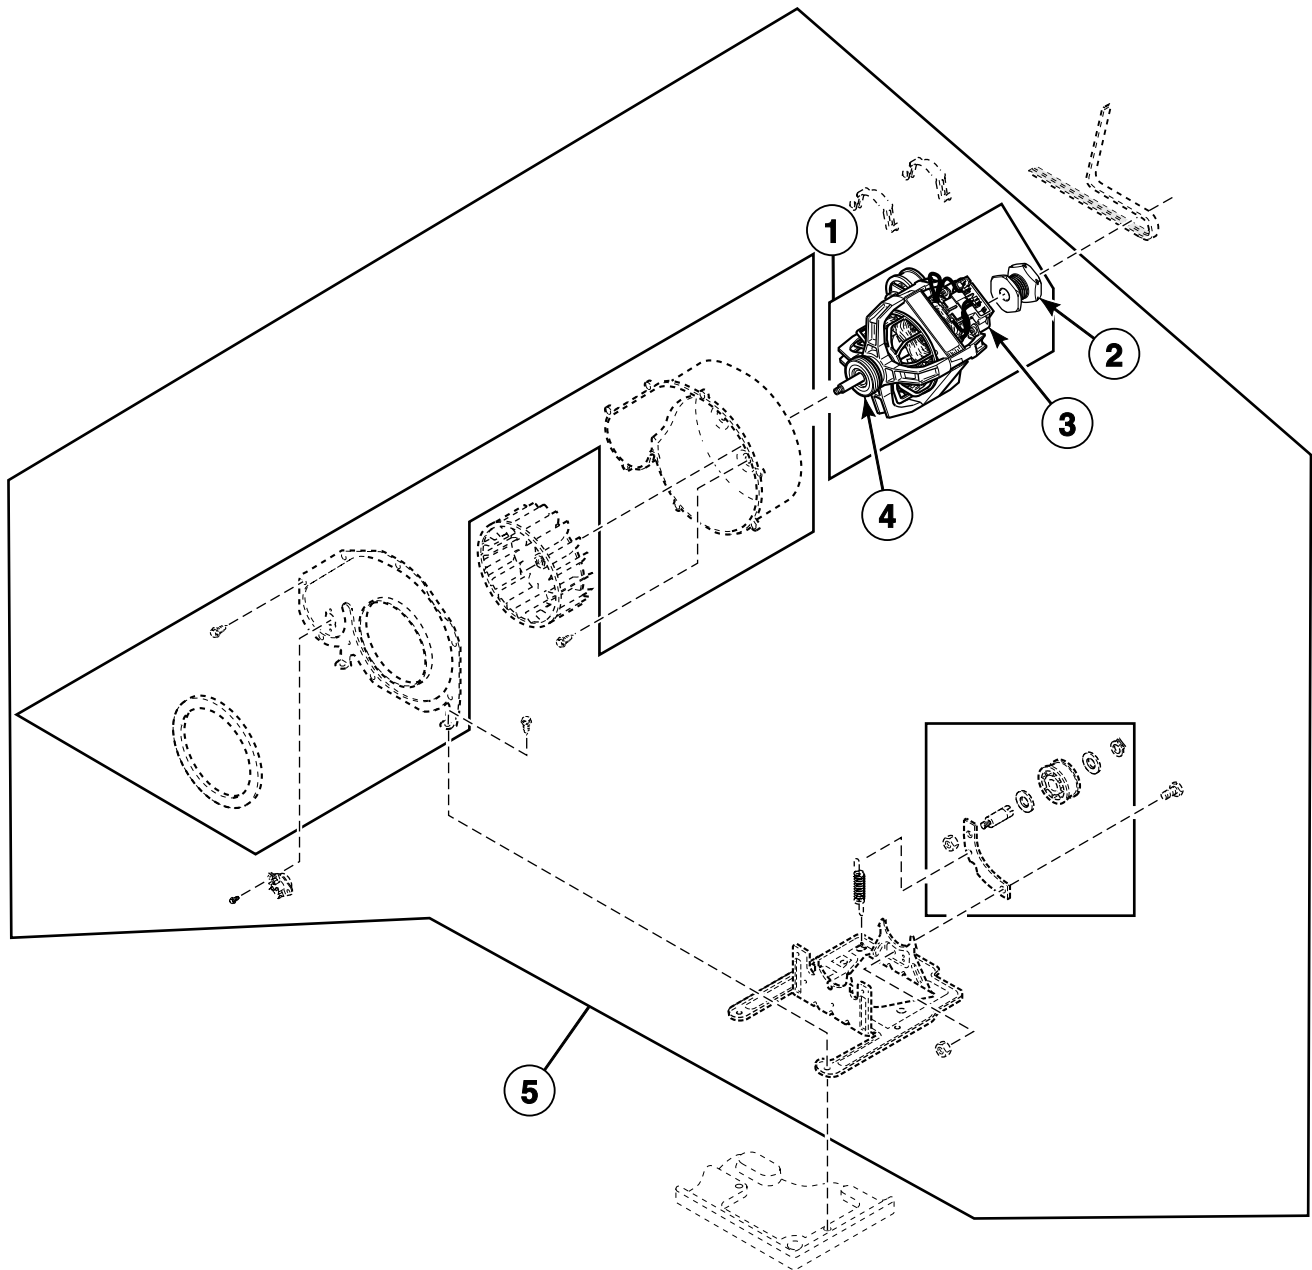

DRY2105P_506054


Motor, Exhaust Fan and Belt (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	27604P	Anti-Seize Compound	Apply to motor shaft when installing blower fan assembly
1	511629P	Motor and Pulley Assembly	120 Volt/60 Hertz; Includes items 2 and 3; Apply anti-seize compound to motor shaft when installing blower fan assembly; Models ADE41FSS171TN03, ADG41FSS111TN03, AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDE30FGS171CW01, BDG30FGS111CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FEU17A*F1702, FEZ17A*F1702, FGZ17A*F1102, LDG3TRWS111TW05, LEB07A*F1709, LED17A*F1700, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, LGH37A*F1182, LGS17A*K1180, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	505869P	Motor and Pulley Assembly	240 Volt/60 Hertz; Includes items 2 and 3; Apply anti-seize compound to motor shaft when installing blower fan assembly; Models ADE32FSS541RN01, FES17A*F3300, LDE3TRWS331TW05, LEH37A*F3300, LES37A*F3300, LES37A*F3327, LES37A*F5412, LGH37A*F5423, LGS37A*F5412, LGS37A*F5423 and MDE3TRWS331TW06
	505843P	Motor and Pulley Assembly	240 Volt/50 Hertz; Includes items 2 and 3; Apply anti-seize compound to motor shaft when installing blower fan assembly; All other models
2	500011	Motor Pulley	60 Hertz; Use with 511629P Motor and Pulley Assembly or 505869P Motor and Pulley Assembly; Models ADE32FSS541RN01, ADE41FSS171TN03, ADG41FSS111TN03, AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDE30FGS171CW01, BDG30FGS111CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FES17A*F3300, FEU17A*F1702, FEZ17A*F1702, FGZ17A*F1102, LDE3TRWS331TW05, LDG3TRWS111TW05, LEB07A*F1709, LED17A*F1700, LEH37A*F3300, LES37A*F3300, LES37A*F3327, LES37A*F5412, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, LGH37A*F1182, LGH37A*F5423, LGS17A*K1180, LGS37A*F5412, LGS37A*F5423, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDE3TRWS331TW06, MDG3TRWS111TW06, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	500222	Motor Pulley	50 Hertz; Use with 505843P Motor and Pulley Assembly; All other models
3	N/A	Motor Switch Kit	Does not include thermal protector
4	590P3	Motor Hub Ring Kit	
5	510717P	Blower and Fan Kit	120 Volt/60 Hertz; Includes items 1-4, and 1-4 and 6-18 on <i>Motor, Exhaust Fan and Belt (Drawing 2 of 2)</i> ; For models that use 511629P Motor and Pulley Assembly

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

Motor, Exhaust Fan and Belt (Drawing 2 of 2)

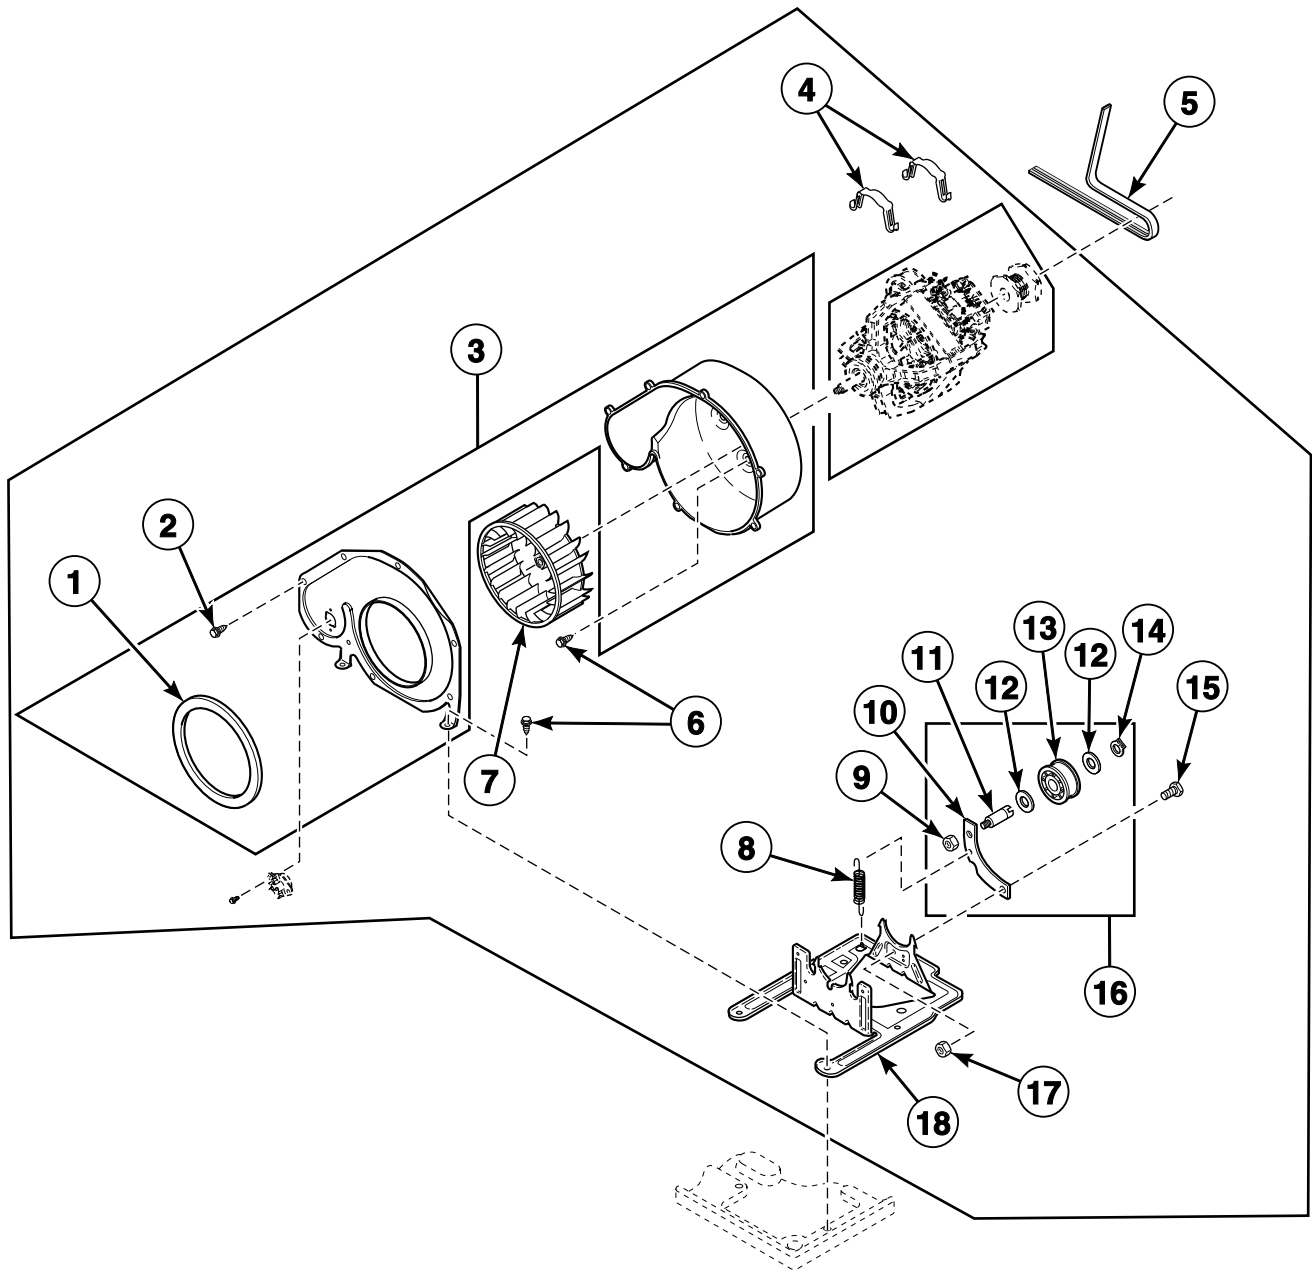


DRY2105PA_506054

Motor, Exhaust Fan and Belt (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	27604P	Anti-Seize Compound	Apply to motor shaft when installing blower fan assembly
1	510238P	Blower Housing Seal	
2	31260	Screw	
3	511969P	Blower Housing and Cover Kit	Includes items 1 and 2
4	510180	Motor Mount Clamp	
5	511255P	Cylinder Belt	
6	503688	Screw	
7	510139P	Blower Fan Assembly	Apply anti-seize compound to motor shaft when installing blower fan assembly
8	510185	Idler Spring	
9	56156	Nut	
10	510133	Idler Lever	
11	56461P	Shaft	
12	52549	Washer	
13	510142P	Idler Wheel and Bearing Assembly	
14	23748	Retaining Ring	
15	500824	Screw	
16	510158	Idler Lever and Wheel Assembly	Includes items 9-14
17	52566	Nut	
18	510060	Motor Mount	

Thermostat

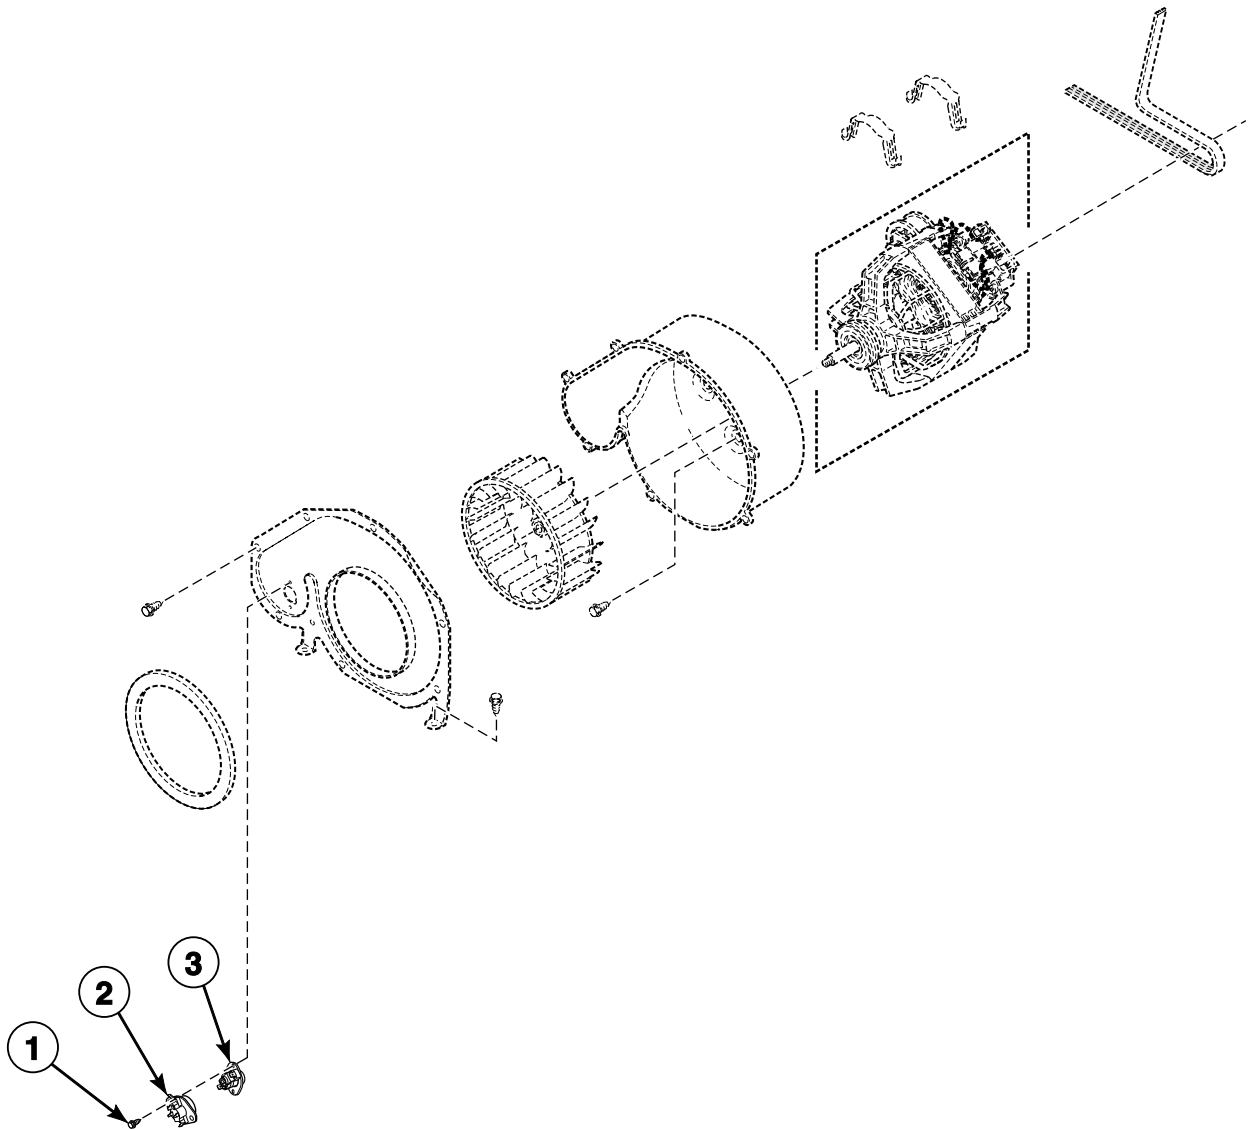

DRY1850P_506054


Thermostat

REF	PART NO.	DESCRIPTION	COMMENTS
1	502535	Screw	
2	504515	Thermostat	Green; Models ADE41FSS171TN03, AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, BDE30FGS171CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CEZ68A*F1702, FEU17A*F1702, FEZ17A*F1702, LED17A*F1700, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01 and ZDE4BRGS171CW01
	504519	Thermostat	Violet/White; Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
	504520	Thermostat	Pink; Model LES33A*F4562
	504521	Thermostat	Yellow/White; Model LES33A*F4562
	510707P	Thermostat	Pink/White; Models ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LDG3TRWS111TW05, LGH37A*F1182, LGS17A*K1180, LGT57A*F1100, LGT68A*F1100, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	511957	Thermostat	White; All other models
3	M411941	Manual Reset Thermostat	Models ADG3TFWS301AW01, ADG3TRWS301AW01, ADG32FSS301AN01, FGS17A*F3060, LGK37A*F3060 and LGS37A*F3060

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Front Bulkhead, Seal and Air Duct - Without Light

All Models Except ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, AEZ28A*F1702, AEZ68A*F1702, AGZ28A*F1102, AGZ68A*F1102, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, LES28A*G4018, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ57A*F1702, LEZ67A*F1702, LGS38A*M3013, LGS38A*M3020, LGS40A*M3020, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ57A*F1102, LGZ67A*F1102, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01

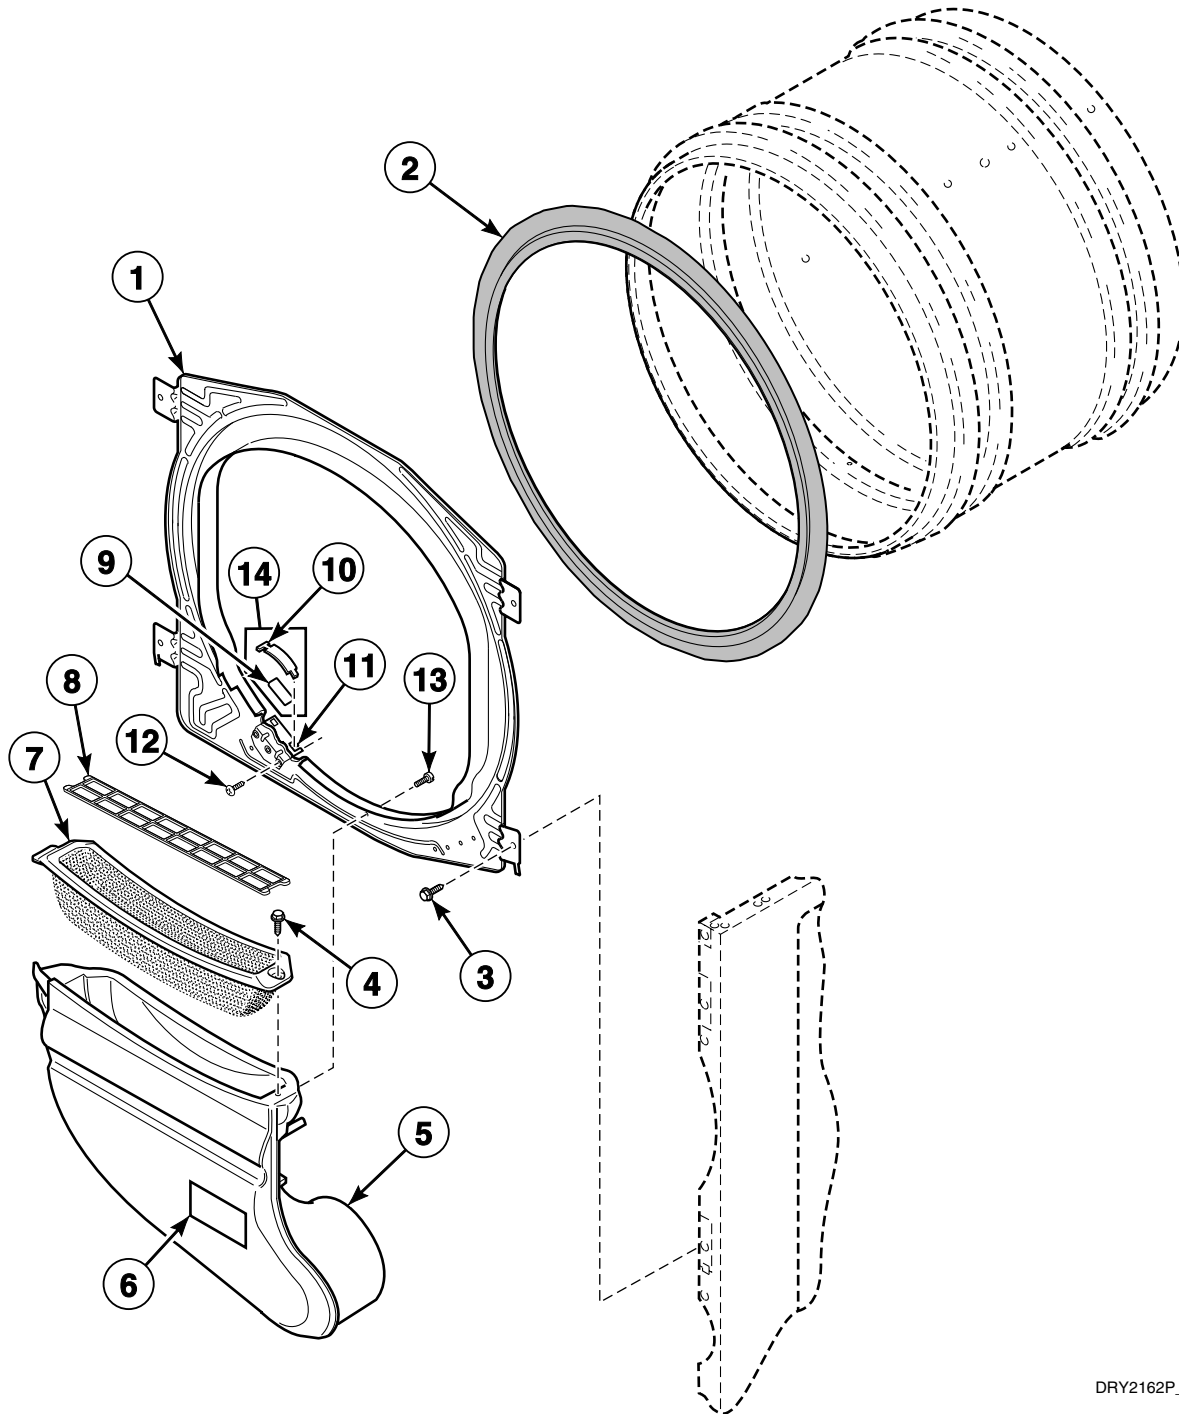

DRY2162P_506054


Front Bulkhead, Seal and Air Duct - Without Light

REF	PART NO.	DESCRIPTION	COMMENTS
1	510266P	Front Bulkhead Assembly	Unpainted; Includes items 2 and 9-12; Models AEZ17A*F1702, AGZ17A*F1102, BDE30FGS171CW01, BDG30FGS111CW01, FDE3TRGS401NW22, FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060, FGZ17A*F1102, LED17A*F1700, LEN27A*G3008, LEN27A*G3018, LEN27A*G4008, LEN27A*G4018, LEN27A*G99M3, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES17A*M4588, LES27A*G3018, LES27A*G4000, LES27A*G4500, LES27A*G4518, LES27A*G4018, LEZ27A*F1702, LEZ27A*G3018, LEZ27A*G4018, LGN27A*M3008, LGN27A*M3013, LGS17A*F3020, LGS17A*F3081, LGS17A*K1180, LGS17A*M3020, LGS17A*M3082, LGS27A*M3013, LGS27A*M3080, LGZ27A*F1102, LGZ27A*M3013, ZDE30RGS171CW01 and ZDG30RGS111CW01
	511033WP	Front Bulkhead Assembly	Painted; Includes items 2 and 9-12; All other models
2	510207P	Cylinder Seal Assembly	
	511637P	Adhesive	For cylinder seal
	RB170001	Seal Kit	Includes 2 cylinder seals, 510238P Blower Housing Seal and 511637P Adhesive
3	503688	Screw	
4	501285	Screw	
5	510151	Air Duct Assembly	
6	500314	Warning Label	Models AEZ17A*F1702, AGZ17A*F1102, BDE30FGS171CW01, BDG30FGS111CW01, FEU17A*F1702, FEZ17A*F1702, FGZ17A*F1102, LEB07A*F1709, LED17A*F1700, LEZ27A*F1702, LEZ37A*F1702, LGZ27A*F1102, LGZ37A*F1102, ZDE30RGS171CW01 and ZDG30RGS111CW01
	502506	Pinched Fingers Label	Model LES17A*M4588
7	503980	Lint Filter	
8	510502	Lint Filter Cover	
9	510189	Felt Pad	
10	510187	Cylinder Glide	
11	510145	Cylinder Glide Bracket	
12	52864	Screw	
13	505295	Screw	
14	RB170003	Glide Kit	Includes items 9 and 10

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Front Bulkhead, Seal and Air Duct - With Light

Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, AEZ28A*F1702, AEZ68A*F1702, AGZ28A*F1102, AGZ68A*F1102, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, LES28A*G4018, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ57A*F1702, LEZ67A*F1702, LGS38A*M3013, LGS38A*M3020, LGS40A*M3020, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ57A*F1102, LGZ67A*F1102, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01

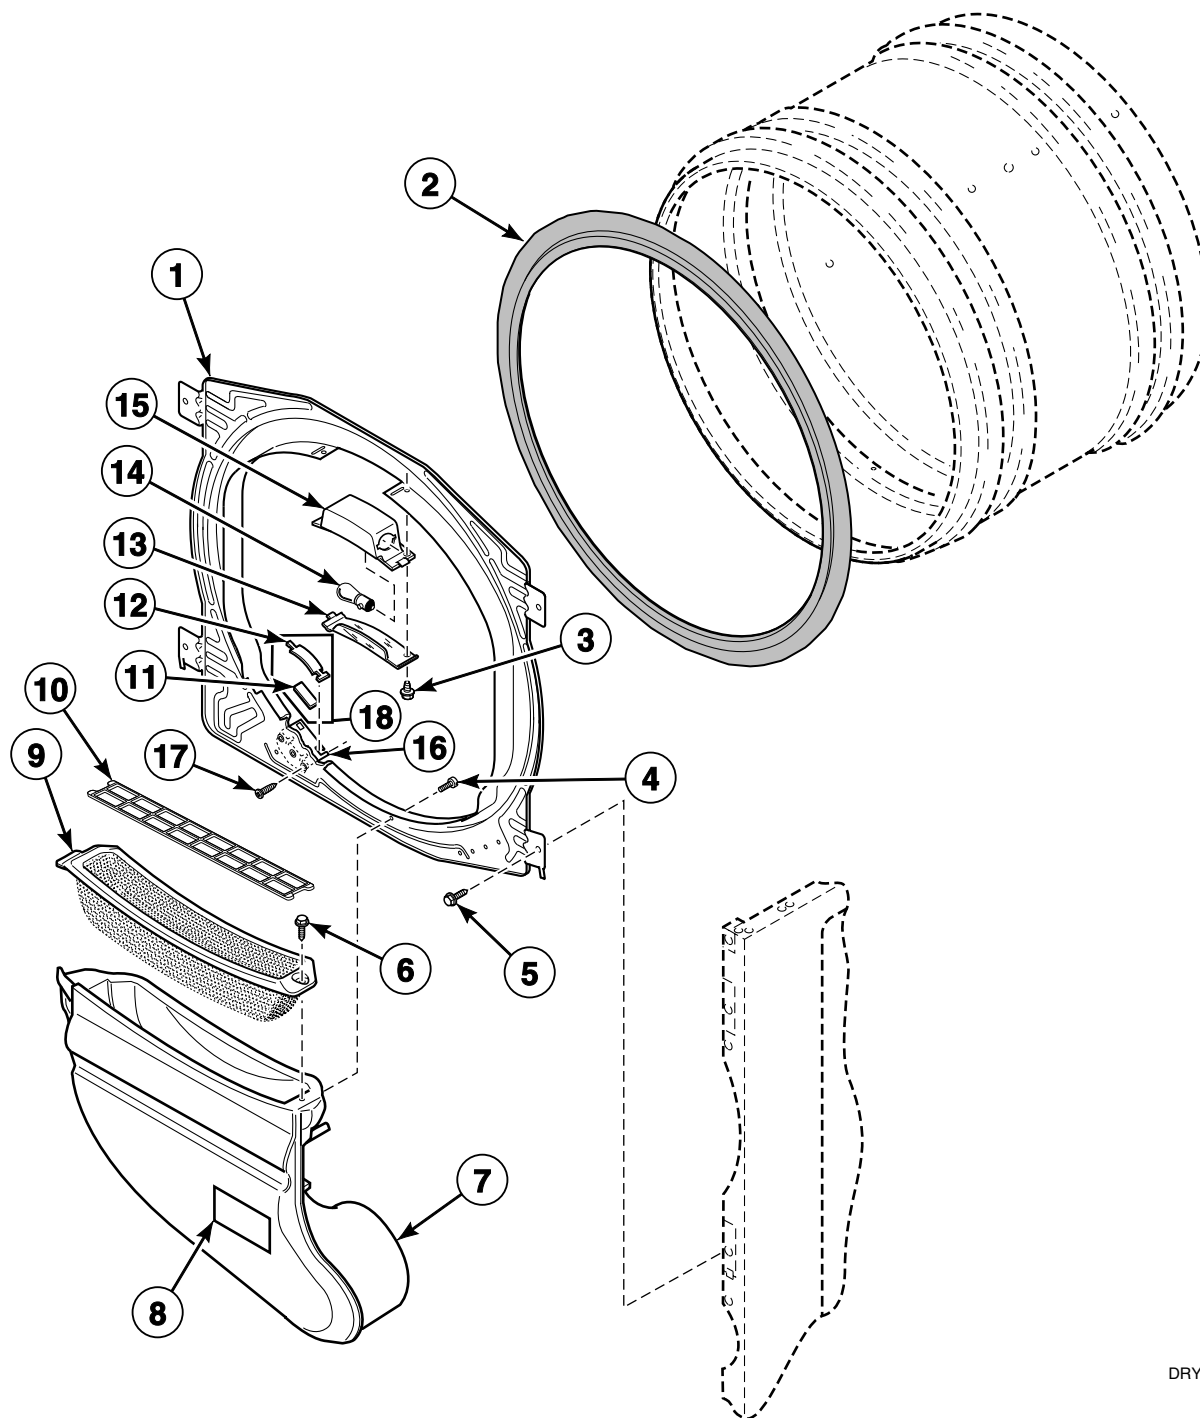

DRY2163P_506054


Front Bulkhead, Seal and Air Duct - With Light

REF	PART NO.	DESCRIPTION	COMMENTS
1	512476	Front Bulkhead Assembly	Galvanized; Includes items 2, 3, and 11-17; 240 Volt Cylinder Light Assembly and Lamp must be ordered separately; Drum Light Lens must be ordered separately for model LES28A*G4018; Models ADE41FSS171TN03, ADG41FSS111TN03, AEZ28A*F1702, AEZ68A*F1702, AGZ28A*F1102, AGZ68A*F1102, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, LES28A*G4018, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	505899WP	Bulkhead Assembly	Painted; Includes items 2, 3, and 11-17; All other models
2	510207P	Cylinder Seal Assembly	
	511637P	Adhesive	For cylinder seal
	RB170001	Seal Kit	Includes 2 cylinder seals, 510238P Blower Housing Seal and 511637P Adhesive
3	500227	Screw	
4	505295	Screw	
5	503688	Screw	
6	501285	Screw	
7	512945	Air Duct Assembly	Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	510151	Air Duct Assembly	All other models
8	500314	Warning Label	Models AEZ28A*F1702, AEZ68A*F1702, AGZ28A*F1102, AGZ68A*F1102, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ57A*F1702, LEZ67A*F1702, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ57A*F1102, LGZ67A*F1102, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
9	512946	Lint Filter	Light gray; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	503980	Lint Filter	All other models
10	510502	Lint Filter Cover	
11	510189	Felt Pad	
12	510187	Cylinder Glide	
13	512106	Cylinder Light Lens	Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, AEZ28A*F1702, AEZ68A*F1702, AGZ28A*F1102, AGZ68A*F1102, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	503623	Drum Light Lens	All other models
14	503579	Drum Light Lamp	240 Volt; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADG32FSS301AN01, LES28A*G4018, LGS38A*M3013, LGS38A*M3020 and LGS40A*M3020
	N/A	Drum Light Lamp	120 Volt; All other models
15	512109	Cylinder Light Assembly	240 Volt; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADG32FSS301AN01, LES28A*G4018, LGS38A*M3013, LGS38A*M3020 and LGS40A*M3020
	512108	Light Housing Assembly	120 Volt; Includes lamp; All other models
16	510145	Cylinder Glide Bracket	
17	501086	Screw	
18	RB170003	Glide Kit	Includes items 11 and 12

* Add Letter To Designate Color. L - Almond Q - Bisque W - White

N/A = Part no longer available

Cylinder, Baffles and Drying Rack

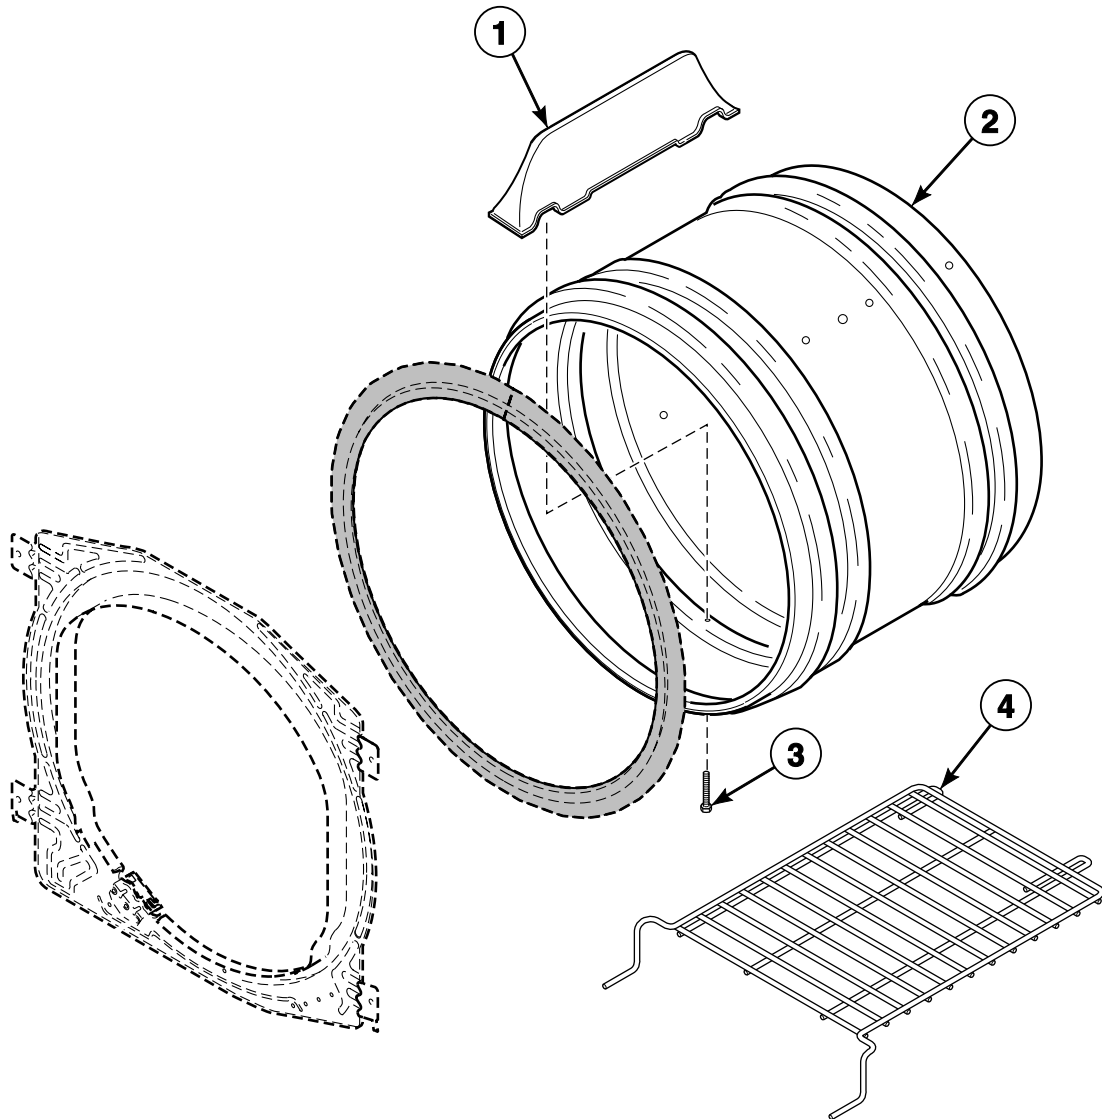

DRY2161P_506054


Cylinder, Baffles and Drying Rack

REF	PART NO.	DESCRIPTION	COMMENTS
1	512941	Cylinder Baffle	3 required; Light gray; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	510102	Cylinder Baffle	All other models
2	510265P	Cylinder Assembly	Galvanized; Includes (3) of item 1 and (6) of item 3; Models AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDE30FGS171CW01, BDG30FGS111CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FDE3TRGS401NW22, FEN16A*G4018, FEN17A*G3018, FEN17A*G4018, FES16A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060, FGZ17A*F1102, LED17A*F1700, LEN27A*G3008, LEN27A*G3018, LEN27A*G4008, LEN27A*G4018, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES17A*M4588, LES27A*G3018, LES27A*G4000, LES27A*G4500, LES27A*G4518, LES27A*G4018, LES28A*G4018, LET68A*F1700, LEZ27A*F1702, LEZ27A*G3018, LEZ27A*G4018, LGN27A*M3008, LGN27A*M3013, LGS17A*F3020, LGS17A*F3081, LGS17A*K1180, LGS17A*M3020, LGS17A*M3082, LGS27A*M3013, LGS27A*M3080, LGT68A*F1100, LGZ27A*F1102, LGZ27A*M3013, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	505929P	Cylinder Assembly	Stainless steel; Includes (3) of item 1 and (6) of item 3; Models LEN27A*G99M3, LET67A*F1700, LEZ67A*F1702, LGS40A*M3020 and LGZ67A*F1102
	512940P	Cylinder Assembly	Stainless steel; Includes (3) of item 1 and (6) of item 3; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	510159WP	Cylinder Assembly	White; Includes (3) of item 1 and (6) of item 3; All other models
3	62588	Screw	
4	512082P	Drying Rack	

* Add Letter To Designate Color. L - Almond Q - Bisque W - White

Rear Bulkhead, Felt Seal and Cylinder Roller - 1 Phase Models

All Models Except FDE3TRGS401NW22, FEN16A*G4018, FEN17A*G4018, FES16A*G4018, LEN27A*G4008, LEN27A*G4018, LEN27A*G99M3, LEN37A*G4018, LES27A*G4000, LES27A*G4018, LES28A*G4018, LES37A*G4018, LEZ27A*G4018 and LEZ37A*G4018

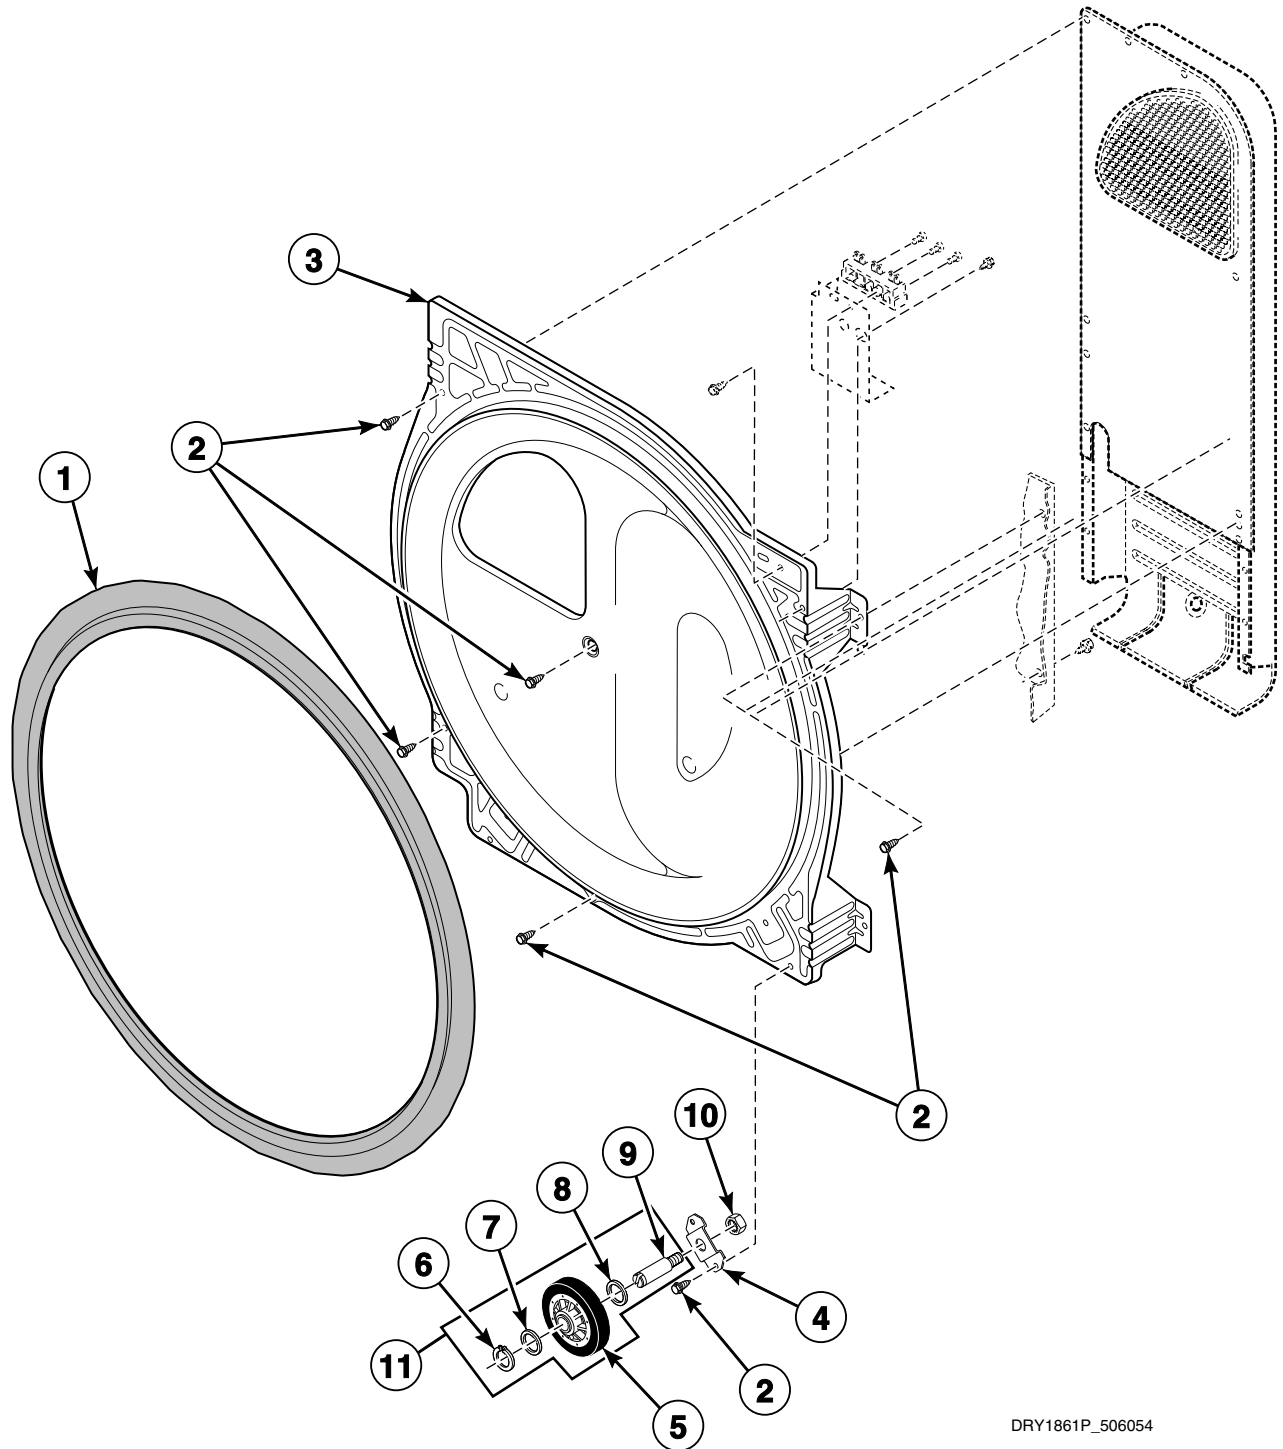

DRY1861P_506054

Rear Bulkhead, Felt Seal and Cylinder Roller - 1 Phase Models


REF	PART NO.	DESCRIPTION	COMMENTS
1	510207P	Cylinder Seal Assembly	
	511637P	Adhesive	For cylinder seal
	RB170001	Seal Kit	Includes 2 cylinder seals, 510238P Blower Housing Seal and 511637P Adhesive
2	503688	Screw	
3	511082P	Rear Bulkhead Assembly	Galvanized; Includes item 1; Models AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDE30FGS171CW01, BDG30FGS111CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CEZ68A*F1702, CGZ68A*F1102, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, FGN16A*M3013, FGN17A*M3013, FGS17A*F3060, FGZ17A*F1102, LED17A*F1700, LEN27A*G3008, LEN27A*G3018, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES17A*M4588, LES27A*G3018, LES27A*G4500, LES27A*G4518, LET68A*F1700, LEZ27A*F1702, LEZ27A*G3018, LGN27A*M3008, LGN27A*M3013, LGS17A*F3020, LGS17A*F3081, LGS17A*K1180, LGS17A*M3020, LGS17A*M3082, LGS27A*M3013, LGS27A*M3080, LGT68A*F1100, LGZ27A*F1102, LGZ27A*M3013, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE4BFGS171CW01, ZDE4BRGS171CW01, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	N/A	Rear Bulkhead Assembly	Stainless steel; Includes item 1; Models LET67A*F1700, LEZ67A*F1702, LGS40A*M3020 and LGZ67A*F1102
	505246	Rear Bulkhead Assembly	Stainless steel; Includes item 1; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	510905WP	Rear Bulkhead Assembly	White; Includes item 1; All other models
4	510100	Cylinder Roller Bracket	
5	510708P	Cylinder Roller	
6	23748	Retaining Ring	
7	52549	Washer	
8	504082	Washer	
9	56461P	Shaft	
10	56156	Nut	
11	RB170002	Roller Kit	Includes items 5-9

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

Terminal Block - 1 Phase Models

All Models Except FDE3TRGS401NW22, FEN16A*G4018, FEN17A*G4018, FES16A*G4018, LEN27A*G4008, LEN27A*G4018, LEN27A*G99M3, LEN37A*G4018, LES27A*G4000, LES27A*G4018, LES28A*G4018, LES37A*G4018, LEZ27A*G4018 and LEZ37A*G4018

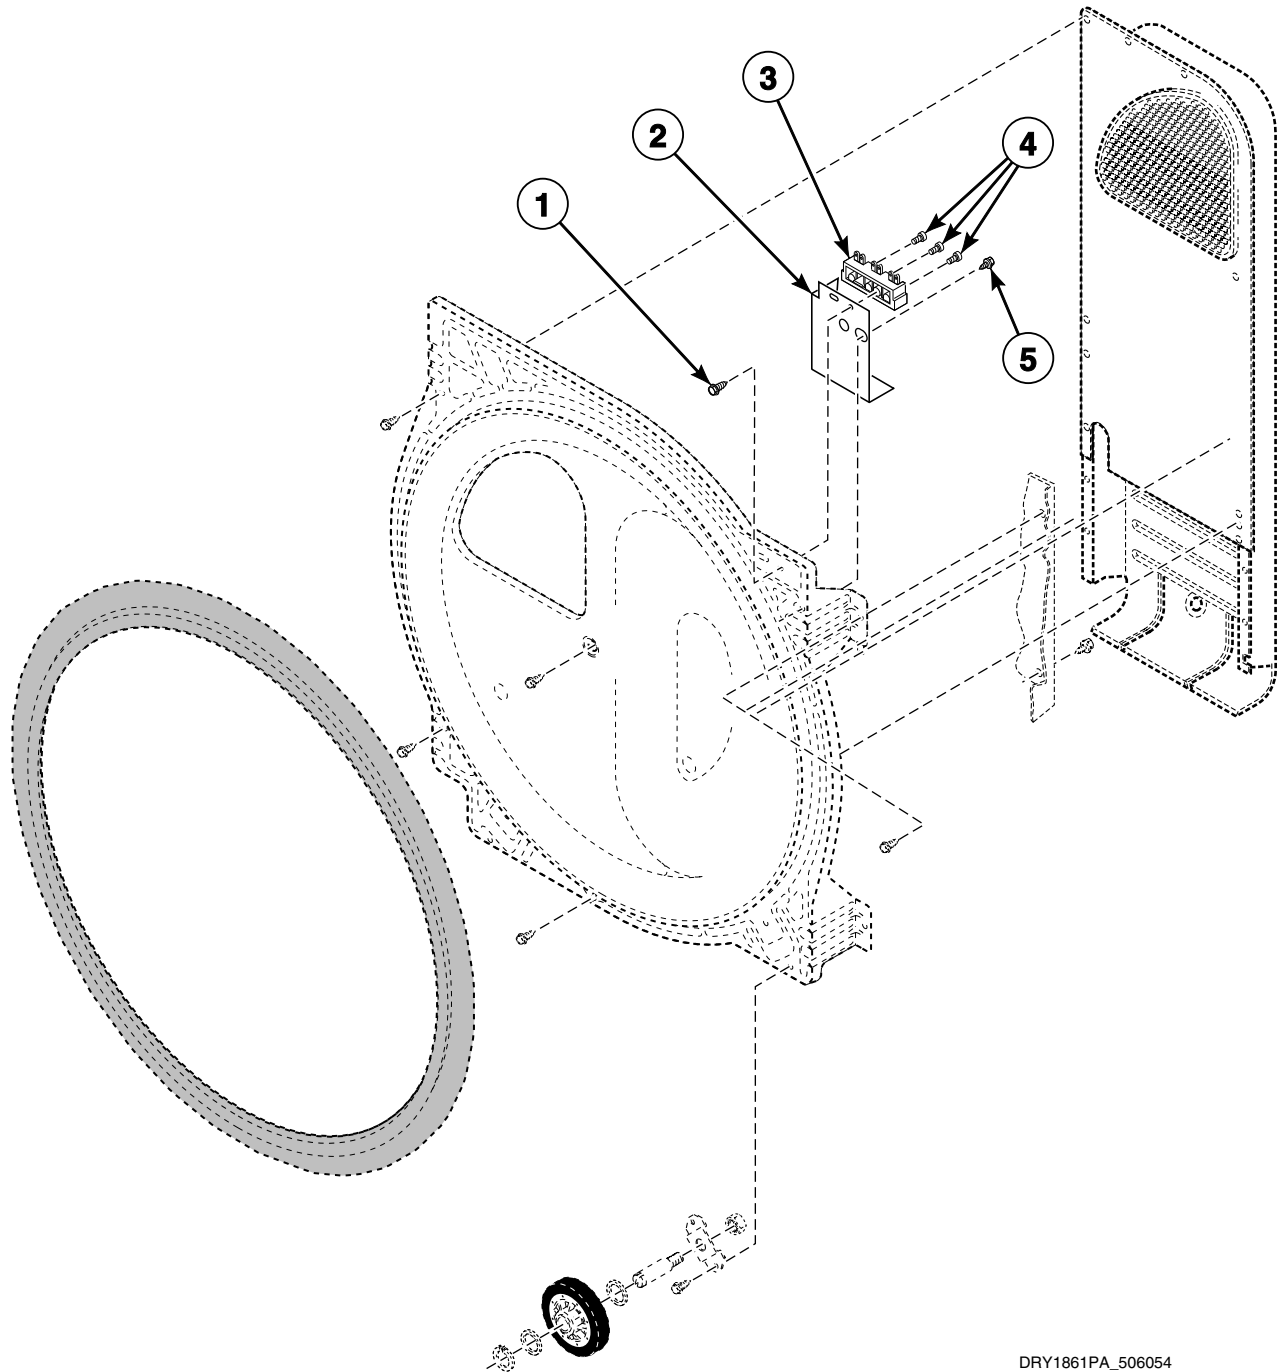

DRY1861PA_506054

Terminal Block - 1 Phase Models


REF	PART NO.	DESCRIPTION	COMMENTS
1	501285	Screw	
2	510237	Terminal Block Shield	Models ADE41FSS171TN03, AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, BDE30FGS171CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CEZ68A*F1702, FEU17A*F1702, FEZ17A*F1702, LDE3TRWS331TW05, LEB07A*F1709, LED17A*F1700, LEH37A*F3300, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES37A*F3000, LES37A*F3300, LES37A*F3327, LES37A*F5412, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ37A*F3000, LEZ57A*F1702, LEZ67A*F1702, MDE3TRWS331TW06, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01 and ZDE4BRGS171CW01
	505768	Terminal Block Shield	Models ADE3TRWS431AW01, ADE3TRWS431NW22, ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADG3TRWS301AW01, ADG32FSS301AN01, FGN16A*M3013, FGN17A*M3013, LEG37A*F4350, LEK37A*F4350, LEN27A*G3008, LEN27A*G3018, LEN37A*G3018, LES17A*M4588, LES27A*G3018, LES27A*G4500, LES27A*G4518, LES33A*F4562, LES37A*F3028, LES37A*F4350, LES37A*G3018, LEZ27A*G3018, LEZ37A*G3018, LEZ37A*G5618, LGG37A*F3058, LGK37A*F3058, LGK37A*F3060, LGN27A*M3008, LGN27A*M3013, LGN37A*M3013, LGS17A*F3020, LGS17A*F3081, LGS17A*M3020, LGS17A*M3082, LGS27A*M3013, LGS27A*M3080, LGS37A*F3028, LGS37A*F3058, LGS37A*F3060, LGS37A*G3013, LGS37A*G3080, LGS37A*M3013, LGS37A*M3080, LGS38A*M3013, LGS38A*M3020, LGS40A*M3020, LGZ27A*M3013, LGZ37A*G3013 and LGZ37A*M3013
3	510190P	Terminal Block Assembly	Includes 3 of item 4; All models except ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LGH37A*F1182, LGS17A*K1180, LGS37A*G3013, LGS37A*G3080, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ37A*G3013, LGZ57A*F1102, LGZ67A*F1102, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	N/A	Terminal Block	Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
4	61199	Screw	All models except AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LGH37A*F1182, LGS17A*K1180, LGS37A*G3013, LGS37A*G3080, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ37A*G3013, LGZ57A*F1102, LGZ67A*F1102, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
5	503688	Screw	

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

Rear Bulkhead, Felt Seal, Cylinder Roller and Terminal Block - 3 Phase Models

Models FDE3TRGS401NW22, FEN16A*G4018, FEN17A*G4018, FES16A*G4018, LEN27A*G4008,
LEN27A*G4018, LEN27A*G99M3, LEN37A*G4018, LES27A*G4000, LES27A*G4018, LES28A*G4018,
LES37A*G4018, LEZ27A*G4018 and LEZ37A*G4018

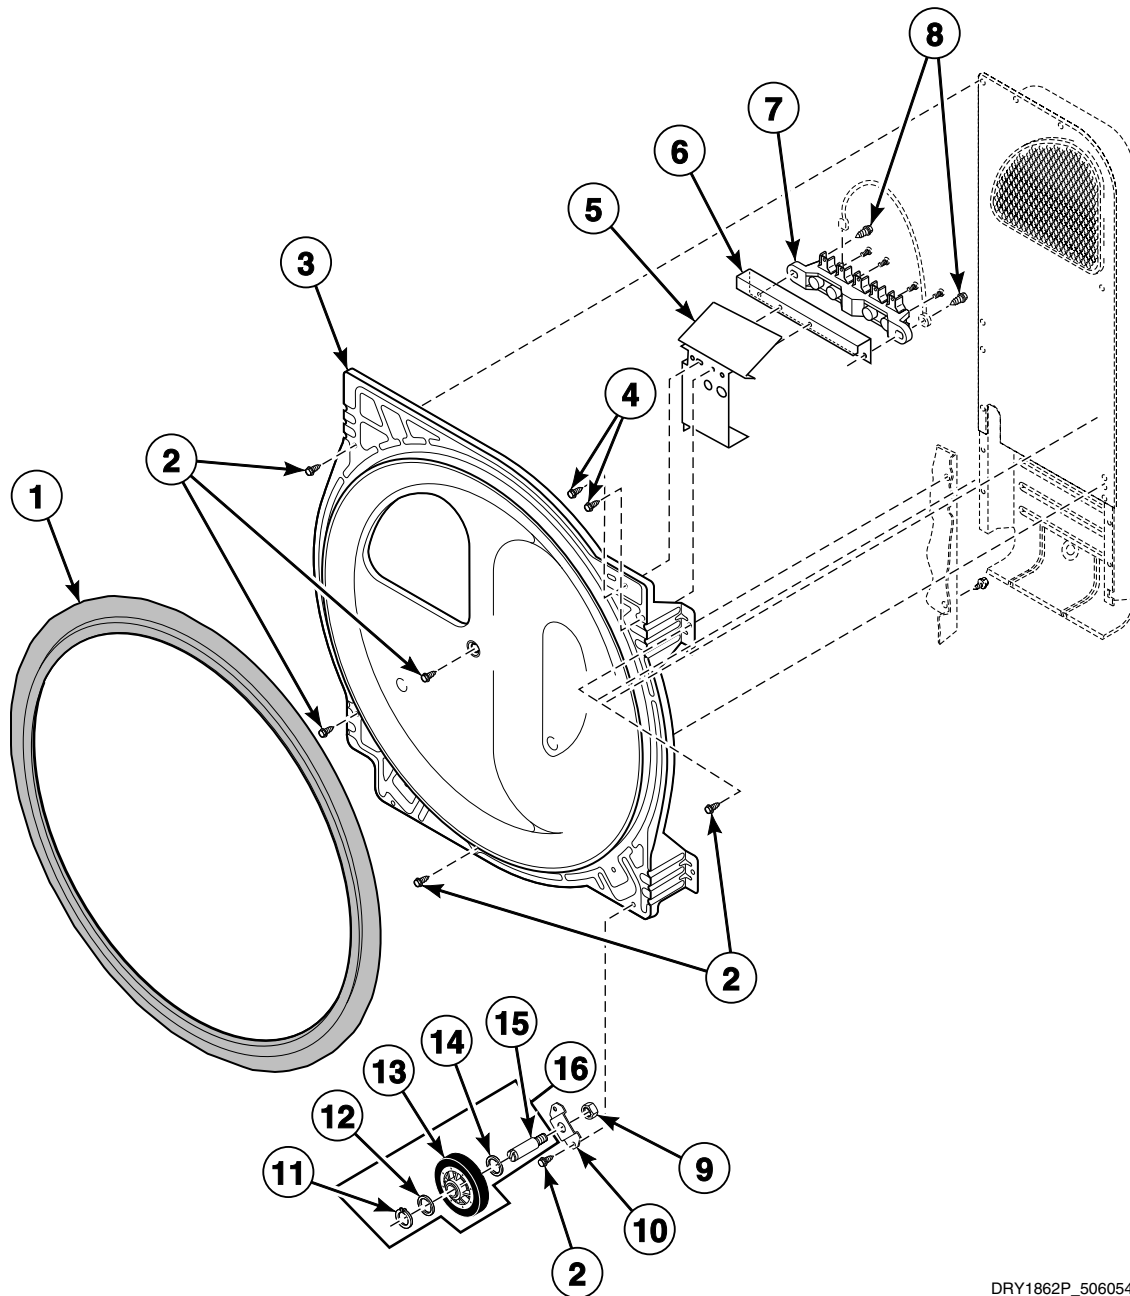

DRY1862P_506054


Rear Bulkhead, Felt Seal, Cylinder Roller and Terminal Block - 3 Phase Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	510207P	Cylinder Seal Assembly	
	511637P	Adhesive	For cylinder seal
	RB170001	Seal Kit	Includes 2 cylinder seals, 510238P Blower Housing Seal and 511637P Adhesive
2	503688	Screw	
3	510905WP	Rear Bulkhead Assembly	White; Includes item 1; Models LEN37A*G4018, LES37A*G4018 and LEZ37A*G4018
	505246	Rear Bulkhead Assembly	Stainless steel; Includes item 1; Model LEN27A*G99M3
	511082P	Rear Bulkhead Assembly	Galvanized; Includes item 1; All other models
4	501285	Screw	
5	505768	Terminal Block Shield	
6	505875	Terminal Block Support Bracket	
7	505876	Terminal Block Assembly	
8	503661	Screw	
9	56156	Nut	
10	510100	Cylinder Roller Bracket	
11	23748	Retaining Ring	
12	52549	Washer	
13	510708P	Cylinder Roller	
14	504082	Washer	
15	56461P	Shaft	
16	RB170002	Roller Kit	Includes items 11-15

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Heater Duct and Element Assembly - 1 Phase Models

All Electric Models Except FDE3TRGS401NW22, FEN16A*G4018, FEN17A*G4018, FES16A*G4018, LEN27A*G4008, LEN27A*G4018, LEN27A*G99M3, LEN37A*G4018, LES27A*G4000, LES27A*G4018, LES28A*G4018, LES37A*G4018, LEZ27A*G4018 and LEZ37A*G4018

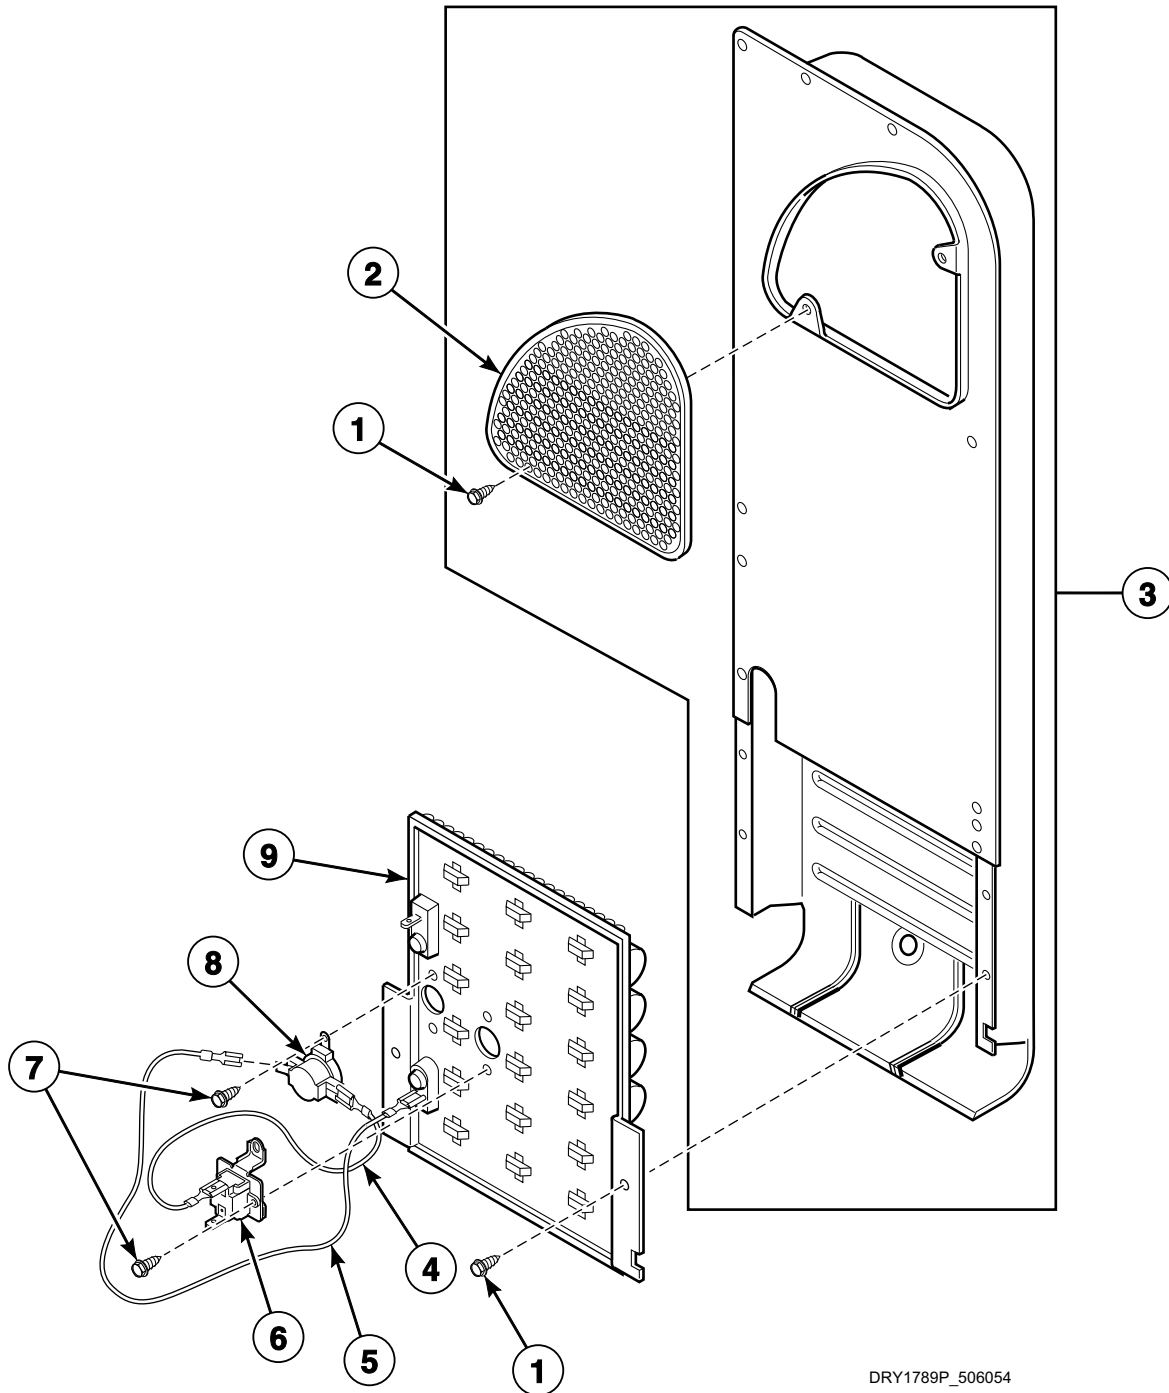


Heater Duct and Element Assembly - 1 Phase Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	503688	Screw	
2	500820	Outlet Cover	
3	510025P	Heater Duct and Screw Assembly	Includes items 1 and 2
4	510528	Wire Assembly	Orange; Thermostat jumper; Attaches to heater assembly
5	510527	Wire Assembly	Black; Fuse jumper; Attaches to heater assembly
6	511412	Thermal Fuse Assembly	
7	23222	Screw	
8	510700	Limit Thermostat	Models LES17A*F4500, LES17A*M4588, LES27A*G4500, LES27A*G4518, LES33A*F4562 and LEZ37A*G5618
	510701	Limit Thermostat	All other models
9	510326P	Heater Assembly	240 Volt/50 Hertz; 4.8 kW; Models FEN17A*G3018, LEN27A*G3008, LEN27A*G3018, LEN37A*G3018, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES27A*G3018, LES37A*F3000, LES37A*F3028, LES37A*G3018, LEZ27A*G3018, LEZ37A*F3000 and LEZ37A*G3018
	510327P	Heater Assembly	240 Volt/50 Hertz; 4 kW; Models ADE3TFWS431AW01, ADE3TRWS431AW01, ADE3TRWS431NW22, ADE32FSS431AN01, ADE32FSS431NN22, FES17A*F4350, LEG37A*F4350, LEK37A*F4350 and LES37A*F4350
	510328P	Heater Assembly	240 Volt/50 or 60 Hertz; 3.1 kW; Models LES17A*F4500, LES17A*M4588, LES27A*G4500, LES27A*G4518 and LES33A*F4562
	511503P	Heater Assembly	240 Volt/60 Hertz; 2.8 kW; Model LEZ37A*G5618
	510329P	Heater Assembly	240 Volt/60 Hertz; 5.35 kW; Model ADE41FSS171TN03
	510324P	Heater Assembly	240 Volt/60 Hertz; 5 kW; All other models

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Heater Kit Assembly - 1 Phase Models

All Electric Models Except FDE3TRGS401NW22, FEN16A*G4018, FEN17A*G4018, FES16A*G4018, LEN27A*G4008, LEN27A*G4018, LEN27A*G99M3, LEN37A*G4018, LES27A*G4000, LES27A*G4018, LES28A*G4018, LES37A*G4018, LEZ27A*G4018 and LEZ37A*G4018

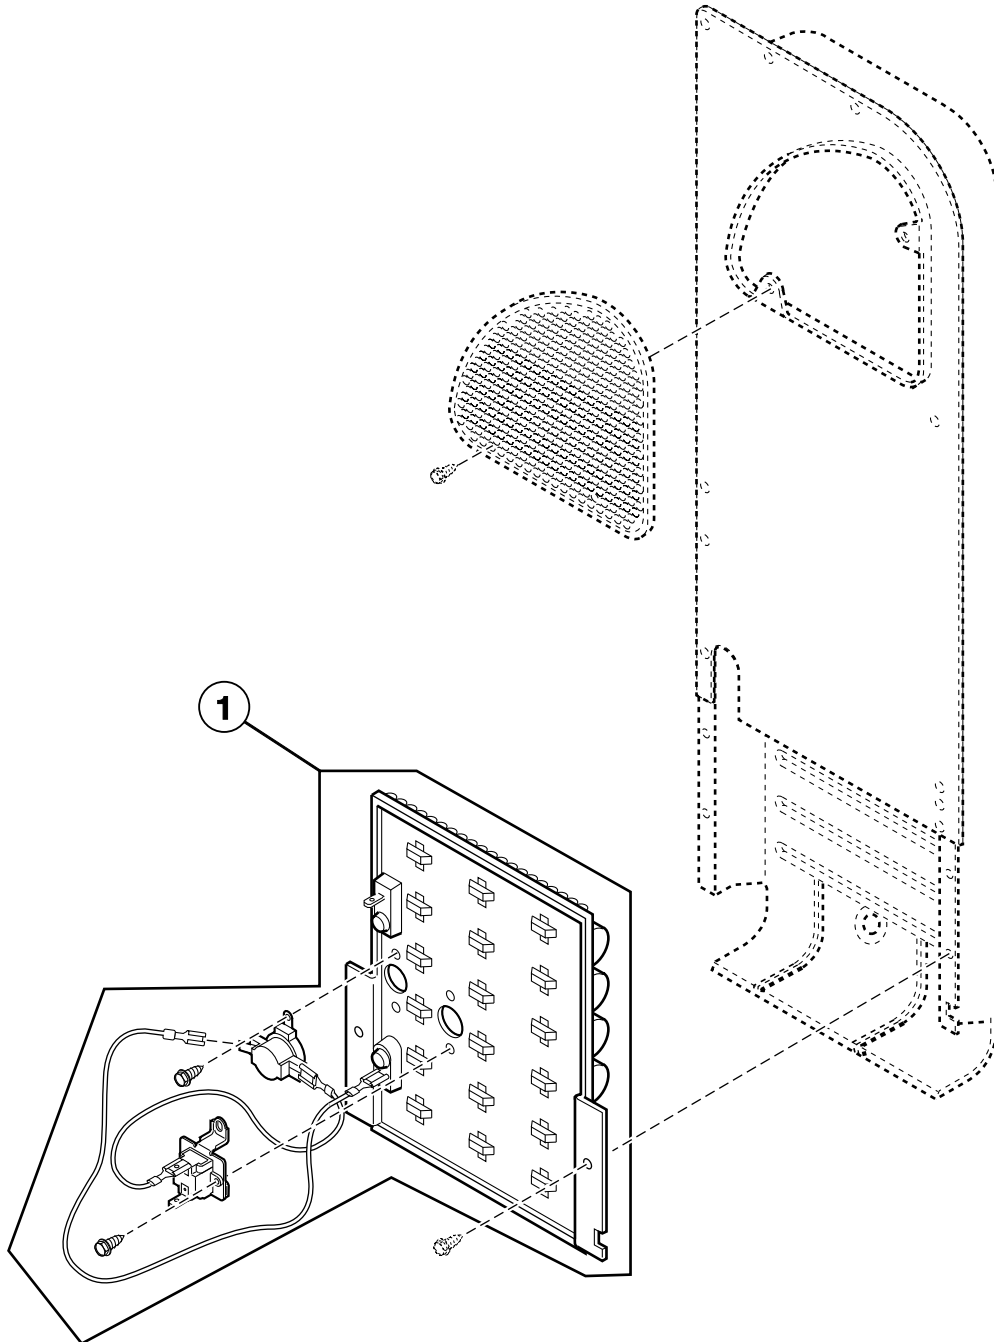

DRY1789PA_506054


Heater Kit Assembly - 1 Phase Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	61929	Heater Kit Assembly	240 Volt/50 Hertz; 4.8 kW; Includes thermostat, fuse and wiring; Models FEN17A*G3018, LEN27A*G3008, LEN27A*G3018, LEN37A*G3018, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES27A*G3018, LES37A*F3000, LES37A*F3028, LES37A*G3018, LEZ27A*G3018, LEZ37A*F3000 and LEZ37A*G3018
	61930	Heater Kit Assembly	240 Volt/50 Hertz; 4 kW; Includes thermostat, fuse and wiring; Models ADE3TFWS431AW01, ADE3TRWS431AW01, ADE3TRWS431NW22, ADE32FSS431AN01, ADE32FSS431NN22, FES17A*F4350, LEG37A*F4350, LEK37A*F4350 and LES37A*F4350
	61931	Heater Kit Assembly	240 Volt/50 or 60 Hertz; 3.1 kW; Includes thermostat, fuse and wiring; Models LES17A*F4500, LES17A*M4588, LES27A*G4500, LES27A*G4518 and LES33A*F4562
	966P3	Heater Kit	240 Volt/60 Hertz; 2.8 kW; Includes thermostat, fuse and wiring; Models ADE32FSS541RN01, AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, BDE30FGS171CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CEZ68A*F1702, FES17A*F3300, FEU17A*F1702, FEZ17A*F1702, LDE3TRWS331TW05, LEB07A*F1709, LED17A*F1700, LEH37A*F3300, LES37A*F3300, LES37A*F3327, LES37A*F5412, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, MDE3TRWS331TW06, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01 and ZDE4BRGS171CW01
	61927	Heater Kit Assembly	240 Volt/60 Hertz; 5 kW; Includes thermostat, fuse and wiring; Models ADE32FSS541RN01, AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, BDE30FGS171CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CEZ68A*F1702, FES17A*F3300, FEU17A*F1702, FEZ17A*F1702, LDE3TRWS331TW05, LEB07A*F1709, LED17A*F1700, LEH37A*F3300, LES37A*F3300, LES37A*F3327, LES37A*F5412, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, MDE3TRWS331TW06, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01 and ZDE4BRGS171CW01
	964P3	Heater Kit	240 Volt/60 Hertz; 5.35 kW; Includes thermostat, fuse and wiring; Model ADE41FSS171TN03

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Heater Duct and Element Assembly - 3 Phase Models

Models FDE3TRGS401NW22, FEN16A*G4018, FEN17A*G4018, FES16A*G4018, LEN27A*G4008, LEN27A*G4018, LEN27A*G99M3, LEN37A*G4018, LES27A*G4000, LES27A*G4018, LES28A*G4018, LES37A*G4018, LEZ27A*G4018 and LEZ37A*G4018

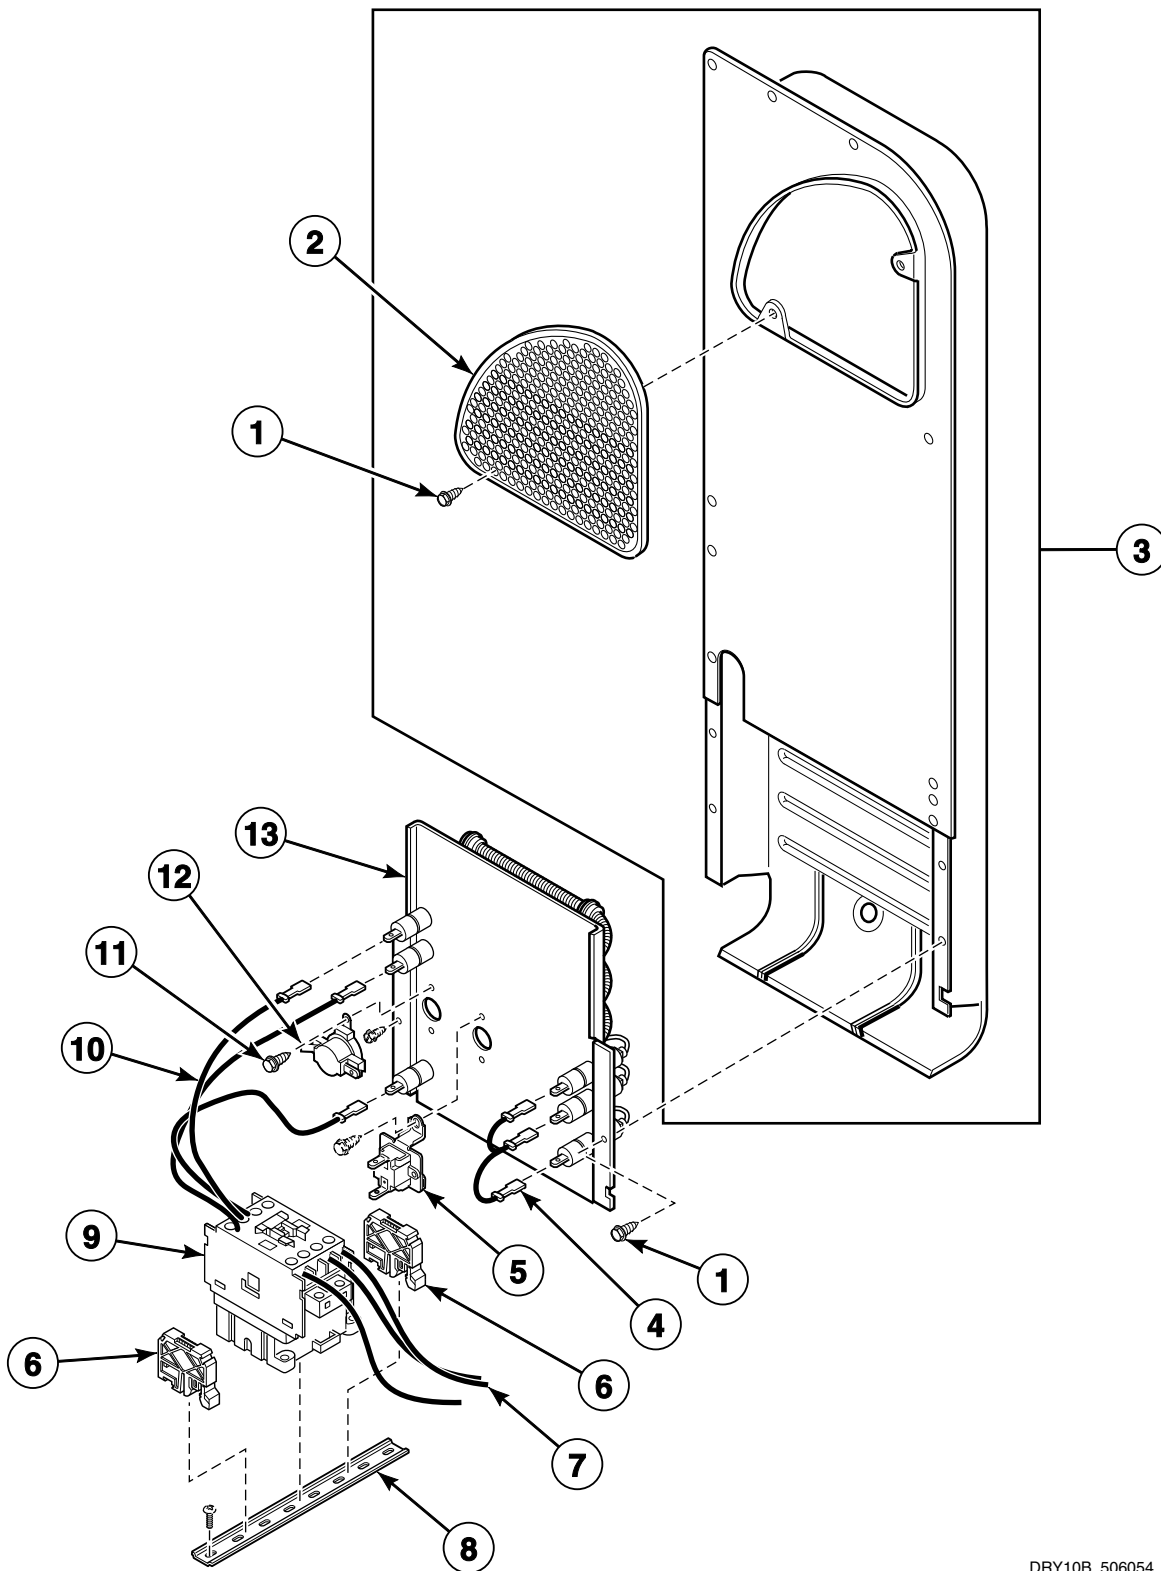

DRY10B_506054


Heater Duct and Element Assembly - 3 Phase Models

REF	PART NO.	DESCRIPTION	COMMENTS
	756P3	Conversion Kit	400 Volt, 4 wire WYE to 240 Volt, 3 wire Delta
1	503688	Screw	
2	500820	Outlet Cover	
3	510025P	Heater Duct and Screw Assembly	Includes items 1 and 2
4	511270	Jumper Wire Assembly	3 Phase
5	511412	Thermal Fuse Assembly	
6	70121001	End Stop	
7	511112P	Block to Relay Harness	
8	M412693	Din Rail	
9	F330177P	Contactor	
10	511114P	Relay to Heater Harness	
11	23222	Screw	
12	510701	Limit Thermostat	
13	511014P	Heater	400 Volt/3 Phase

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Heater Duct Assembly

Gas Models

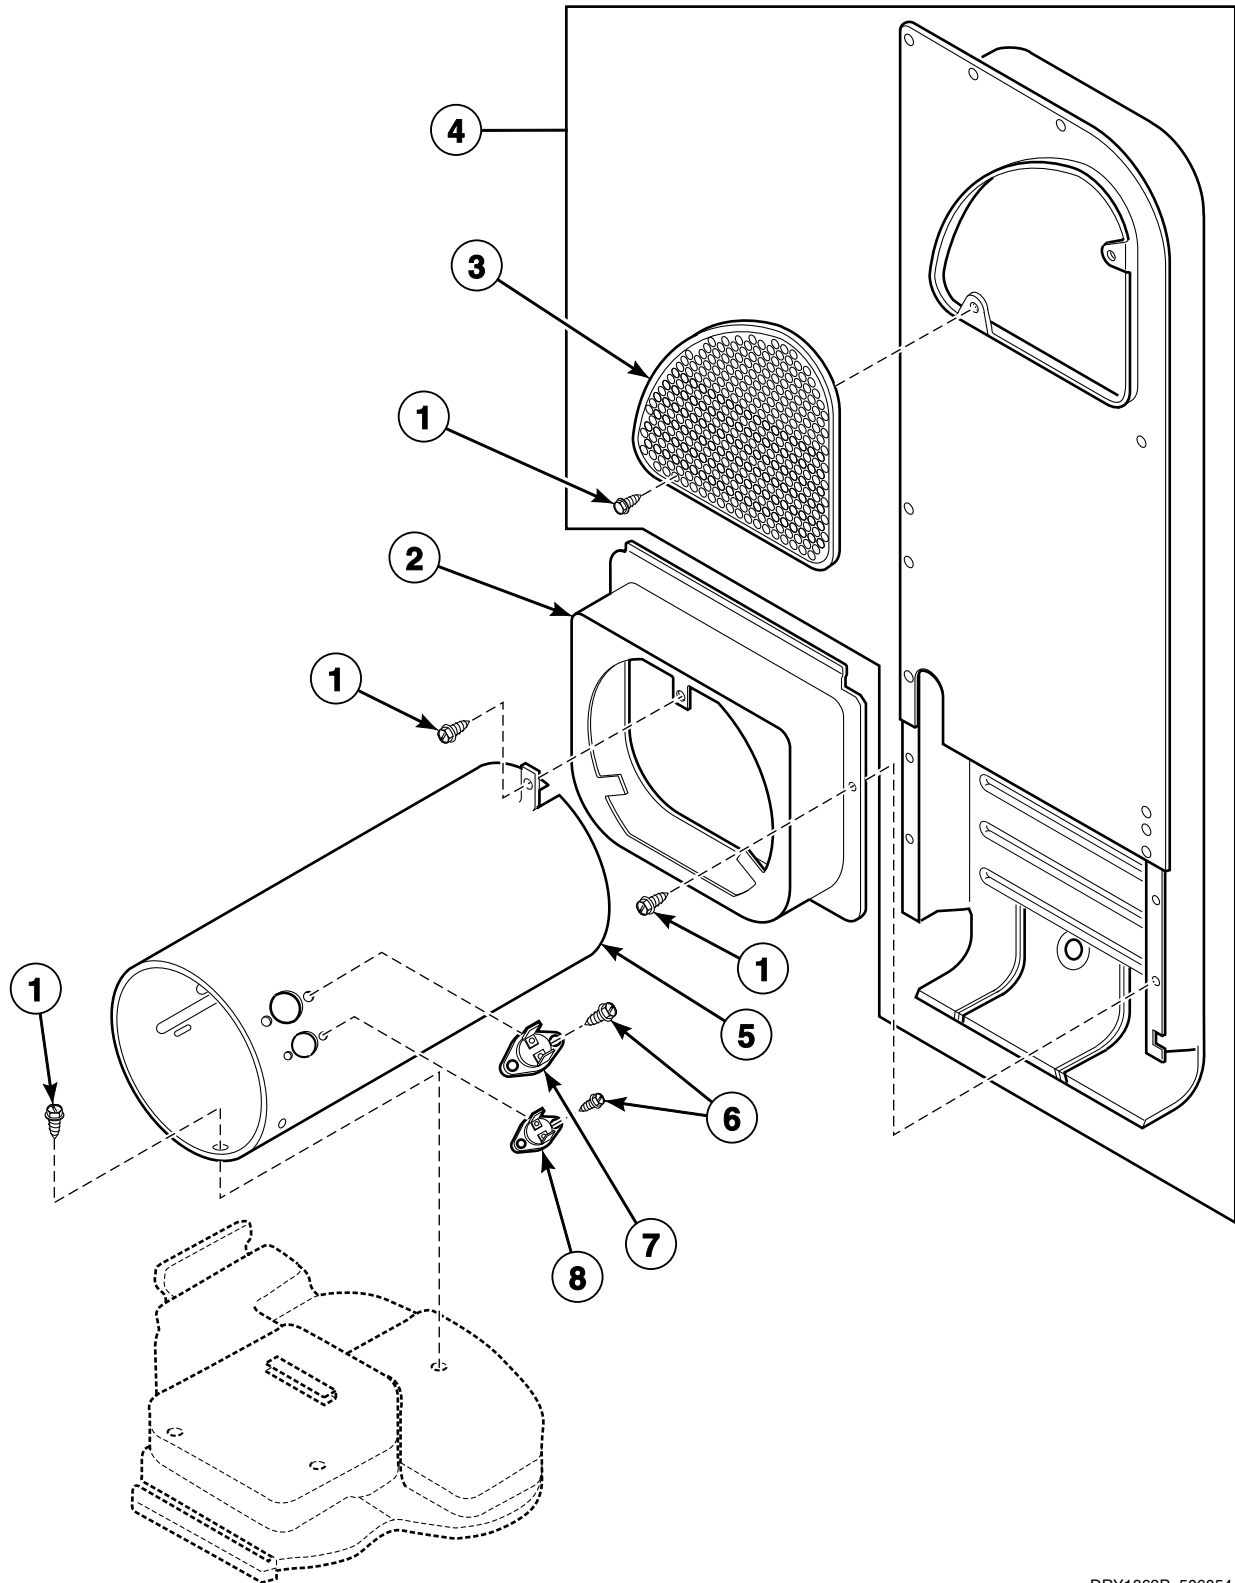

DRY1863P_506054


Heater Duct Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
1	503688	Screw	
2	510101	Heat Duct Shroud	
3	500820	Outlet Cover	
4	510025P	Heater Duct and Screw Assembly	Includes items 1 and 3
5	510132	Combustion Duct	Models LGG37A*F3058, LGK37A*F3058 and LGS37A*F3058
	510131	Combustion Duct	All other models
6	51782	Screw	
7	510702	Limit Thermostat	Auto reset; Black
8	510703	Thermostat	Manual reset; Models LGG37A*F3058, LGK37A*F3058 and LGS37A*F3058

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Gas Valve and Igniter

All Gas Models Except LGG37A*F3058, LGK37A*F3058, LGS37A*F3058,
LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013

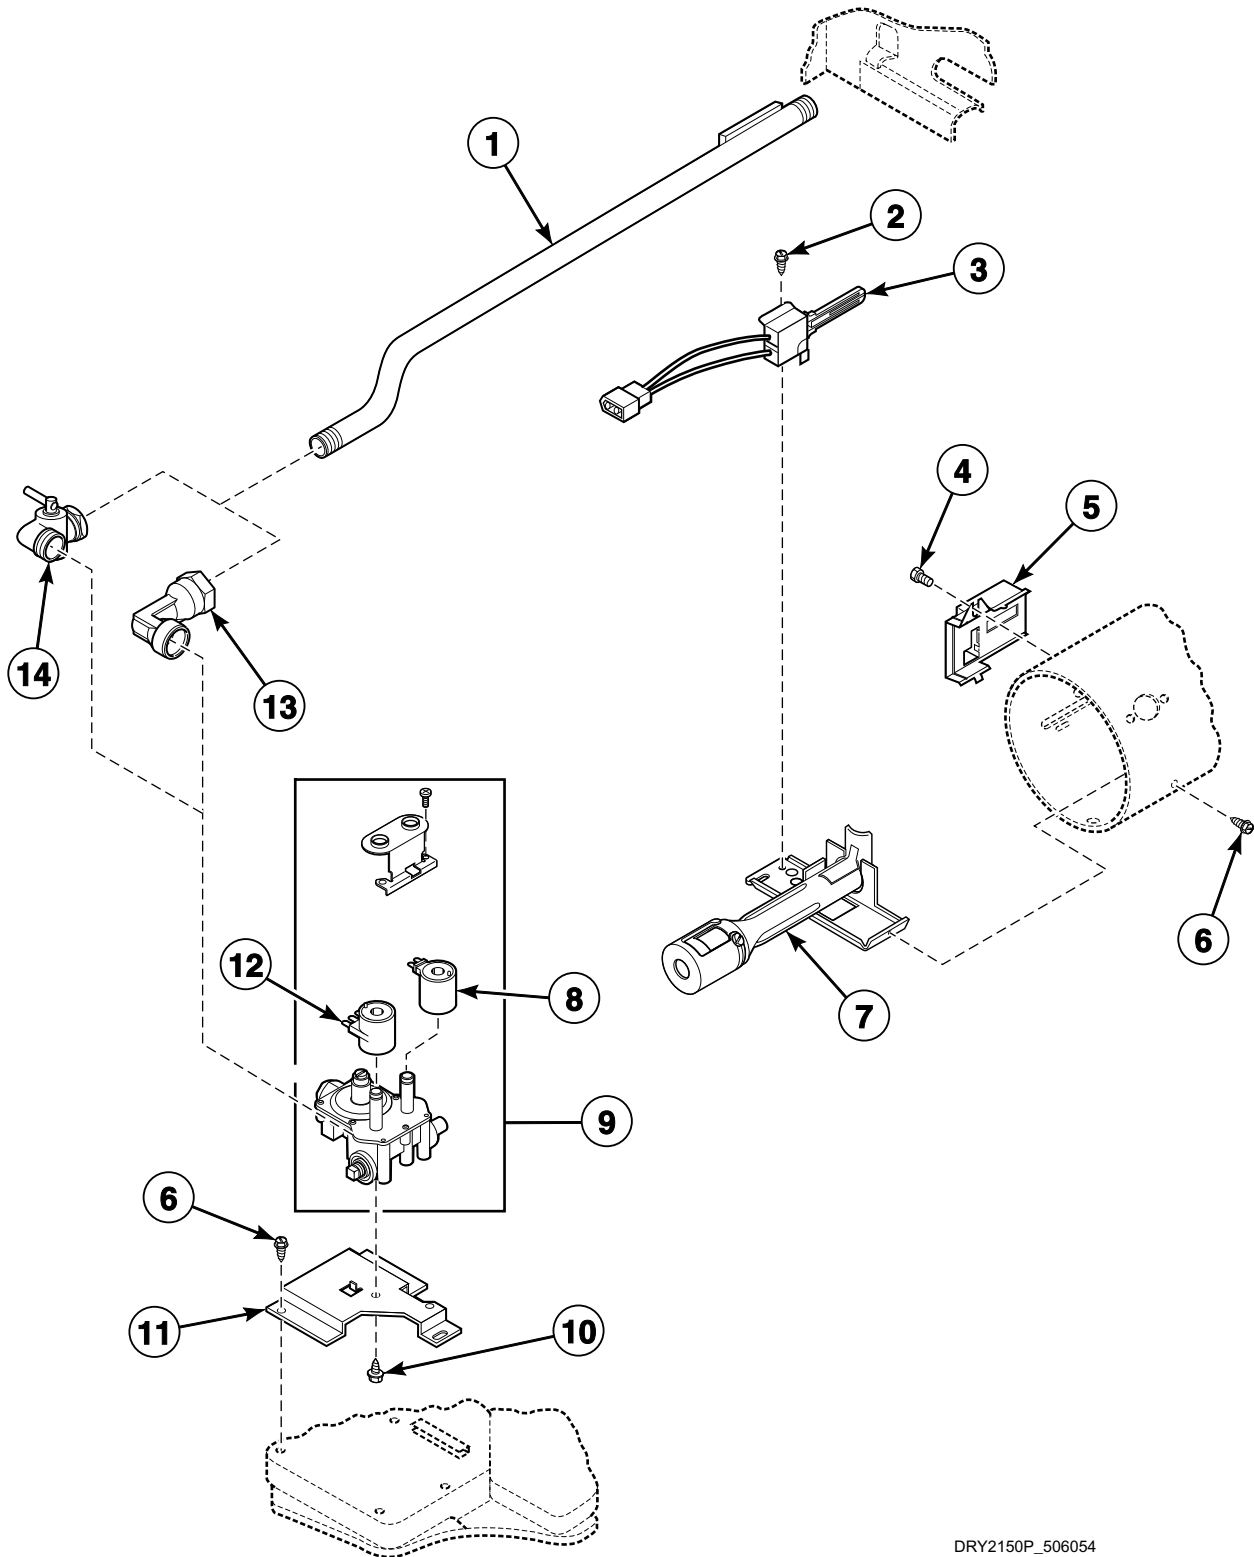

DRY2150P_506054

Gas Valve and Igniter



REF	PART NO.	DESCRIPTION	COMMENTS
1	510204	Lead-In Pipe Assembly	
2	51782	Screw	
3	510184P	Igniter and Bracket Assembly	
4	23222	Screw	
5	510213	Sensor	
6	503688	Screw	
7	510149P	Burner Assembly	
8	58804B	Secondary Coil	60 Hertz; Models ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LDG3TRWS111TW05, LGH37A*F1182, LGH37A*F5423, LGS17A*K1180, LGS37A*F5412, LGS37A*F5423, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	59063B	Secondary Coil	50 Hertz; All other models
9	510506P	Gas Valve Assembly	60 Hertz; 22,500 Btu; Models ADG32FSS301AN01, ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LDG3TRWS111TW05, LGS17A*K1180, LGS37A*F5412, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	60353P	Gas Valve Assembly	L.P.; 60 Hertz; Models LGH37A*F1182, LGH37A*F5423 and LGS37A*F5423
	59063P	Gas Valve Assembly	50 Hertz; 20,000 Btu; For L.P. models, order 401P3 L.P. Conversion Kit when ordering gas valve assembly; All other models
10	56124	Screw	
11	510128	Gas Valve Mounting Bracket	
12	58804A	Booster and Holding Coil	60 Hertz; Models ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LDG3TRWS111TW05, LGH37A*F1182, LGH37A*F5423, LGS17A*K1180, LGS37A*F5412, LGS37A*F5423, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	59063A	Booster and Holding Coil	50 Hertz; All other models
13	513072	Elbow	Models ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102 and CGZ68A*F1102 starting Serial No. 080601; Models ADG32FSS301AN01, LGH37A*F5423, LGS37A*F5423, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
14	510205	Elbow Shut-Off Valve	Models AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102 and CGZ68A*F1102 through Serial No. 080600; All other models

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

Gas Conversion Kits

All Gas Models Except LGG37A*F3058, LGK37A*F3058, LGS37A*F3058,
LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013

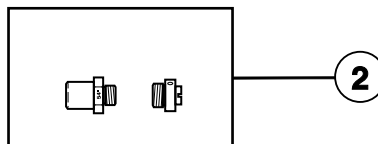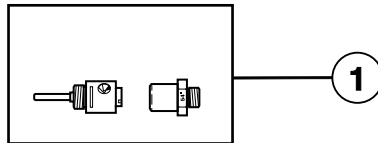

DRY2151P_506054


Gas Conversion Kits

REF	PART NO.	DESCRIPTION	COMMENTS
1	599P3	L.P. Conversion Kit	Used to convert dryers from Natural Gas (N.G.) or Mixed Gas to Liquid Petroleum Gas (L.P.) for 20,000 Btu; Models FGN16A*M3013, FGN17A*M3013, LGN27A*M3008, LGN27A*M3013, LGN37A*M3013, LGS17A*F3020, LGS17A*M3020, LGS17A*M3082, LGS27A*M3013, LGS27A*M3080, LGS37A*M3013, LGS37A*M3080, LGS38A*M3013, LGS38A*M3020, LGS40A*M3020, LGZ27A*M3013 and LGZ37A*M3013
	401P3	L.P. Conversion Kit	Used to convert dryers from N.G. or Mixed Gas to L.P. for 20,000 Btu; Models ADG3TFWS301AW01, ADG3TRWS301AW01, ADG32FSS301AN01, FGS17A*F3060, LGK37A*F3060, LGS17A*F3081, LGS37A*F3000, LGS37A*F3022, LGS37A*F3028, LGS37A*F3060, LGS37A*F3080 and LGZ37A*F3000
	649P3	L.P. Conversion Kit	Used to convert dryers from N.G. or Mixed Gas to L.P. for 22,500 Btu; All other models
2	402P3	N.G. Conversion Kit	Used to convert dryers from L.P. to N.G. or Mixed Gas for 20,000 Btu; Models ADG3TFWS301AW01, ADG3TRWS301AW01, ADG32FSS301AN01, FGS17A*F3060, LGK37A*F3060, LGS17A*F3081, LGS37A*F3000, LGS37A*F3022, LGS37A*F3028, LGS37A*F3060, LGS37A*F3080 and LGZ37A*F3000
	650P3	N.G. Conversion Kit	Used to convert dryers from L.P. to N.G. or Mixed Gas for 22,500 Btu; Models ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LDG3TRWS111TW05, LGH37A*F1182, LGH37A*F5423, LGS17A*K1180, LGS37A*F5412, LGS37A*F5423, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Gas Valve, Igniter, Ignition Control and Gas Conversion Kits

Models LGG37A*F3058, LGK37A*F3058, LGS37A*F3058, LGS37A*G3013,
LGS37A*G3080 and LGZ37A*G3013

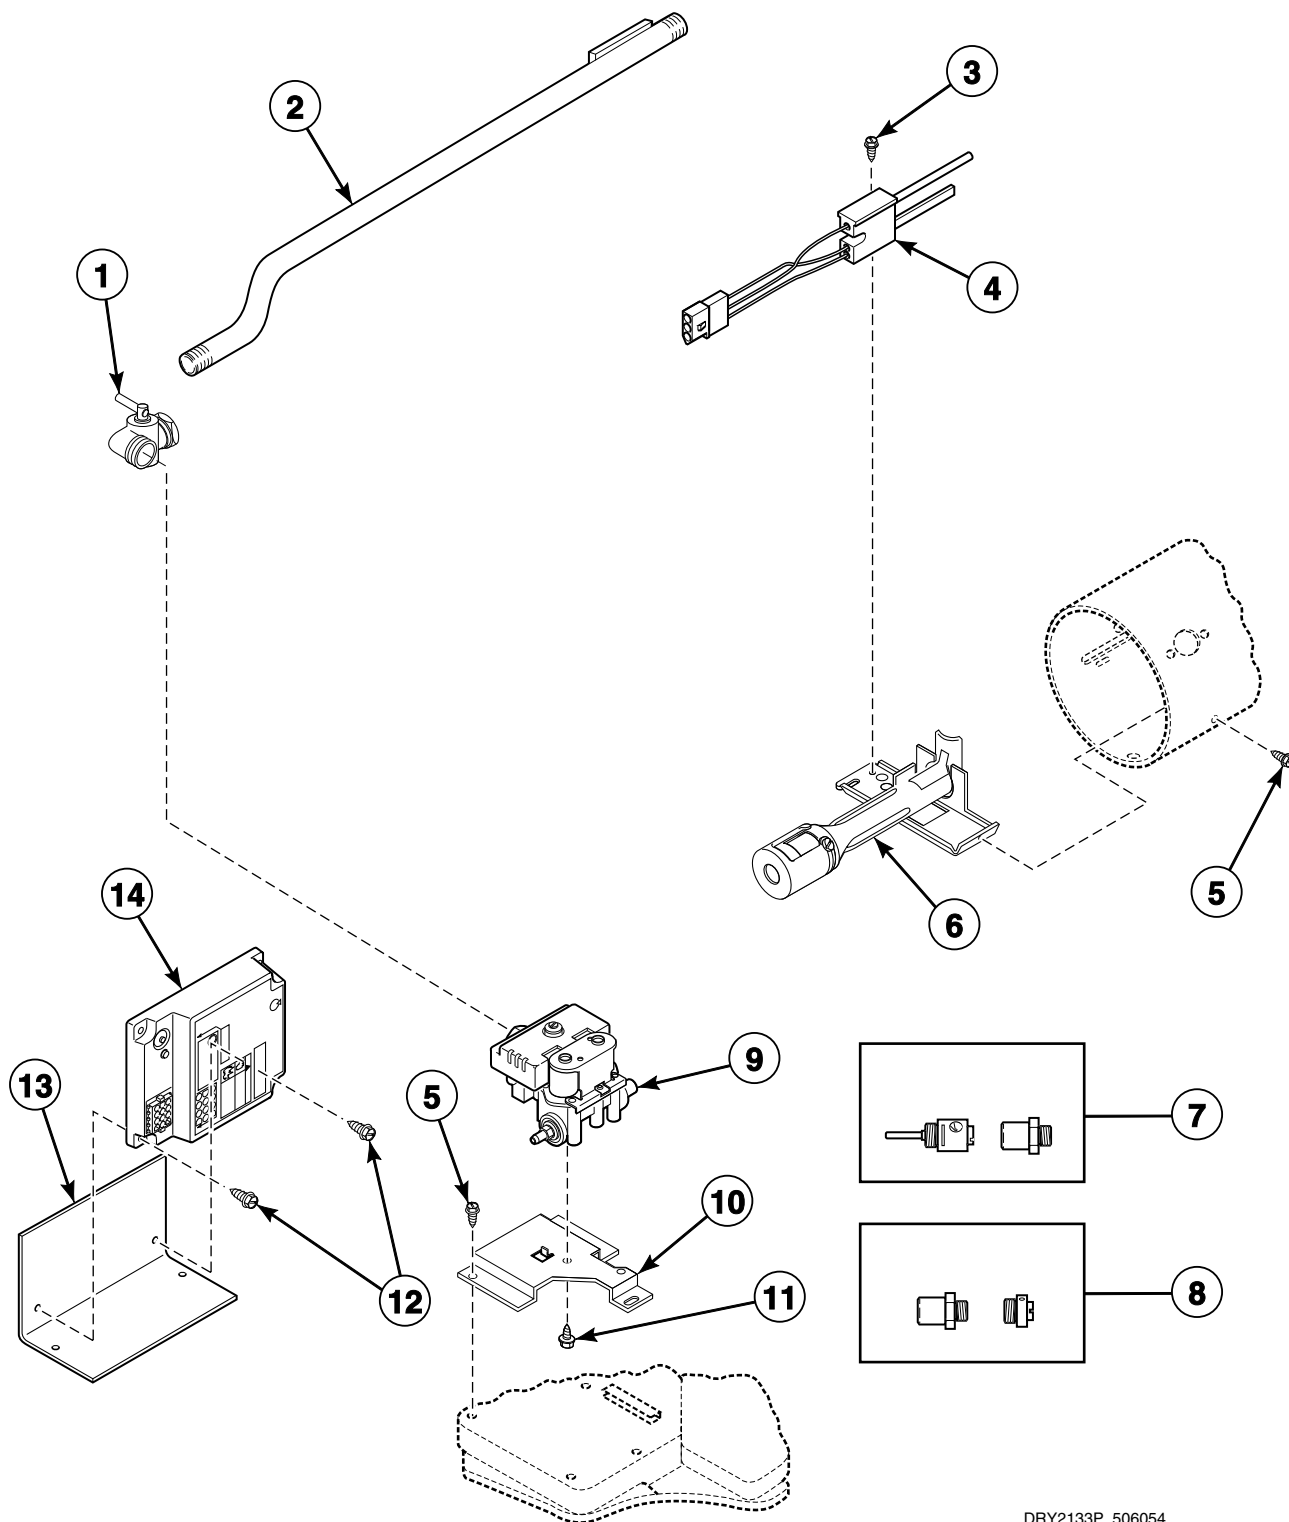


DRY2133P_506054

Gas Valve, Igniter, Ignition Control and Gas Conversion Kits

REF	PART NO.	DESCRIPTION	COMMENTS
1	510205	Elbow Shut-Off Valve	
2	510204	Lead-In Pipe Assembly	
3	51782	Screw	
4	502995P	Igniter and Sensor Assembly	
5	503688	Screw	
6	510149P	Burner Assembly	
7	599P3	L.P. Conversion Kit	Natural Gas (N.G.) to Liquid Petroleum Gas (L.P.); Models LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
	401P3	L.P. Conversion Kit	N.G. to L.P.; 20,000 Btu; All other models
8	402P3	N.G. Conversion Kit	L.P. to N.G.; 20,000 Btu; All other models
9	502423P	Gas Valve Assembly	Includes 502423A Main and Redundant Coil
10	510128	Gas Valve Mounting Bracket	
11	56124	Screw	
12	502535	Screw	
13	502425	Ignition Control Bracket	
14	502994P	Igniter Control	

* Add Letter To Designate Color. L - Almond Q - Bisque W - White

Cabinet, Exhaust Duct and Base

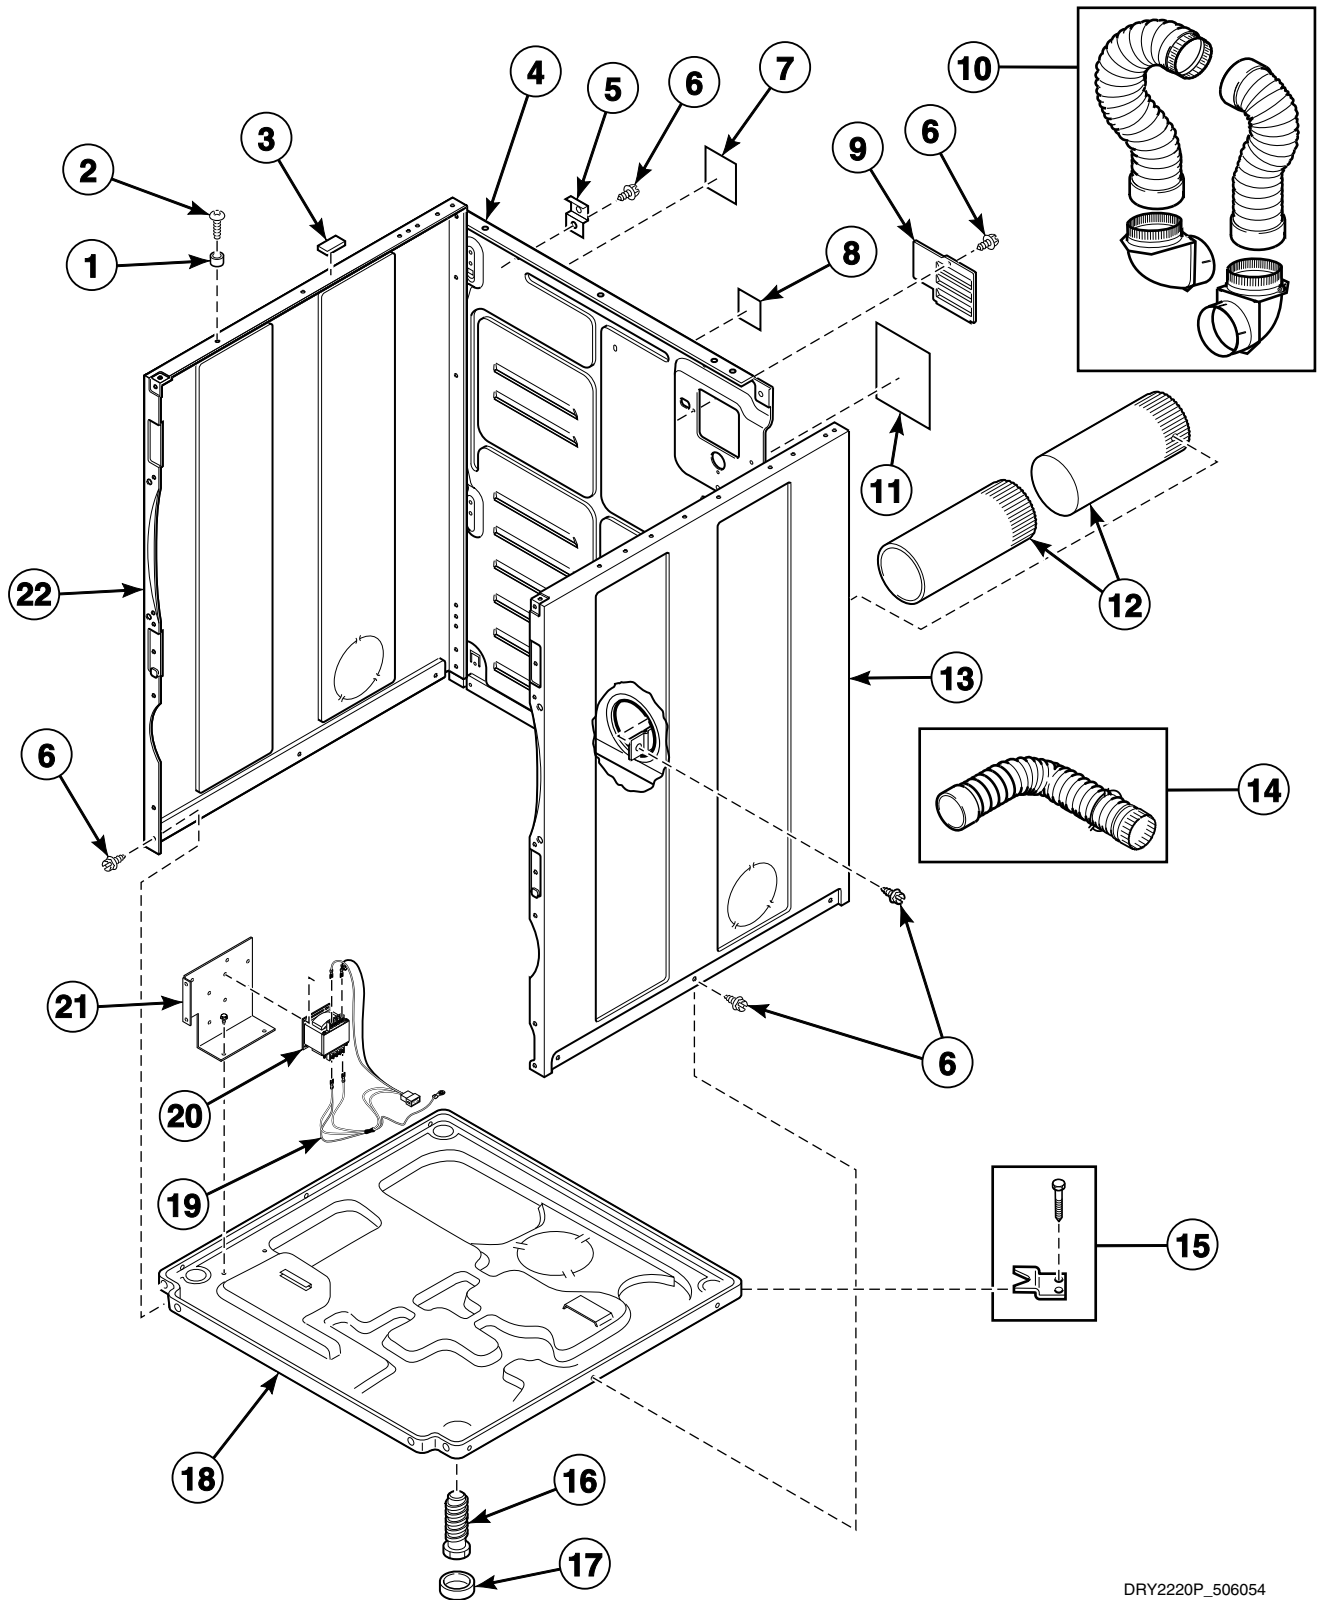


DRY2220P_506054

Cabinet, Exhaust Duct and Base

REF	PART NO.	DESCRIPTION	COMMENTS
	122P4P	Porcelain Touch-Up Paint	White
	370P4P	Porcelain Touch-Up Paint	Bisque
	215P4P	Porcelain Touch-Up Paint	Almond
1	56079	Panel Locator	
2	512921	Screw	Use with stainless steel panels
	39733	Screw	
3	56128	Bumper Pad	
4	510005P	Cabinet Rear Panel	
5	510136	Top Hinge	
6	503688	Screw	
7	511004	Gas Clearance Label	Gas models
8	803260	Warning Label	Disconnect power; Models ADE3TFWS431AW01, ADE3TRWS431AW01, ADE3TRWS431NW22, ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG41FSS111TN03, BDE30FGS171CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, FDE3TRGS401NW22, FEN17A*G3018, FEN17A*G4018, FES17A*F3300, FES17A*F4350, FEU17A*F1702, FEZ17A*F1702, LDE3TRWS331TW05, LED17A*F1700, LEH37A*F3300, LEN27A*G3008, LEN27A*G3018, LEN27A*G4008, LEN27A*G4018, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES27A*G3018, LES27A*G4500, LES27A*G4518, LES27A*G4018, LES28A*G4018, LES33A*F4562, LES37A*F3000, LES37A*F3300, LES37A*F4350, LES37A*F5412, LEZ27A*F1702, LEZ27A*G3018, LEZ27A*G4018, LEZ37A*F3000, MDE3TRWS331TW06, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01 and ZDE4BRGS171CW01
9	510903	Access Panel Plate	
10	521P3	Flexible Venting Kit	
11	511005	Electric Clearance Label	Electric models
12	510137	Exhaust Duct	Each dryer requires 2 pieces
13	512952	Cabinet Side Panel	Stainless steel; Right; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	510002WP	Cabinet Side Panel	White; Right; All other models
	510002LP	Cabinet Side Panel	Almond; Right; All other models
	510002QP	Cabinet Side Panel	Bisque; Right; All other models
	510002GP	Cabinet Side Panel	Gray; Right; All other models
14	528P3	Directional Exhaust Kit	Used to vent dryer out the sides or bottom
15	526P3	Hold Down Kit	For mobile home installations
16	510135	Leveling Leg	
17	501855	Rubber Foot	
18	510084	Dryer Base	
19	511303	Wire Harness Assembly	Transformer adapter; Includes 502592 Fuse (3.15 Amp, 250 Volt); Models ADG3TFWS301AW01, ADG32FSS301AN01, FGN16A*M3013, FGN17A*M3013 and FGS17A*F3060
20	511658P	Transformer Kit	Includes item 18; Models ADG3TFWS301AW01, ADG32FSS301AN01, FGN16A*M3013, FGN17A*M3013 and FGS17A*F3060
21	511859	Contactor Bracket	Models ADG3TFWS301AW01, ADG32FSS301AN01, FGN16A*M3013, FGN17A*M3013 and FGS17A*F3060
22	512951	Cabinet Side Panel	Stainless steel; Left; Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, ADG41FSS111TN03, ZDE41FSS171CN01 and ZDG41FSS111CN01
	510001WP	Cabinet Side Panel	White; Left; All other models
	510001LP	Cabinet Side Panel	Almond; Left; All other models
	510001QP	Cabinet Side Panel	Bisque; Left; All other models
	510001GP	Cabinet Side Panel	Gray; Left; All other models

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

Power Cord

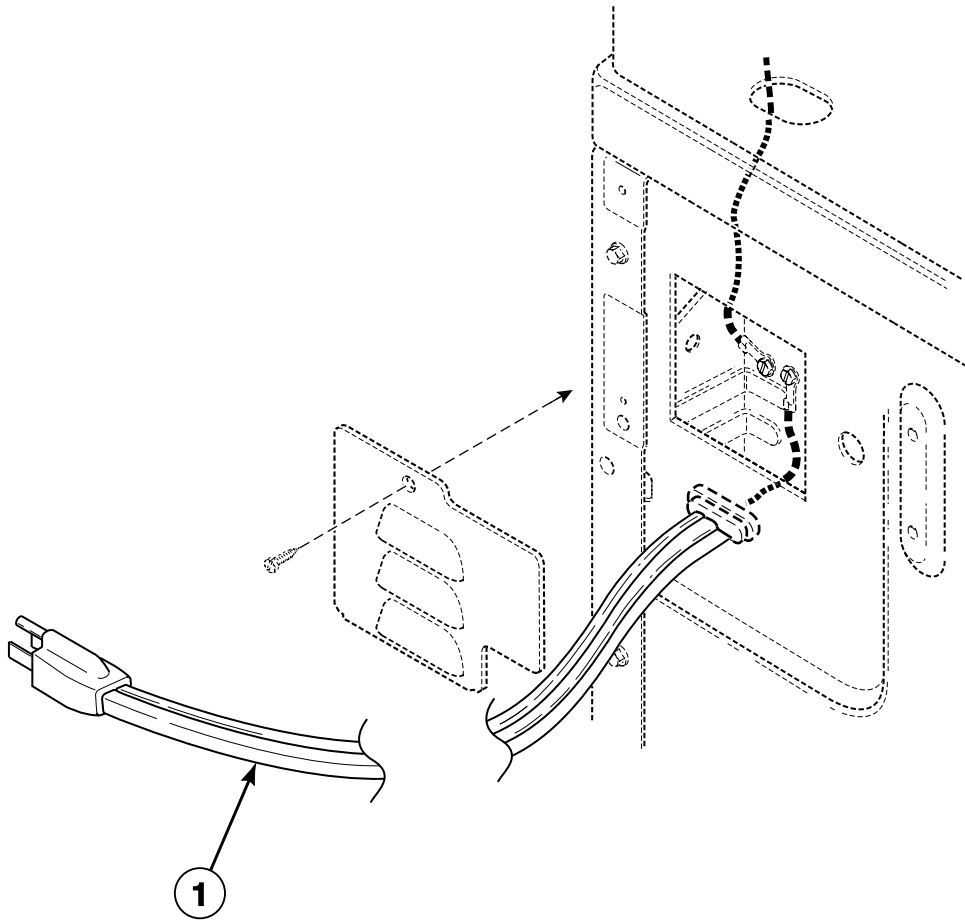

DRY1866PA_506054


Power Cord

REF	PART NO.	DESCRIPTION	COMMENTS
1	510505P	Lead-In Cord Assembly	Models AEZ17A*F1702, AEZ28A*F1702, AEZ68A*F1702, BDE30FGS171CW01, CDE3LRGS171CW01, CDE4BFGS171CW01, CEZ68A*F1702, FEU17A*F1702, FEZ17A*F1702, LEB07A*F1709, LED17A*F1700, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEY47A*F1709, LEZ27A*F1702, LEZ37A*F1702, LEZ57A*F1702, LEZ67A*F1702, ZDE30RGS171CW01, ZDE3LRGS171CW01, ZDE41FSS171CN01, ZDE4BFGS171CW01 and ZDE4BRGS171CW01
	61605P	Lead-In Cord Kit	Models ADE3TFWS431AW01, ADE3TRWS431AW01, ADE32FSS431AN01, FES17A*F4350, LEG37A*F4350, LEK37A*F4350 and LES37A*F4350
	N/A	Lead-In Cord	Models LGG37A*F3058, LGK37A*F3058, LGK37A*F3060, LGS37A*F3022, LGS37A*F3058, LGS37A*F3080, LGS37A*G3013, LGS37A*G3080 and LGZ37A*G3013
	503597	Lead-In Cord Assembly	Models ADE3TRWS431NW22, ADE32FSS431NN22, FEN17A*G3018, LEN27A*G3008, LEN27A*G3018, LEN37A*G3018, LES27A*G3018, LES27A*G4518, LES37A*G3018, LEZ27A*G3018, LEZ37A*F3000, LEZ37A*G3018, LEZ37A*G5618 and LGN27A*M3008
	56222	Lead-In Cord	Models ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LDG3TRWS111TW05, LGH37A*F1182, LGS17A*K1180, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	513632	Lead-In Cord	Model LES33A*F4562
	59373	Lead-In Cord	Models LES17A*M4588, LGH37A*F5423, LGS17A*F3020, LGS17A*F3081, LGS17A*M3020, LGS37A*F5412, LGS37A*F5423, LGS38A*M3020 and LGS40A*M3020
	506081	Power Cord Assembly	Models FGN16A*M3013, FGN17A*M3013, LGN27A*M3008, LGN27A*M3013, LGN37A*M3013, LGS27A*M3013, LGS27A*M3080, LGS37A*M3013, LGS37A*M3080, LGS38A*M3013, LGZ27A*M3013 and LGZ37A*M3013
	505945	Power Cord Assembly	Model LGS37A*F3028
	506106	Lead-In Cord Assembly	Models LEN27A*G4008, LEN27A*G99M3 and LES27A*G4000
	512019	Lead-In Cord	Models ADG3TFWS301AW01, ADG3TRWS301AW01, ADG32FSS301AN01, FGS17A*F3060 and LGS37A*F3060

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

Strain Relief

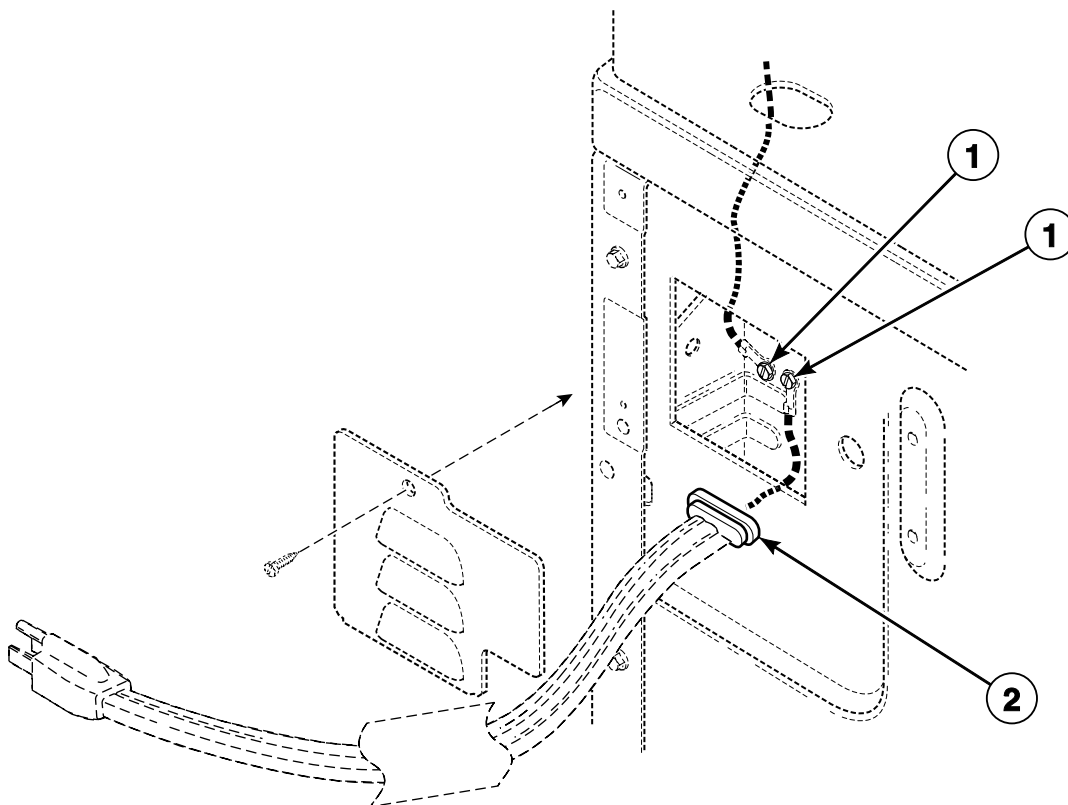

DRY1866PB_506054


Strain Relief

REF	PART NO.	DESCRIPTION	COMMENTS
	502496	Strain Relief Adapter	
1	513071	Screw	Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADG32FSS301AN01 and LGS40A*M3020
	20530	Screw	All other models
2	52113	Strain Relief	Models ADE3TFWS431AW01, ADE3TRWS431AW01, ADE3TRWS431NW22, ADE32FSS431AN01, ADE32FSS431NN22, FEN17A*G3018, FES17A*F4350, LEG37A*F4350, LEK37A*F4350, LEN27A*G3008, LEN27A*G3018, LEN37A*G3018, LES27A*G3018, LES27A*G4518, LES33A*F4562, LES37A*F4350, LES37A*G3018, LEZ27A*G3018, LEZ37A*G3018, LEZ37A*G5618, LGH37A*F5423, LGS17A*F3020, LGS17A*F3081, LGS37A*F5412 and LGS37A*F5423
	60298	Strain Relief	Models ADG3TRWS301AW01, LGK37A*F3060 and LGS37A*F3060
	N/A	Strain Relief	Models LGG37A*F3058, LGK37A*F3058 and LGS37A*F3058
	38384	Strain Relief	Models ADG41FSS111TN03, AGZ17A*F1102, AGZ28A*F1102, AGZ68A*F1102, BDG30FGS111CW01, CDG3LRGS111CW01, CDG4BFGS111CW01, CGZ68A*F1102, FGZ17A*F1102, LDG3TRWS111TW05, LGH37A*F1182, LGS17A*K1180, LGS37A*F3028, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ27A*F1102, LGZ37A*F1102, LGZ57A*F1102, LGZ67A*F1102, MDG3TRWS111TW06, ZDG30RGS111CW01, ZDG3LRGS111CW01, ZDG41FSS111CN01, ZDG4BFGS111CW01 and ZDG4BRGS111CW01
	502500	Strain Relief	Models FGN16A*M3013, FGN17A*M3013, LES17A*M4588, LGN27A*M3013, LGN37A*M3013, LGS17A*M3020, LGS17A*M3082, LGS27A*M3013, LGS27A*M3080, LGS37A*G3013, LGS37A*G3080, LGS37A*M3013, LGS37A*M3080, LGS38A*M3013, LGS38A*M3020, LGS40A*M3020, LGZ27A*M3013, LGZ37A*G3013 and LGZ37A*M3013

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

Terminal Block and Terminals


















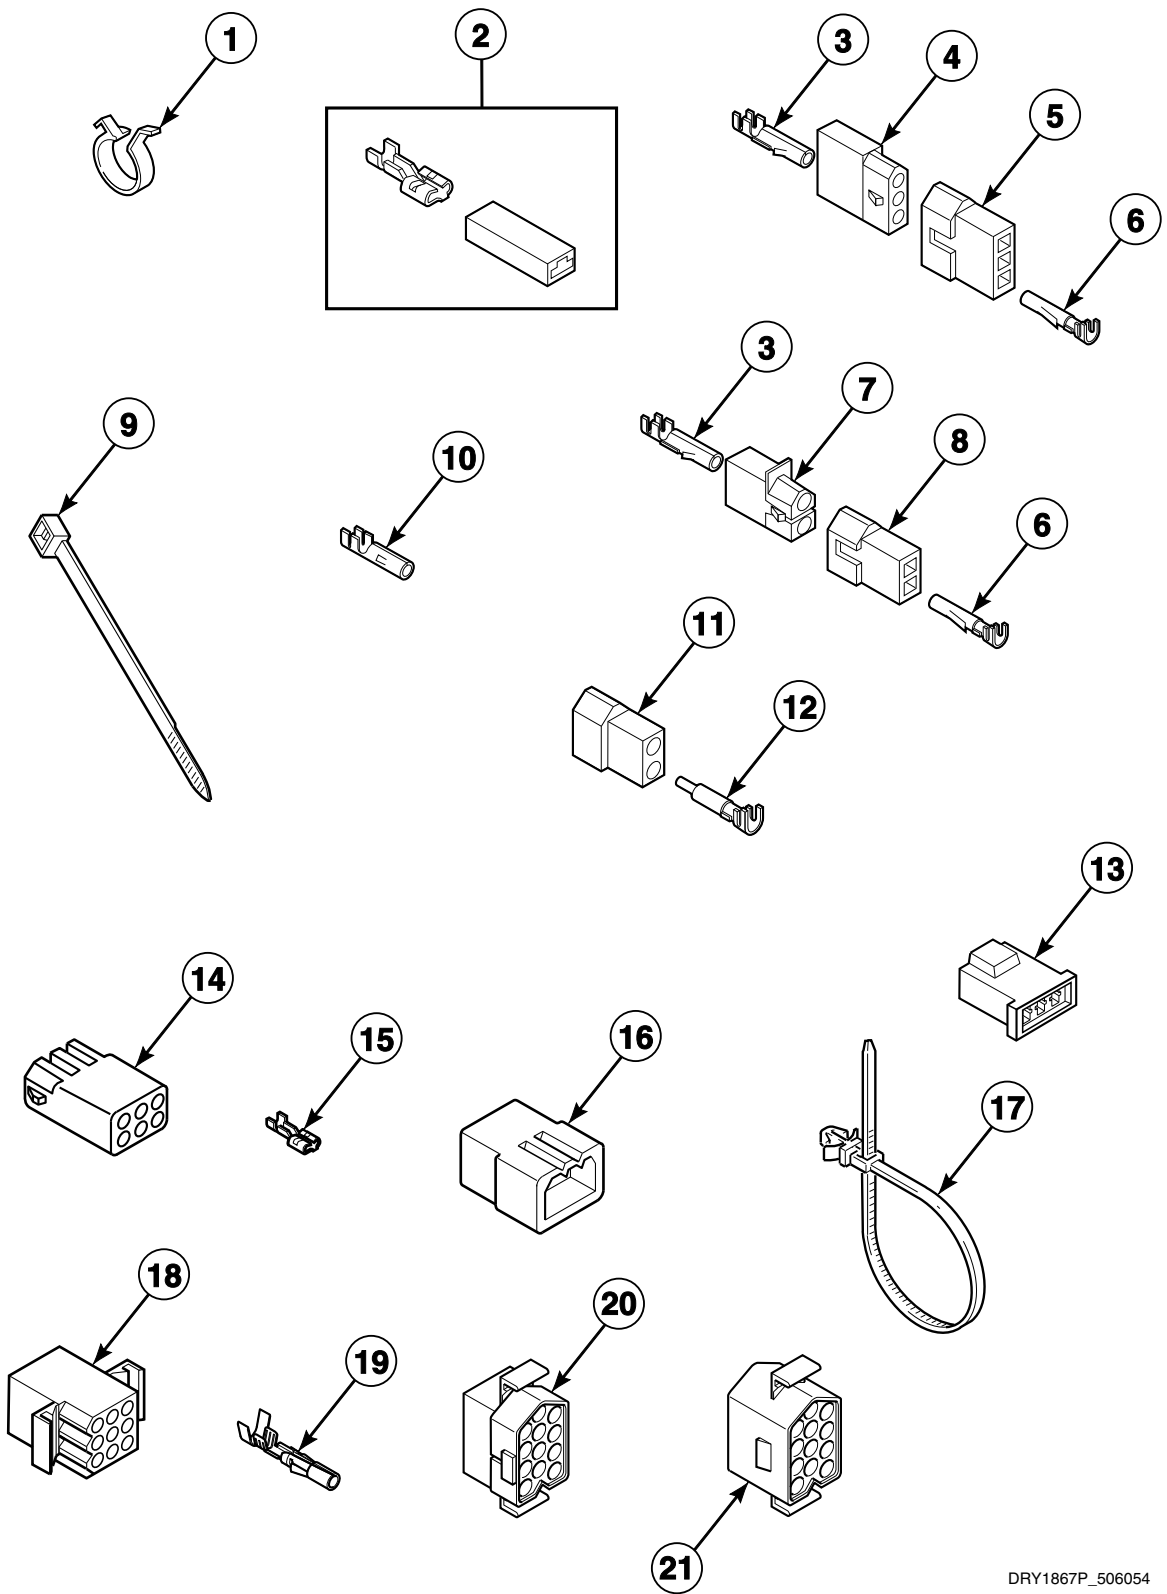


DRY1867P_506054

Terminal Block and Terminals

REF	PART NO.	DESCRIPTION	COMMENTS
1	504034	Wire Clip	11/16 inch
	687500	Wire Clip	1 inch
2	00360	Insulated Female Spade Terminal	(1) 12 gauge wire or (2) 18 gauge wires
3	00117	Female Pin Terminal	
4	23039	3 Circuit Receptacle	
5	23040	Plug	
6	00116	Male Pin Terminal	
7	56451	2 Circuit Receptacle	
8	56448	2 Circuit Plug	
9	55881	Harness Strap	
10	00130	Female Pin Terminal	1/8 inch
11	56266	2 Circuit Plug	
12	00127	Male Pin Terminal	1/8 inch
13	58800	3 Circuit Connector	
14	26708	6 Circuit Receptacle	
15	00222	Female Spade Terminal	1/4 inch
16	23033	9 Circuit Plug	
17	38663	Wire Tie	
18	26163	9 Circuit Receptacle	
19	00128	Female Pin Terminal	1/8 inch
	00129	Male Pin Terminal	1/8 inch
20	54522	Plug	
21	56855	12 Circuit Receptacle	

Terminals

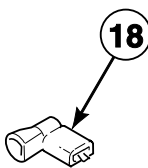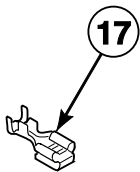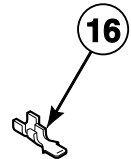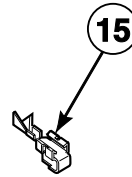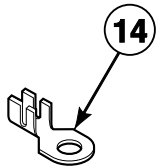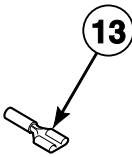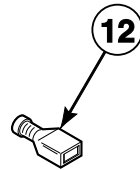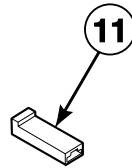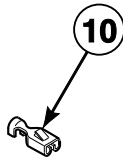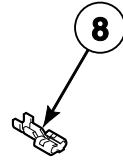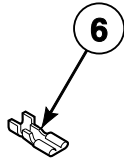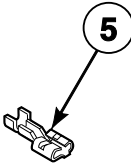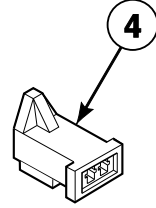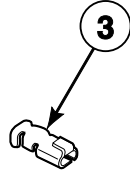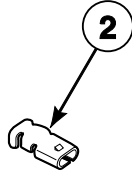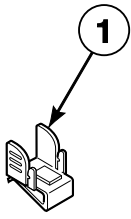


D322P_506054

Terminals

REF	PART NO.	DESCRIPTION	COMMENTS
1	00161	Grounding Clip	
2	00189	Female Spade Terminal	
3	00361	Female Piggyback Terminal	Receptacle connector
4	58799	2 Circuit Connector	
5	00223	Female Spade Terminal	1/4 inch; (1) 18 gauge wire
	00121	Female Spade Terminal	1/4 inch; (2) 18 gauge wires or (1) 12 gauge wire
	00245	Spade Terminal	1/4 inch; (1) 22 gauge wire
6	00124	Female Spade Terminal	3/16 inch; (1) 18 gauge wire; .020 tab
	00156	Female Spade Terminal	3/16 inch; Thermostat wire; .032 tab
	N/A	Female Spade Terminal	3/16 inch; (2) 18 gauge wires; .020 tab
7	38384	Strain Relief	
8	N/A	Terminal	
9	00347	Terminal	
10	00115	Female Spade Terminal	1/4 inch; (1) 18 gauge wire
	N/A	Female Spade Terminal	1/4 inch; (2) 18 gauge wires or (1) 12 gauge wire
11	90789	Receptacle Housing	
12	00359	Insulated Female Spade Terminal	1/4 inch
	00165	Insulated Female Terminal	3/16 inch
13	N/A	Pre-Insulated Spade Terminal	1/4 inch; 12 gauge and 18 gauge wire
14	00110	Ring Terminal	10 stud; (1) 18 gauge wire
	00111	Ring Terminal	10 stud; (2) 18 gauge wires or (1) 12 gauge wire
15	00114	Female Spade Terminal	1/4 inch; Double connector
16	00139	Male Tab Terminal	1/4 inch; (2) 18 gauge wires or (1) 12 gauge wire
17	00344	Female Tab Terminal	
18	N/A	Flag Insulated Terminal	

N/A = Part no longer available

Motor Connection Block, Terminal Extractor Tools

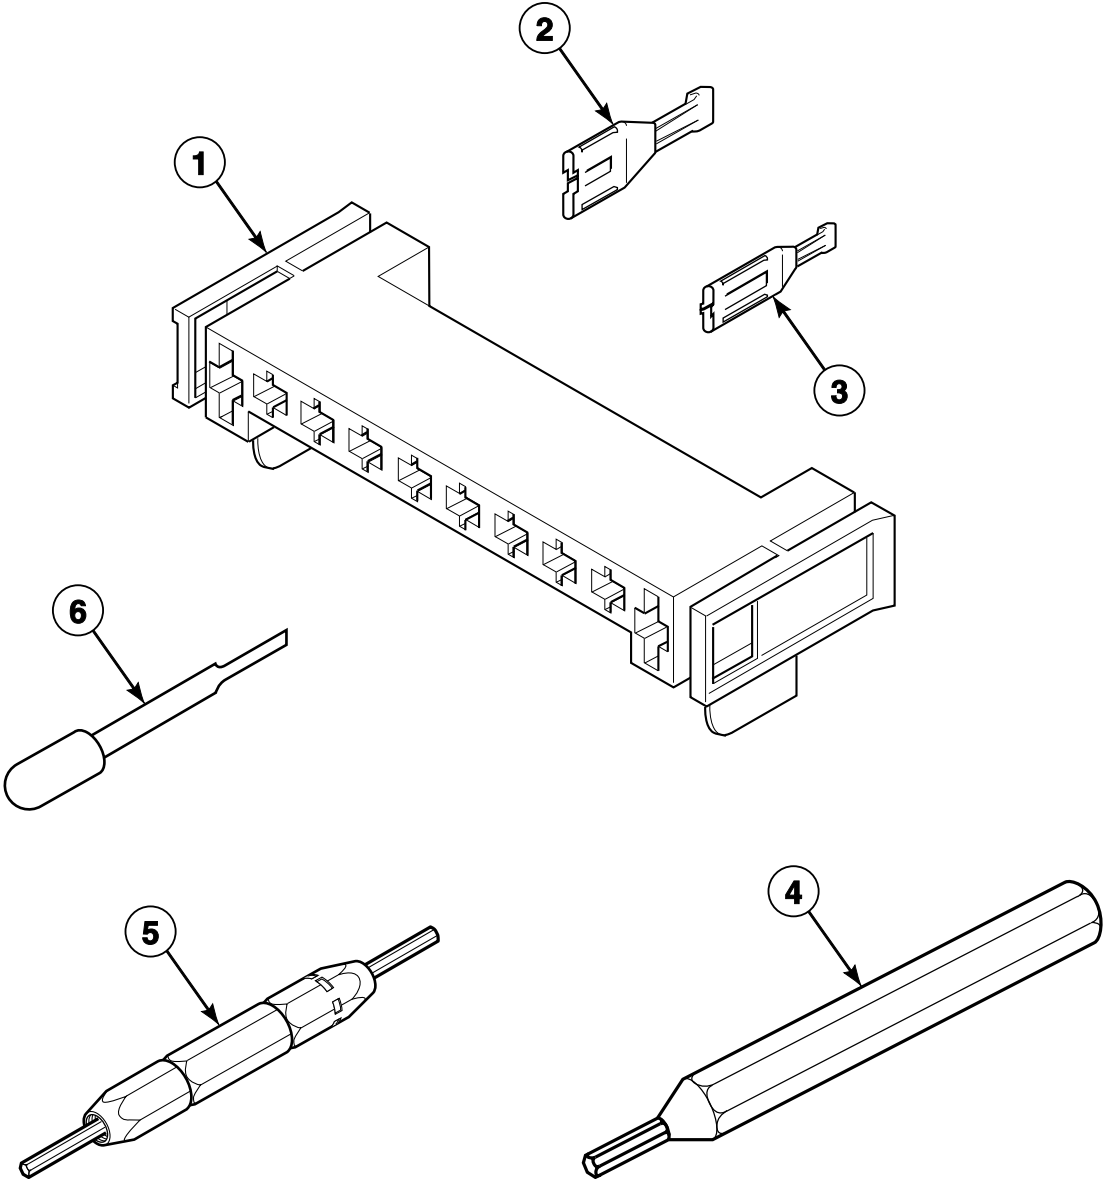


DRY1877P_506054

Motor Connection Block, Terminal Extractor Tools

REF	PART NO.	DESCRIPTION	COMMENTS
1	500338	10 Position Housing	
2	00255	Female Terminal	1/4 inch; For (1) 12 gauge wire
	00256	Female Terminal	1/4 inch; For (1) or (2) 18 gauge wires
3	00188	Female Terminal	For 1 or 2 wire application
4	128P4	Extractor Tool	For use on gas dryer terminals
5	190P4	Extractor Tool	For use on electric dryer terminals
6	283P4	Terminal Extractor Tool	For use on Molex connectors

Wire Harnesses and Wires - Front Control Models

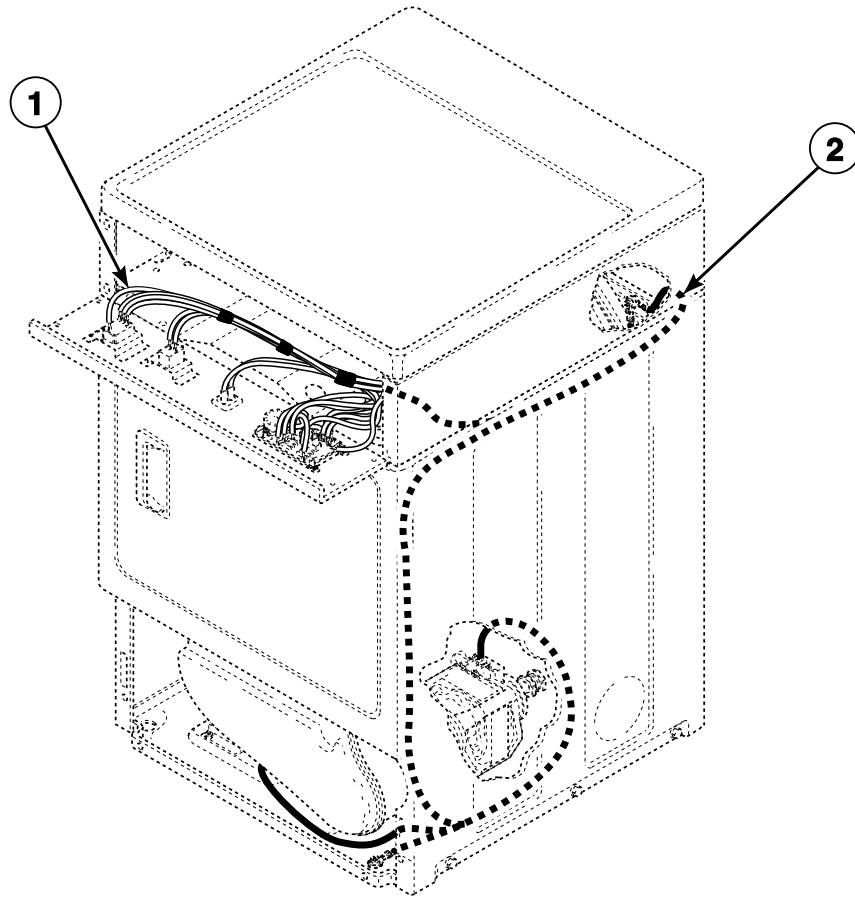

DRY2046P_506054


Wire Harnesses and Wires - Front Control Models

REF	PART NO.	DESCRIPTION	COMMENTS
	45380	12 Gauge Wire	Orange; Order wire by the foot; Order terminals and connectors as required
	45001	18 Gauge Wire	Black; Order wire by the foot; Order terminals and connectors as required
1	511323	Security Cabinet Harness Assembly	Models BDG30FGS111CW01 and FGZ17A*F1102
	511324P	Security Cabinet Harness	Models BDE30FGS171CW01, FEU17A*F1702 and FEZ17A*F1702
	511752P	Security Cabinet Harness Assembly	Models FEN17A*G3018, FES17A*F3300 and FES17A*F4350
	511767	Security Cabinet Harness Assembly	Models ADG3TFWS301AW01 and FGS17A*F3060
	511306P	Security Cabinet Harness Assembly	Models FEN16A*G4018, FEN17A*G4018, FES16A*G4018, FGN16A*M3013 and FGN17A*M3013
	511770	Security Cabinet Harness Assembly	Models ADE32FSS431AN01, ADE32FSS431NN22, ADE32FSS541RN01, ADE41FSS171TN03, ADG32FSS301AN01, CDE4BFGS171CW01, CEZ68A*F1702, ZDE41FSS171CN01 and ZDE4BFGS171CW01
	511771	Security Cabinet Harness Assembly	Models ADG32FSS301AN01, ADG41FSS111TN03, CDG4BFGS111CW01, CGZ68A*F1102, ZDG41FSS111CN01 and ZDG4BFGS111CW01
	513384	Security Cabinet Harness Assembly	Model ADE3TFWS431AW01
2	511304	Wire Harness Assembly	Models FEN16A*G4018, FEN17A*G4018 and FES16A*G4018
	511329	Wire Harness Assembly	Models BDG30FGS111CW01 and FGZ17A*F1102
	511330	Wire Harness Assembly	Models BDE30FGS171CW01, FEU17A*F1702 and FEZ17A*F1702
	511754	Wire Harness Assembly	Models ADE3TFWS431AW01, FEN17A*G3018, FES17A*F3300 and FES17A*F4350
	511779	Wire Harness Assembly	Models ADG3TFWS301AW01 and FGS17A*F3060
	511773P	Wire Harness Assembly	Models FGN16A*M3013 and FGN17A*M3013
	511768P	Wire Harness Assembly	Models ADE41FSS171TN03, CDE4BFGS171CW01, CEZ68A*F1702, ZDE41FSS171CN01 and ZDE4BFGS171CW01
	511769P	Wire Harness Assembly	Models ADG41FSS111TN03, CDG4BFGS111CW01, CGZ68A*F1102, ZDG41FSS111CN01 and ZDG4BFGS111CW01
	513451	Wire Harness Assembly	Model ADG32FSS301AN01
	513452	Wire Harness Assembly	Models ADE32FSS431AN01, ADE32FSS431NN22 and ADE32FSS541RN01

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

NOTE: Individual wires are not available separately. Order complete harness, or order wire by the foot. When applying terminals to wires, it is recommended that the terminals be soldered to the wires.

Wire Harnesses and Wires - Rear Control Models

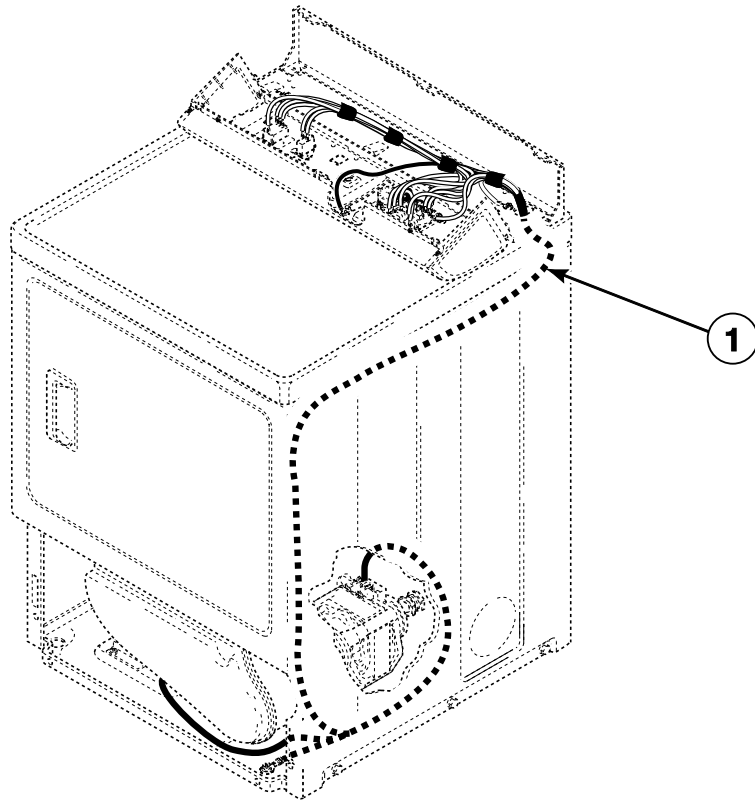

DRY2047P_506054

Wire Harnesses and Wires - Rear Control Models

REF	PART NO.	DESCRIPTION	COMMENTS
	45380	12 Gauge Wire	Orange; Order wire by the foot; Order terminals and connectors as required
	45477	12 Gauge Wire	Green/yellow stripe; Order wire by the foot; Order terminals and connectors as required
	45001	18 Gauge Wire	Black; Order wire by the foot; Order terminals and connectors as required
1	510420P	Wire Harness Assembly	Models ADE3TRWS431AW01, ADE3TRWS431NW22, LDE3TRWS331TW05, LEG37A*F4350, LEH37A*F3300, LEK37A*F4350, LES17A*F3000, LES17A*F3007, LES17A*F3022, LES17A*F4500, LES17A*M4588, LES37A*F3000, LES37A*F3028, LES37A*F3300, LES37A*F3327, LES37A*F4350, LES37A*F5412, LEZ37A*F3000 and MDE3TRWS331TW06
	510460	Wire Harness Assembly	Models LEN27A*G3008, LEN27A*G3018, LEN37A*G3018, LES27A*G3018, LES37A*G3018, LEZ27A*G3018, LEZ37A*G3018 and LEZ37A*G5618
	510444	Wire Harness Assembly	Models AEZ28A*F1702, AEZ68A*F1702, CDE3LRGS171CW01, LET57A*F1700, LET67A*F1700, LET68A*F1700, LEZ57A*F1702, LEZ67A*F1702, ZDE3LRGS171CW01 and ZDE4BRGS171CW01
	511301P	Wire Harness Assembly	Models LGN27A*M3008, LGN27A*M3013, LGN37A*M3013, LGS27A*M3013, LGS27A*M3080, LGS37A*F3028, LGS37A*M3013, LGS37A*M3080, LGZ27A*M3013 and LGZ37A*M3013
	N/A	Wire Harness Assembly	Models LEB07A*F1709, LEY47A*F1709, LGG37A*F3058, LGK37A*F3058, LGS17A*F3020, LGS17A*F3081, LGS17A*M3020, LGS17A*M3082, LGS37A*F3058, LGT57A*F1100, LGT68A*F1100, LGY47A*F1109, LGZ37A*G3013, LGZ57A*F1102 and LGZ67A*F1102
	510425P	Wire Harness Assembly	Models AGZ17A*F1102, LGS17A*K1180 and ZDG30RGS111CW01
	510423	Wire Harness Assembly	Models LGH37A*F5423, LGS37A*F3000, LGS37A*F3022, LGS37A*F3080, LGS37A*F5412, LGS37A*F5423 and LGZ37A*F3000
	510403	Wire Harness Assembly	Models LDG3TRWS111TW05, LGH37A*F1182, LGZ27A*F1102, LGZ37A*F1102 and MDG3TRWS111TW06
	510402P	Wire Harness Assembly	Models AEZ17A*F1702, LED17A*F1700, LEZ27A*F1702, LEZ37A*F1702 and ZDE30RGS171CW01
	510478	Wire Harness Assembly	Models FDE3TRGS401NW22, LEN27A*G4008, LEN27A*G4018, LEN27A*G99M3, LEN37A*G4018, LES27A*G4000, LES27A*G4018, LES37A*G4018, LEZ27A*G4018 and LEZ37A*G4018
	511342	Wire Harness Assembly	Model LES28A*G4018
	511785	Wire Harness Assembly	Models LGS38A*M3013, LGS38A*M3020 and LGS40A*M3020
	511777	Wire Harness Assembly	Models AGZ28A*F1102, CDG3LRGS111CW01 and ZDG3LRGS111CW01
	510443P	Wire Harness Assembly	Models AGZ68A*F1102 and ZDG4BRGS111CW01
	511335	Wire Harness Assembly	Models ADG3TRWS301AW01, LGK37A*F3060 and LGS37A*F3060

* Add Letter To Designate Color. G - Gray L - Almond Q - Bisque W - White

N/A = Part no longer available

NOTE: Individual wires are not available separately. Order complete harness, or order wire by the foot. When applying terminals to wires, it is recommended that the terminals be soldered to the wires.

[illegible]

Parts Index

A

Access Panel	
510069GP	23
510069LP	23
510069QP	23
510069WP	23
512543	23
Access Panel Plate	
510903	57
Adhesive	
511637P	31, 33, 37, 41
Adjustable Buzzer	
504103	9, 15
505447	9
Air Duct Assembly	
510151	31, 33
512945	33
Anti-Seize Compound	
27604P	25, 27

B

Badge	
803013	15
803101	15
Block to Relay Harness	
511112P	47
Blower and Fan Kit	
510717P	25
Blower Fan Assembly	
510139P	27
Blower Housing and Cover Kit	
511969P	27
Blower Housing Seal	
510238P	27
Bolt	
29651	11, 13, 15
Booster and Holding Coil	
58804A	51
59063A	51
Bracket	
510146	17
Bulkhead Assembly	
505899WP	33
Bumper Pad	
56128	57
Burner Assembly	
510149P	51, 55
Buzzer	
510211	9, 13, 15

C

Cabinet Rear Panel	
510005P	57
Cabinet Side Panel	
510001GP	57

510001LP	57
510001QP	57
510001WP	57
510002GP	57
510002LP	57
510002QP	57
510002WP	57
512951	57
512952	57
Caution Label	
500253	23
Clean Lint Label	
502804	23
Combustion Duct	
510131	49
510132	49
Connector, 2 Circuit	
58799	65
Connector, 3 Circuit	
58800	63
Contacto	
F330177P	47
Contacto Bracket	
511859	57
Control Cabinet	
513701G	15
513702G	15
803141	15
803142	15
Control Cabinet Bottom	
801777	11, 13, 15
Control Knob Assembly	
803099P	15
803119	7, 13
Control Panel Assembly	
511421W	11
512067W	13
513161	15
Control Support Panel	
503901	7
Conversion Kit	
756P3	47
Cylinder Assembly	
505929P	35
510159WP	35
510265P	35
512940P	35
Cylinder Baffle	
510102	35
512941	35
Cylinder Belt	
511255P	27
Cylinder Glide	
510187	31, 33
Cylinder Glide Bracket	
510145	31, 33
Cylinder Light Assembly	
512109	33
Cylinder Light Lens	
512106	33
Cylinder Roller	
510708P	37, 41

N/A items do not appear in index.

Cylinder Roller Bracket	
510100	37, 41
Cylinder Seal Assembly	
510207P	31, 33, 37, 41

D

Din Rail	
M412693	47
Directional Exhaust Kit	
528P3	57
Disconnect Power Warning Label	
505281	11, 17
Domed Label	
202128	11
800921	11
800922	11
800923	11
Door Catch Assembly	
510177	23
Door Handle	
803095	19
Door Handle Wedge	
510129	21
Door Pull and Wedge Kit	
510103LP	21
510103QP	21
510103WP	21
511213P	21
Door Strike	
510181	19, 21
Door Strike Mount	
510127	19, 21
Drum Light Lamp	
503579	33
Drum Light Lens	
503623	33
Dryer Base	
510084	57
Dryer Door	
510013GP	21
510013LP	21
510013QP	21
510013WP	21
513156	19
Drying Rack	
512082P	35

E

Elbow	
513072	51
Elbow Shut-Off Valve	
510205	51, 55
Electric Clearance Label	
511005	57
Electrical Shock Label	
502511	11
End Panel	
504006P	7
504007P	7
504008L	7

504008QP	7
504008WP	7
504009QP	7
504009WP	7
End Stop	
70121001	47
Exhaust Duct	
510137	57
Expansion Clip	
70030501	11, 13, 15
Extractor Tool	
128P4	67
190P4	67

F

Fabric Selector Switch	
513504	9
513505	9, 11, 13
513506	9, 15
Felt Pad	
510189	31, 33
Female Piggyback Terminal	
00361	65
Female Pin Terminal	
00117	63
00128	63
00130	63
Female Spade Terminal	
00114	65
00115	65
00121	65
00124	65
00156	65
00189	65
00222	63
00223	65
Female Tab Terminal	
00344	65
Female Terminal	
00188	67
00255	67
00256	67
Flexible Venting Kit	
521P3	57
Front Bulkhead Assembly	
510266P	31
511033WP	31
512476	33
Front Panel	
510066GP	23
510066LP	23
510066QP	23
510066WP	23
512542	23
512966	23
Front Panel Seal	
511056	23
Fuse	
502592	17
502593	17
Fuse Carrier	
502811	17

N/A items do not appear in index.

Fuse Holder Bracket	
502589	17
Fuse Holder Kit	
502591P	17

G

Gas Clearance Label	
511004	57
Gas Valve Assembly	
502423P	55
510506P	51
59063P	51
60353P	51
Gas Valve Mounting Bracket	
510128	51, 55
Glide Kit	
RB170003	31, 33
Graphic Overlay	
511406	11
511656	11
511913	13
512751	13
513019	13
513245	13
Graphic Panel	
503394	5
504020W	5
504070W	5
504072QP	5
504072WP	5
504107W	5
504197Q	5
504197W	5
505157WP	5
505850	5
505911	5
505912	5
505913	5
511437	5
511639	5
511882	5
511902W	5
511914W	5
512166W	5
512167W	5
512168W	5
512370	5
512622W	5
512752W	5
513016W	5
513017W	5
513018W	5
513244W	5
513523W	5
Grounding Clip	
00161	65

H

Handle Cover	
803094P	19
Harness Strap	
55881	63

Heat Duct Shroud	
510101	49
Heater	
511014P	47
Heater Assembly	
510324P	43
510326P	43
510327P	43
510328P	43
510329P	43
511503P	43
Heater Duct and Screw Assembly	
510025P	43, 47, 49
Heater Kit	
964P3	45
966P3	45
Heater Kit Assembly	
61927	45
61929	45
61930	45
61931	45
Hinge	
511036	11, 13, 15, 19, 21
Hinge Hole Plug	
510186	23
Hold Down Kit	
526P3	57
Hold-Down Clip	
35358	17
Hood Back Panel	
510099	17
Housing, 10 Position	
500338	67

I

Idler Lever	
510133	27
Idler Lever and Wheel Assembly	
510158	27
Idler Spring	
510185	27
Idler Wheel and Bearing Assembly	
510142P	27
Igniter and Bracket Assembly	
510184P	51
Igniter and Sensor Assembly	
502995P	55
Igniter Control	
502994P	55
Ignition Control Bracket	
502425	55
Insulated Female Spade Terminal	
00359	65
00360	63
Insulated Female Terminal	
00165	65

J

Jumper Wire Assembly	
511270	47

N/A items do not appear in index.

K

Knob Assembly	
36701L	7, 11
36701Q	7, 11, 13
36701W	7, 11, 13
511439	7
803168P	7

L

Lead-In Cord	
512019	59
513632	59
56222	59
59373	59
Lead-In Cord Assembly	
503597	59
506106	59
510505P	59
Lead-In Cord Kit	
61605P	59
Lead-In Pipe Assembly	
510204	51, 55
Left Control Cabinet Side	
800900LP	11
800900QP	11, 13
800900WP	11, 13
Leveling Leg	
510135	57
Light Housing Assembly	
512108	33
Limit Thermostat	
510700	43
510701	43, 47
510702	49
Liner Door Seal	
510147P	19, 21
Liner, Seal and Grill Assembly	
510163WP	21
513109P	19
Lint Filter	
503980	31, 33
512946	33
Lint Filter Cover	
510502	31, 33
Lint Filter Label	
502781	23
L.P. Conversion Kit	
401P3	53, 55
599P3	53, 55
649P3	53

M

Male Pin Terminal	
00116	63
00127	63
00129	63
Male Tab Terminal	
00139	65

Manual Reset Thermostat	
M411941	29
Motor and Pulley Assembly	
505843P	25
505869P	25
511629P	25
Motor Hub Ring Kit	
590P3	25
Motor Mount	
510060	27
Motor Mount Clamp	
510180	27
Motor Pulley	
500011	25
500222	25

N

Nut	
29796	13
36020	15
44087201	11, 15
52566	27
56156	27, 37, 41
N.G. Conversion Kit	
402P3	53, 55
650P3	53

O

Outlet Cover	
500820	43, 47, 49

P

Panel	
513093	15
513112	15
513443	15
Panel Locator	
56079	23, 57
Pinched Fingers Label	
502506	31
Plug	
23040	63
54522	63
Plug, 2 Circuit	
56266	63
56448	63
Plug, 9 Circuit	
23033	63
Pop Rivet	
685847	15
Porcelain Touch-Up Paint	
122P4P	57
215P4P	57
370P4P	57
Power Cord Assembly	
505945	59
506081	59

N/A items do not appear in index.

R

Rear Bulkhead Assembly	
505246	37, 41
510905WP	37, 41
511082P	37, 41
Rear Control Cabinet	
801058	11, 13, 15
Receptacle Housing	
90789	65
Receptacle, 12 Circuit	
56855	63
Receptacle, 2 Circuit	
56451	63
Receptacle, 3 Circuit	
23039	63
Receptacle, 6 Circuit	
26708	63
Receptacle, 9 Circuit	
26163	63
Relay	
502501	17
Relay to Heater Harness	
511114P	47
Resistor Assembly	
511277	11, 13, 15
Retaining Ring	
23748	27, 37, 41
Right Control Cabinet Side	
800915L	11
800915Q	11, 13
800915W	11, 13
Ring Terminal	
00110	65
00111	65
Rocker Switch	
38424L	7
38424Q	7, 13
38424W	7, 13
Roller Kit	
RB170002	37, 41
Rubber Foot	
501855	57

S

Screw	
F430956	15
M405188	15
20530	61
23008	15
23222	43, 47, 51
31260	27
33562	23
39733	23, 57
500227	33
500824	27
501086	7, 9, 13, 15, 17, 33
501285	31, 33, 39, 41
502535	29, 55
503661	41
503688	11, 15, 17, 23, 27, 31, 33, 37, 39, 41, 43, 47, 49, 51, 55, 57

505295	19, 21, 31, 33
512921	57
513071	61
51782	49, 51, 55
52864	31
56124	51, 55
61199	39
62588	35
70240301	11, 13, 15
800548	19
800930	11, 13
Seal Kit	
RB170001	31, 33, 37, 41
Secondary Coil	
58804B	51
59063B	51
Security Cabinet Harness	
511324P	69
Security Cabinet Harness Assembly	
511306P	69
511323	69
511752P	69
511767	69
511770	69
511771	69
513384	69
Selector Switch	
803568	15
Sensor	
510213	51
Shaft	
56461P	27, 37, 41
Spade Terminal	
00245	65
Speed Clip	
28835	23
Stainless Steel Top	
511631P	11
Strain Relief	
38384	61, 65
502500	61
52113	61
60298	61
Strain Relief Adapter	
502496	61
Switch	
512973	23

T

Terminal	
00347	65
Terminal Block Assembly	
505876	41
510190P	39
Terminal Block Shield	
505768	39, 41
510237	39
Terminal Block Support Bracket	
505875	41
Terminal Extractor Tool	
283P4	67
Thermal Fuse Assembly	
511412	43, 47

N/A items do not appear in index.

Thermostat	
504515	29
504519	29
504520	29
504521	29
510703	49
510707P	29
511957	29
Timer	
502964P	9, 11, 13
502966P	9
505794P	9, 11
505795P	9, 11, 15
505796P	9, 11, 15
511149P	9, 13, 15
511150P	9, 13, 15
Timer and Harness Kit	
505797P	9, 11
Timer Knob Assembly	
512117Q	7, 11, 13
512117W	7, 11, 13
512118	7
803098P	15
803118P	13
Top and Gusset Assembly	
802247LP	11
802247QP	11, 13
802247WP	11, 13
Top Cover	
505808G	7
505808Q	7
505808W	7
Top Hinge	
510136	57
Top Kit	
803144P	15
Top Mounting Bracket	
504228	11, 13, 15
Top Panel	
510029G	17
Top Panel Kit	
510029LP	17
510029WP	17
Transformer Kit	
511658P	17, 57

W

Warning Label	
500314	31, 33
505809	23
512263	23
803260	57
Warning/Caution Label	
500281	23
Washer	
504082	37, 41
52549	27, 37, 41
Wire Assembly	
510527	43
510528	43
511148	7
513170P	15
Wire Clip	
504034	63

N/A items do not appear in index.

687500	63
Wire Harness Assembly	
510402P	71
510403	71
510420P	71
510423	71
510425P	71
510443P	71
510444	71
510460	71
510478	71
511301P	71
511303	17, 57
511304	69
511329	69
511330	69
511335	71
511342	71
511754	69
511768P	69
511769P	69
511773P	69
511777	71
511779	69
511785	71
513451	69
513452	69
Wire Tie	
38663	63
Wire, 12 Gauge	
45380	69, 71
45477	71
Wire, 18 Gauge	
45001	69, 71